ATyS DT

Delayed transition
UL 1008 Transfer switching equipement











EN CONTENT

1.	GENERAL SAFETY INSTRUCTIONS	4
2.	INTRODUCTION	5
3.	QUICK START	6
4.	GENERAL OVERVIEW	14
	4.1. ATyS DT (delayed transition) switching mechanism	15
	4.2. ATyS C66 ATS Controller	16
	4.3. ATyS DT Cable Harness	17
	4.3.1. Without Transformer connection points	17
	4.3.2. With Transformer connection points	18
	4.4. Optional accessories	19
	4.4.1. Digiware connected devices	20
	4.4.2. Auxiliary DC power supply:	21
	4.4.3. Lugs	21
	4.5. Reference configurator:	
	4.6. Environmental	
	4.6.1. Operating Conditions	22
	4.6.1.1. Temperature	
	4.6.1.2. Hygrometry	22
	4.6.1.3. Resistance to impacts	
	4.6.1.4. Altitude	22
	4.6.2. Storage	22
	4.6.3. ATyS DT Volume and shipping weight by reference:	23
	4.6.4. Marking	23
5.	PRODUCT DIMENSIONS	24
6.	MOUNTING INSTRUCTIONS	26
	6.1. Installation	26
	6.2. Mounting the switching mechanism	27
	6.3. Mounting the C66 controller	28
	6.3.1. Door Mounting	28
	6.3.2. Backplate mounting	29
	6.4. Mounting the ATyS DT cable harness	30
	6.4.1. Fixing the faston connectors	30
	6.4.2. Switch side connectors	32
	6.4.3. Controller side connectors	33
	6.4.3.1. Connectors with harness	33
	6.4.3.2. User available connectors	34
	6.4.4. Cable management & enclosure integration	34
	6.4.4.1. Switch side cable management	34
	6.4.4.2. Controller side cable management	
	6.4.4.3. Enclosure cable management	
	6.5. Mounting optional accessories	
	6.5.1. Terminal shrouds	38
	6.5.2. Lugs	39
	6.5.3. Extra auxiliary contact and cover	40
	6.5.4. I/O 10	42

7.	CONFIGURATION	.45
8.	MAINTENANCE	.48
	8.1. Mechanical manual operations for maintenance purposes	.48
	8.2. Electrical manual operation	.51
	8.3. LOAD TEST and NO LOAD TEST	.51
	8.4. Clearing faults	.51
	8.5. Recommendations for maintenance	.52
9.	TROUBLE SHOOTING	.53
ΑI	NNEX I. SINGLE LINE DIAGRAMS	.54

1. GENERAL SAFETY INSTRUCTIONS

- This manual provides instructions on safety, connections and operation of the automatic transfer switching equipment ATYS DT manufactured by SOCOMEC.
- Whether the ATYS is sold as a loose product, as a spare, as an enclosed solution or as any other configuration, this
 device must always be installed and commissioned by qualified and experienced personnel, in line with the manufacturers
 recommendations, following good engineering practices and after having read and understood the details in the latest
 release of the relative product instruction manual.
- Maintenance on the product and any other associated equipment including but not limited to servicing operations must be performed by adequately trained and qualified personnel.
- Each product is shipped with a label or other form of marking including rating and other important specific product information. One must also refer and respect markings on the product prior to installation and commissioning for values and limits specific to that product.
- Using the product outside the intended scope, outside SOCOMEC recommendations or outside the specified ratings and limits can cause personal injury, death and/or damage to equipment.
- This instruction manual must be made accessible to be easily available to anyone who may need to read it in relation to the use, installation or maintenance of the ATYS.
- The ATYS meets the requirement for the harmonized ANCE, CSA and UL standards for transfer switching equipment; the product includes the labels and marking with details on each standard.
- No covers on the ATYS should be opened (with or without voltage) as there may still be dangerous voltages inside the
 product such as those from external circuits.
- Do not handle any control or power cables connected to the ATYS when voltages may be present on the product directly through the mains or indirectly through external circuits.
- Voltages associated with this product may cause injury, electric shock, burns or death. Prior to carrying out any
 maintenance or other intervention on live parts or any other parts in the vicinity of the exposed live parts, ensure that the
 switch including all control and associated circuits are de-energized



The ATYS DT complies with the following international standards:

- UL 1008 - Emergency Systems

Refer to the specific references numbers on this document to order the correct UL 1008 products and associated accessories.

The information provided in this instruction manual is subject to change without notice, remains for general information only and is non-contractual.




WARNING! This product can expose you to chemicals including bisphenol A, which is known to the State of California to cause birth defects. For more information go to: www.P65Warnings.ca.gov

EN

2. INTRODUCTION

ATYS DT (Delayed transition) are open type, automatic transfer switches with center off position listed to UL 1008 for standby, legally required and emergency systems. They are designed specifically for use in low voltage power applications for the safe transfer of a load supply between a normal and an alternate source.

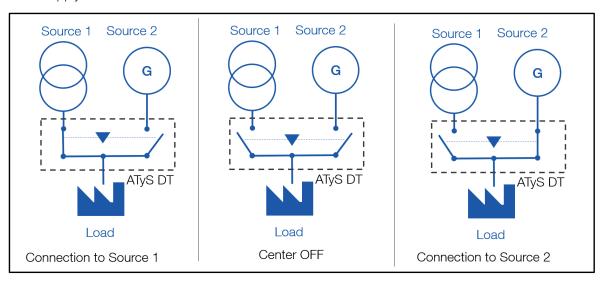

These automatic transfer switches are designed to meet NFPA 110 requirements for NFPA 110 for Emergency and Standby Power systems and the National Electrical Code (NEC) Articles 700, 701 and 702.

ATyS transfer switching equipment ensures:

- A safe transfer between a normal and alternate source
- A complete product and tested solution
- Intuitive and simple for local operation
- Inherent failsafe mechanical interlocks
- Quick easy and safe "off load" manual operation
- A mechanical inhibit of the motor/coils when the product is in manual operation
- Auxiliary contacts to indicate if the product is not in AUTO Mode (Manual Mode)
- Straightforward installation with effective ergonomics
- Simple and secure control interface
- Easy mounting and smart configuration
- Accessories to suit specific requirements
- Integrated and fully rated solid neutral within the 4th pole
- Suitable for up to NEMA 3R, 12 protection degree (once mounted)

Glossary:

ATS: Automatic Transfer Switch

FT: Fast Transfer DT: Delayed Transition

SCPD: Short Circuit Protection Device

CT: Curent Transformer VT: Voltage Transformer

GND: Ground I/O: Inputs/Outputs RTC: Real Time Clock ECS: Easy Config System CTT: Contact transfer time

Center OFF: Load is disconnected from source 1 & source 2

S1: Source 1 S2: Source 2

≯socomec





100 A, 200 A, 260 A, 400 A

Preliminary operations

Check the following upon delivery and after removal of the packaging:
• Packaging and contents are in good condition.

- The product reference corresponds to the order.

· Contents should include: Qty 1 x ATyS DT Qty 1 x C66 Controller Qty 1 x Harness

Warning

A Risk of electrocution, burns or injury to persons and / or damage to equipment.

This Quick Start is intended for personnel trained in the installation and commissioning of this product. For further details refer to the product instruction manual available on the SOCOMEC website.

- This product must always be installed and commissioned by qualified and approved personnel.
- Maintenance and servicing operations should be performed by trained and authorized personnel.
- Do not handle any control or power cables connected to the product when voltage may be, or may become present on the product, directly through the mains or indirectly through external circuits.
- Always use an appropriate voltage detection device to confirm the absence of voltage.

 Ensure that no metal objects are allowed to fall in
- the cabinet (risk of electrical arcing).

Failure to observe good engineering practices as well as to follow these safety instructions may expose the user and others to serious injury or death.

Risk of damaging the device In case the product is dropped or damaged in any way it is recommended to replace the complete product. Installation standards must be respected.

Accessories

Accessories are not included and must be ordered seperatly

- Terminal shrouds (see step 6A).
 Additional aux contacts (ref. 96990021).
- Digiware I/O 10 (ref. 48290140).
 Transformer 480 240 VAC (SPARTAN SP350MQMJ).
 Controller 24 VDC aux power supply (6W minimum type SELV) mandatory with I/O 10 Modules.

- Power terminal lugs (see step 1D)

For further details refer to the product instruction manual under chapter "Spares and Accessories"

Spares


- ATyS C66 Controller (ref. 16000066).
 UL 1008 ATyS DT (ref. 980XXXXX).
 Connector kit (ref. 16090002).
 Controller Nema 3R gasket (ref. 16090001).
- Controller mounting screws (ref. 16090004).
 Controller mounting feet (ref. 16090005).
- Cable harness without transfomer (ref. 98974000).
 Cable harness with transfomer (ref. 98974000).





CORPORATE HQ CONTACT: SOCOMEC SAS, 1-4 RUE DE WESTHOUSE, 67235 BENFELD, FRANCE www.socomec.com

To download, brochures, catalogues and technical manuals: www.socomec.us/resources/


QUICK START GUIDE EN

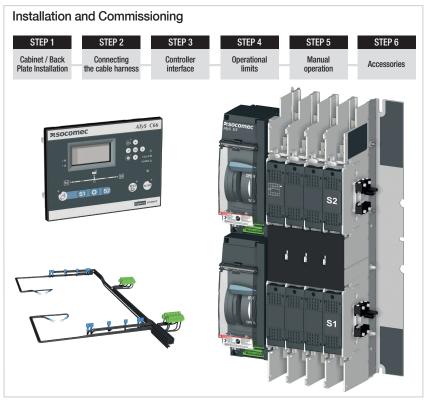


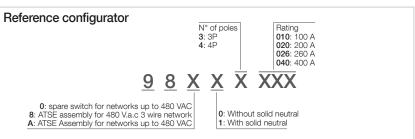

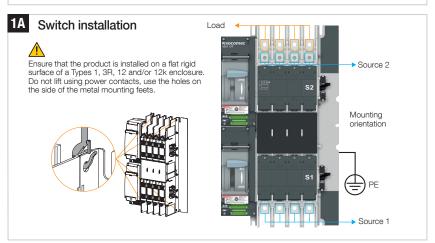

Non contractual document, Subject to change without notice

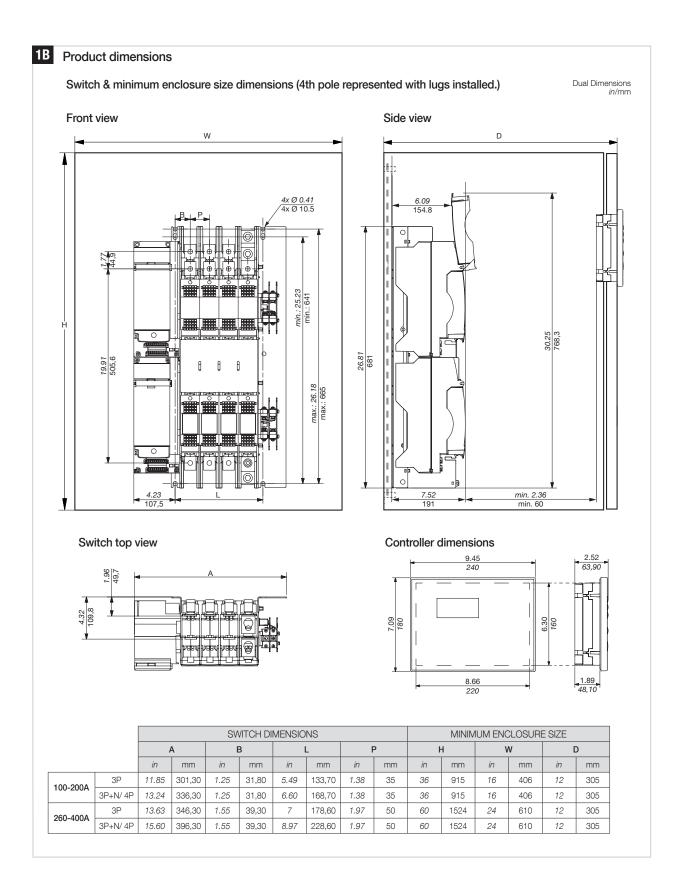

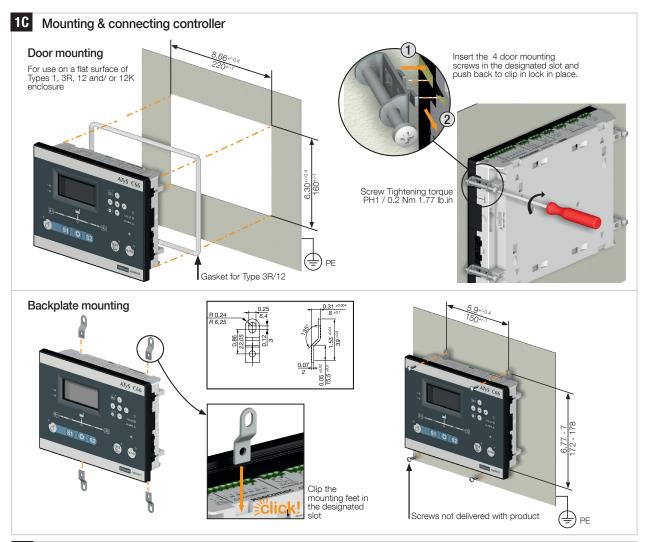

1D Installing terminal lugs (optional accessory)

Use terminal screws and washers supplied with the ATSE

Product Rating (A)	Designation	Ref. lugs	Quantity per	Openings per lug		/ Section (AWG)	Pr	essure torq		ew	E	Bolt t	orqu	ie	2	-
nating (A)			reference	periug	min.	max.	lb.in	Nm	Siz	ze in	lb.in	Nm		Size	in	mm
100A	llsco D0957	Contac	et us	1	14	1/0	50	5,65	0	8	70.8	8	0	5mm	0.625	15,9
200A	llsco D2831	Contac	et us	1	6	250 KCMIL	275	31,1	0	5/16	70.8	8	0	5mm	1	25,4
100-200 A	CMC LA-300R	39542020 39543020 39544020	2 3 4	1	6	300 KCMIL	275	31,1	0	5/16	70.8	8	0	5mm	1.12	28,
260-400 A	CMC LA-630R	39542040 39543040 39544040	2 3 4	1	4	600 KCMIL	550	62,1	0	1/2	310	35	0	8mm	1.79	45,
260-400 A	Ilsco D3096	Contac	t us	1	4	600 KCMIL	600	67,8	0	1/2	310	35	0	8mm	1.79	45,


Mount the load terminal lugs on the switch terminals before mounting source 2 terminal lugs.

2A Mounting & connecting the cable harness

For details on the cable harness wiring diagram and integration see Cable harness Quickstart guide ref 551401. Cable harness without transformer (ref. 98964000) delivered with 98AX XXXX products. Cable harness for connections with transformer (ref. 98974000) delivered with 988X XXXX products. Note: transformers not delivered with the product.

2B Mounting the cable harness on the Switch

SWITCH	TYPE	TERMINAL N°	DESCRIPTION	CHARACTERISTICS	RECOMENDED CROSS SECTION	
	Switch Power input	1101-1102	Order switch to position S1	194-304 VAC8A for at least		
	Switch Fower input	1201-1202	Order switch to OPEN Switch S1	100ms 50/60Hz		
S1		1333-1334	Contact closed if cover of switch S1 is closed	internal use for C66 controller	17-14 AWG	
	Switch Signalization output	1313-1314	Contact closed if the switch is in position S1			
		1323-1324	Contact closed if the switch S1 is OPEN			
	O tiels Berne in a	2101-2102	Order switch to OPEN S2	194-304 VAC8A for at least	1-2.5 mm ²	
	Switch Power input	2201-2202	Order switch to position S2	100ms 50/60Hz		
S2		2333-2334	Contact closed if cover of switch S2 is closed			
	Switch Signalization output	2313-2314	Contact closed if the switch S2 is OPEN	internal use for ATyS C66 controller		
		2323-2324	Contact closed if the switch is in position S2	3011101101		

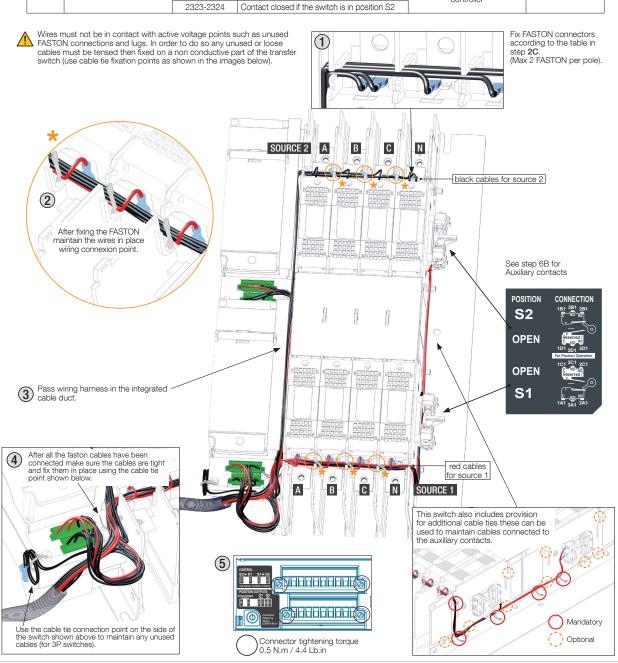

2C Connection of harness on the switch


Connect the faston on the switch connexion according to your network and the table below:

											480	VAC	240	VAC
NETWORK	TYPE	SOURCE	RTS	E FASTON	CONNECTIC	NS	AU	XILIARY	CONTA	CT	PRIM	1ARY	SECON	NDARY
TYPE		0001102	А	В	С	N	1C1	3C1	1D1	3D1	H1	H4	X1	X4
120/208 VAC	3P+N / 4P	S2	S2A & 2201	S2B	S2C	S2N			1D1	3D1				
120/200 VAC	3P+IN / 4P	S1	S1A & 1102	S1B	S1C	S1N	1C1	3C1						
208 VAC	3P	S2	S2A & 2201	S2B	S2C	_ (1)			1D1	3D1				
200 VAC	JF.	S1	S1A & 1102	S1B	S1C	_ (1)	1C1	3C1						
277/480 VAC	3P+N / 4P	S2	S2A	S2B	S2C	S2N & 2201			1D1	3D1				
211/400 VAC	3P+N / 4P	S1	S1A	S1B	S1C	S1N & 1102	1C1	3C1						
480 VAC	3P	S2	2xS2A	2xS2B	S2C	-			1D1	3D1	T2A	T2B	T2A'	T2B'
+ Transformer	JF	S1	2xS1A	2xS1B	S1C	-	1C1	3C1			T1A	T1B	T1A'	T1B'


VOLTAGE TRANSFORMER

2D Controller connection details

Wiring harness connectors to place on controller.

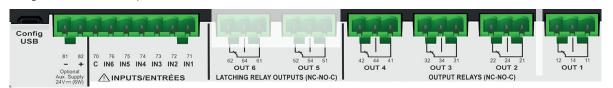

Top view

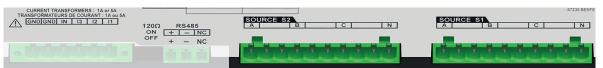


Bottom view


TYPE	TERMINAL N°	DESCRIPTION	CHARACTERISTICS	RECOMENDED CROSS SECTION	TIGHTENING TORQUE
Sensing source 1	SOURCE 1 Voltage sensing inputs source 1 Sensing voltage L1/L2/L3/N & voltage supply (L1-L2) 50 - 575 Va.c.P.P - 50/60 Hz (+/- 10%		50 - 575 V.a.c P-P - 50/60 Hz (+/- 10%)	AWG 18-14	
Sensing source 2	SOURCE 2 L1/L2/L3/N	Voltage sensing inputs source 2 & voltage supply (L1-L2)	Supply voltage (L1-L2) 88 - 576 V.a.c - 50/60Hz (+/- 10%) Ui 600V	0.75-2.5mm ²	
	71	IN1: reserved (SWITCH IN POS1)			
	72	IN2: reserved (SWITCH IN POS2)			
	73	IN3: reserved (SWITCH S1 IN POS0)			
Inputs	74	IN4: reserved (SWITCH S2 IN POS0)	Do not connect to any external power supply	AVA/O 00 4.4	
	75	IN5: reserved (COVER OPEN)**	3355.9	AWG 20-14 0.5-2.5mm ²	
	76	IN6: programmable input			
	70	Common point for inputs			4.4-5.3 Lb.in 0.5-0.6 Nm
Aux power supply	81/82	- : negative terminal for aux supply +: positive terminal of aux supply	12-24 Vd.c.		
	12/14/11	OUT1: reserved (POS 1 ORDER)			
Outputs	22/24/21	OUT2: reserved (POS 2 ORDER)			
Outputs	32/34/31	OUT3: reserved (POS 0 ORDER S1)	Dry contacts 8A / 277 VAC 50/60 Hz		
	42/44/41	OUT4: reserved (POS 0 ORDER S2)	5A / 24 VDC	AWG 16-14	
Latching relays	52/54/51	OUT 5: elevator control		1.5-2.5mm ²	
Later in 1g relays	62/64/61	OUT 6: genset start relay			
Current transformers IN/I3/I2/I1		CT neutral / CT phase C / CT phase B / CT phase A	CT input 1A or 5A		
Serial connection	RS485	Connection RS485 -: negative terminal of RS485 bus +: positive terminal of RS485 bus NC: Ground	RS485 bus insulated	LiYCY sheilded twisted pair 30-14 AWG / 0.14 to 1.5 mm ²	1.9 - 2.2 Lb 0,22 - 0,25 Nm
Digiware*	DIGIBUS	Connection point for I/O 10 optional accessories (must use 24 VDC input)	RJ 45 digiware cable	-	-

⁽¹⁾ Cables which are not used are to be fastened as shown in image 4 of step 2B.

^{*} For more information check I/O module instruction sheet ref 545597.

*** After wizard configuration "COVER OPEN will not be programmed by default, users must go to "MAIN MENU"> "PARAMETERS"> "I/O"> "INPUTS" and configure "INPUT 5" to "COVER OPEN" and "INPUT 5 TYPE" to "NC".

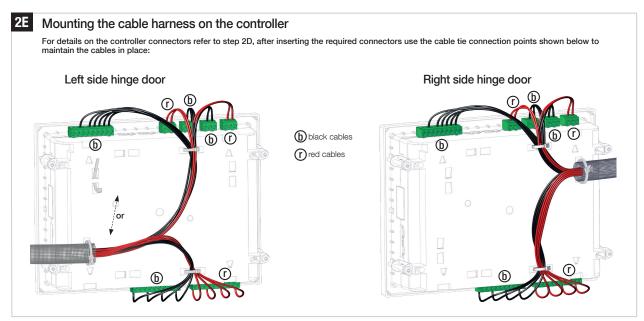

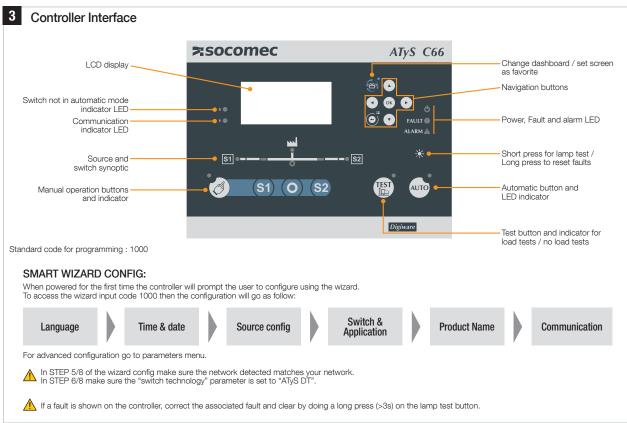

4 Operational limits

OPERATING VOLTAGE @ 50/60 (+/- 10%) HZ								
NETWORK	MINIMUM COIL OPERATING VOLTAGE (VAC)	MAXIMUM COIL OPERATING VOLTAGE (VAC)						
277/480 VAC	194 (Ph/N)	304 (Ph/N)						
120/208 VAC	194 (Ph/Ph)	304 (Ph/Ph)						
120/240 VAC	194 (Ph/Ph)	304 (Ph/Ph)						
480 VAC with transformer	194 (Ph/N)	304 (Ph/N)						

OPERATING TEMPERATURE								
SWITCH AND TRANSFORMER	10 /10	CONTROLLER						
32 to 131°F 0 to +55°C	14 to 158°F -10 to +70°C	-22 to 158°F -30 to +70°C with limitation on the LCD screen that may show distortion below 32°F / 0°C						

	OPERATING TIMES (1)								
RATING	TRANSFER DESCRIPTION	MINIMUM TRANSFER TIME (ms) (NORMAL TO ALTERNATE)	MINIMUM TRANSFER TIME (ms) (ATLTERNATE TO NORMAL)	MAXIMUM TRANSFER TIME (ms) (NORMAL TO ALTERNATE)	MAXIMUM TRANSFER TIME (ms) (ATLTERNATE TO NORMAL)				
100-200 A	Contact transfer time (2)	48	41	61	54				
100-200 A	Total transfer time (3)	144	321	198	553				
260-400 A	Contact transfer time (2)	60	54	90	64				
200-400 A	Total transfer time (3)	156	333	226	563				

- (1) All times measured without load and at 240 VAC at ambient temperature, actual times may vary depending on network and load. (2) Time for which load is disconnected from both source 1 and source 2 with both sources available. (3) Total time to transfer including detection of source total failure and transfer times.




WARNING

 $\mathbf{A} \Rightarrow \mathbf{B} \Rightarrow \mathbf{G}$

After maintenance operations are done screw back the covers: Tightening torque 17.7 lb.in / 2 N.m / PH2

Switch will be "not in auto" when either one of the covers are open.

Unscrew handle cover and arc chutes cover

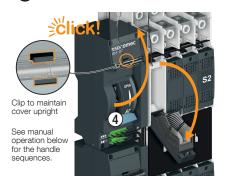

Slide cover to access service handle hole.

(1)

Recommendation: carry out one offload manual operation with handle ④ (FAST OPERATION) before putting the switch

Use the slow or fast handle to visualize the state of the contacts

For inspection use a standard tool as shown to operate



Open the cover and click in place and open the arc chute Reverse the procedure to close. Ensure that all is closed properly before putting back in service. In case any part of the ATyS DT switch is found to be damaged in any way, replace the complete switch.

Manual operation

f B

Connecting to source 2: To connect the load to Source 2 (S2) position both handle to the bottom position (top handle to S2, bottom handle to OPEN).

Connecting to source 1: To connect the load to Source 1 (S1) position both handle towards the top (top handle to OPEN, bottom handle to S1).

Connecting to center OFF:
To connect the load to center off (OPEN) position the top switch handle to the top position and the bottom switch handle to the bottom position.










Interlocking mechanism: The mechanical interlock ensures that S1 and S2 are mutually exclusive and inhibits one switch from being closed unless the other switch is open.

▲Warning: when manually switching always place one of the two handles in the OPEN position BEFORE switching the second handle.

Installing power terminal shrouds (optional accessories)

Top and bottom protection against direct contact with terminals or connecting parts

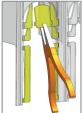




1 For 250, 300 & 600 KCMIL (200 , 260 400A) break off all removable parts (highlighted on the picture). For 1/0 & (100A) do not remove any parts.

	NO. OF POLES	REFERENCE*
100-200A	3P	96983020
100-200A	4P/3P+N	96984020
260-400A	3P	96983040
200-400A	4P/3P+N	96984040

Refs: top and bottom

Fix the terminal shrouds in place and push back

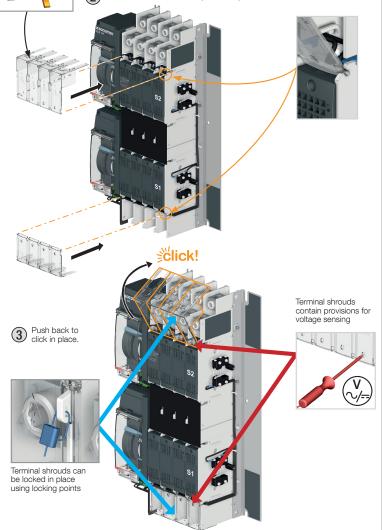

PERIODIC MAINTENANCE

The ATyS DT shall be maintained in accordance with industry standards and as per instructions in the ATyS DT instruction sheet.

As per NFPA 110 requirements for emergency and standby power systems the ATyS DT should be inspected and should be exercised under load at least monthly.

Refer to step 5 for instructions for manual, "non-electric", offload operations for service.



More than one live circuit.
Disconect all sources of supply before servicing and/or before using the manual operation.

Print: 90 g/m² - open format 432 x 279 mm - folded 216 x 279 mm with staples - R/V - B&W

6B Additional auxiliary contacts

The ATyS DT switch has 4 pre-installed auxiliary contacts, two of which are reserved for use for harness. This kit includes two additional contacts it is therefore recommended to order two sets of this kit for ATyS DT switches.



Terminal tightening torque 7.9 lb.in / 0.9 Nm

AUXILIARY CONTACT ELECTRICAL CHAI	RACTERISTICS
Rated current (125-480 VAC)	22 A
Rated current (125 VDC)	0.5A
Rated current (250 VDC)	0.25 A
Rated horse power up to 250 VAC	½ HP
Rated horse power up to 480 VAC	1/4 HP
Recommended wire section for 22A	10 AWG 4 mm ²



Use the correct protection according to your auxiliary contact circuit and your load



(1) Remove pre-installed auxillary contact



PH2 screwdriver



Assemble contacts with parts from kit as shown below



Assemble optional aux contact and pre-installed aux contact together



Tightening torque 17.7 lb.in / 2 N.m / PH2



Make sure contact is correctly activated



Place the transparent plastic piece to cover 4 the auxiliary conacts and lock in place in order to protect from direct contacts.

Ref: 96990021

EN 13 ATyS DT - 551764C - SOCOMEC

4. GENERAL OVERVIEW

The Open Type ATYS DT include:

- 1 transfer switch (delayed transition)
- 1 set of terminal connection screws
- 1 ATyS C66 ATS controller
- 1 ATyS C66 NEMA 3R gasket
- 1 ATyS C66 door mounting kit
- 1 ATyS C66 back plate mounting kit
- 1 Connector kit for C66 controller
- 1 Cable harness for connections between the switch and the controller
- 20 Cable ties for harness fixation points
- 1 Quickstart guide


All other components described in this instruction sheet are accessories and are sold separately.

If any components are missing from the list described above contact your local Socomec representative.

14 EN

4.1. ATyS DT (delayed transition) switching mechanism

The ATyS DT enables connection from the load to one of two sources and integrates a center off position in which neither of the two sources are connected to the load.

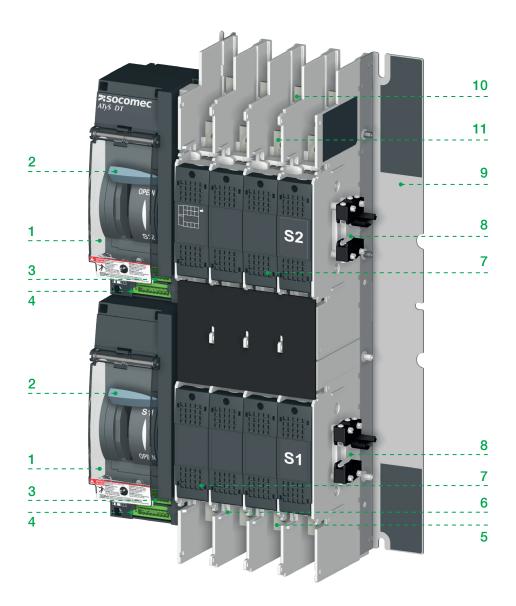


- 1. Plastic cover for off load manual operation
- 2. Manual handle for off load operations
- 3. Input connector
- 4. Output connector
- 5. Source 1 power terminals
- 6. Source 1 faston voltage sensing terminals
- 7. Hinged arc chamber for easy inspection of the power contacts
- 8. Position auxiliary contacts (NO / NC)
- 9. Back-plate mounting legs
- 10. Load side power terminals
- 11. Source 2 supply power terminals

4.2. ATyS C66 ATS Controller

The ATyS C66 controller is an ATS controller designed to function as an emergency system automatic transfer switch when used with the ATyS FT and ATyS DT switching mechanism.

In this instruction manual we will go over the basic settings for the association of the ATyS C66 with the ATyS DT switch, for more information on the detailed configuration of the C66 download the following instruction sheet:

https://www.socomec.us/wp-content/uploads/2020/04/ATYS-C66-INSTRUCTION-MANUAL_INSTRUCTION-MANUAL_2020-02_549868_EN-USA.pdf

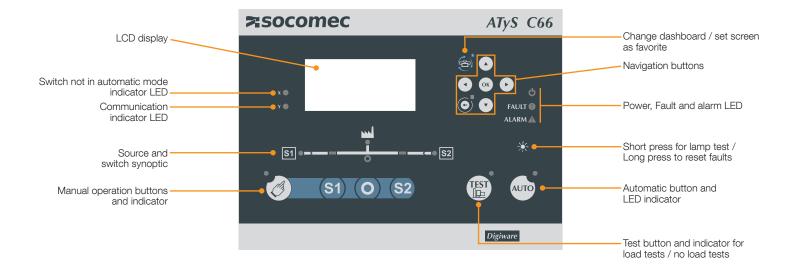

16 EN ATYS DT - 551764C - SOCOMEC

4.3. ATyS DT Cable Harness

The ATyS DT is delivered with a wiring harness, which includes all connections points for sensing, supply voltage to the coils and controller, and input/outputs from the switch mechanism to the controller.

Cable harnesses are in compliance with pollution degree III.


Wires are stranded copper wires rated up to 600/347 V.a.c, Max. 7A, 18 AWG (0.75 mm²) cross section.

There are two different ATyS DT cable harnesses:

4.3.1. Without Transformer connection points

Ref: 9896 4000 for use with ATyS DT ref: 98AX XXXX


(X variable number depending on number of poles and rating of the switch)

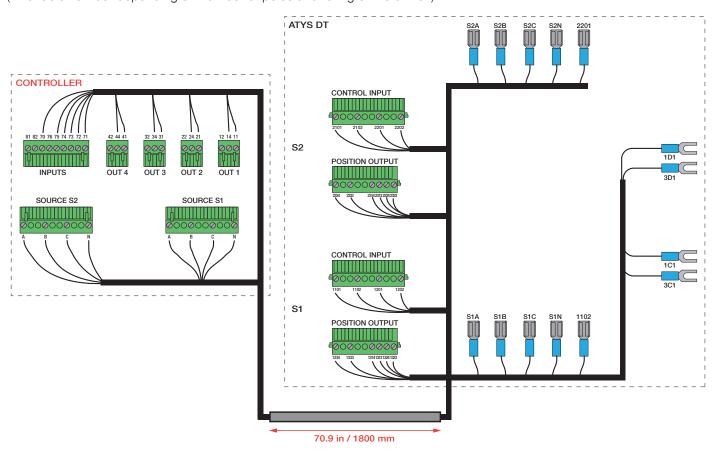

4.3.2. With Transformer connection points

Ref: 9897 4000 for use with ATyS DT ref: 98AX XXXX

(X variable number depending on number of poles and rating of the switch)

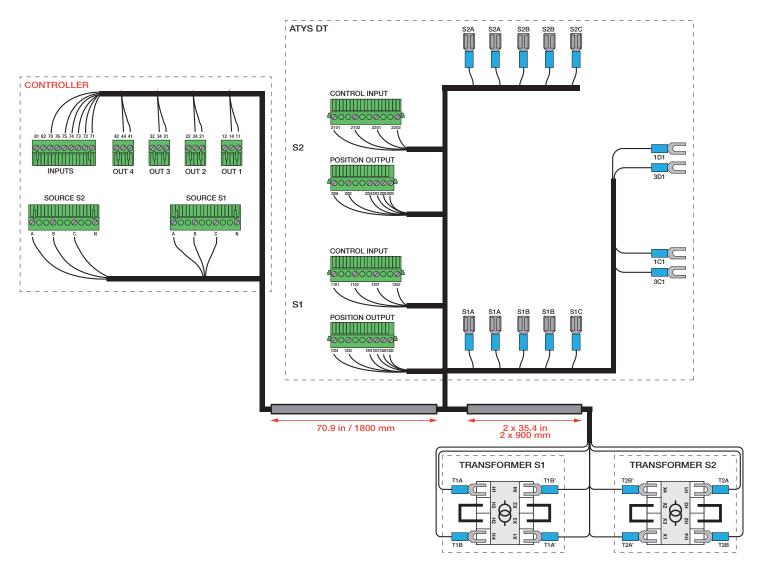



SPARTAN SP350MQMJ transformers not included, to be purchased separately. Must be bridged on X2-X3 and on H2-H3.



CAUTION! Certified with SPARTAN SP350MQMJ please respect constructor installation requirements.



Note: in line with section 7.1.25 of UL 1008 edition 8 control circuits that are dependent upon for the proper operation of the transfer switch, do not include protective devices connected.

18 EN

4.4. Optional accessories

The accessories listed below are not included in the ATyS DT kit and must be ordered separately.

Terminal screens

Use

Top and bottom terminal screens to protect from direct contact to the terminals. These protection screens can be locked and secured on the switch, are pre-cut for all compatible wire sizes and include holes for voltage and heat sensing.

Rating (A)	No. of poles	Reference (1)
	2 P	9698 2020
100 200 A	3P/2P+N	9698 3020
	4P/3P+N	9698 4020
	2 P	9698 2040
260 400 A	3P/2P+N	9698 3040
	4P/3P+N	9698 4040





Additional auxiliary contact kit

Use

The ATyS FT and the ATyS DT ship with 2 NO/NC auxiliary contacts already mounted on the switch. If additional auxiliary contacts are needed this kit includes 2 additional auxiliary contacts as well as a polycarbonate protection cover to protect from direct contact on auxiliary contact terminals.

These additional auxiliary contacts are installed on top of the existing auxiliary contacts.

Reference 96990021, see chapter «6.5.3. Extra auxiliary contact and cover», page 40 for more details.



4.4.1. Digiware connected devices

Part Number	Image	Description
4829 0140	SOCOMBC STORY MAN STORY MA	DIRIS Digiware IO-10 for ATySC66 4 Digital inputs + 2 Digital outputs expansion module A maximum of 6 modules can be connected to the controller
4829 0222	St SOCONE St SOCONE St SOCONE St SOCONE ST SOCON ST	DIRIS Digiware M-70 communication gateway for Ethernet & Webserver
4829 0202	PISOCOMEC WITHOUT BY 13 398.5v 9.398.4v 13 398.5v 9.398.4v 13 398.5v F 50.01 10 0 0 0 0 0	DIRIS Digiware D-70 communication gateway for Ethernet & Webserver and multi-product display

For the connection between the controller and the accessories and between modules, a RJ45 Digiware cable is needed. There are different sizes available:

Length (m)	Quantity	Reference	
0.1	1	4829 0181	
0.2	1	4829 0188	
0.5	1	4829 0182	
1	1	4829 0183	
2	1	4829 0184	
5	1	4829 0186	
10	1	4829 0187	
50 m reel + 100 c	onnectors	4829 0185	

4.4.2. Auxiliary DC power supply:

This power supply is optional when using the controller without digiware accessories, it is mandatory to use it when using digiware connected accessories. See chapter «6.5.4. I/O 10», page 42 for more details on digiware compatible products.

Power	supply	Reference
P15	Power supply 100-240 VAC / 24 VDC 15 W	4829 0120

4.4.3. Lugs

Use terminal screws and washers supplied with the ATSE

Product Designation		Ref. lugs	Quantity	ner 1 Oper III igs		Size / Section (AWG)		Pressure screw torque				Bolt torque				v
Rating (A)	, o		reférence	per lug	min.	max.	lb.in	Nm	Siz	ze in	lb.in	Nm	0	Size	in	mm
100A	Ilsco D0957	Contact us		1	14	1/0	50	5,65	0	8	70.8	8	0	5mm	0.625	15,9
200A	llsco D2831	Contact us		1	6	250 KCMIL	275	31,1	0	5/16	70.8	8	0	5mm	1	25,4
100-200 A	01014.000	39542020 39543020 39544020	3	1	6	300 KCMIL	275	31,1	0	5/16	70.8	8	0	5mm	1.12	28,4
260-400 A		39542040 39543040 39544040	3	1	4	600 KCMIL	550	62,1	0	1/2	310	35	0	8mm	1.79	45,7
260-400 A	Ilsco D3096	Conta		1	4	600 KCMIL	600	67,8		1/2	310	35	0	8mm	1.79	45,7

Power cable connections: For 100A use 1/0 AWG / For 200A use 250 KCMIL / For 260A use 300 Kcmil / For 400A use 600 Kcmil copper cables.

4.5. Reference configurator:

N° of poles 3: 3P 4: 4P

Rating 010: 100 A 020: 200 A 026: 260 A 040: 400 A

9 8 X X X XXX

0: spare switch for networks up to 480 VAC 8: ATSE assembly for 480 V.a.c 3 wire network A: ATSE Assembly for networks up to 480 VAC

0: Without solid neutral 1: With solid neutral

4.6. Environmental

The ATyS products meets the following environmental requirements:

4.6.1. Operating Conditions

4.6.1.1. Temperature



Controller

From -22°F to +158°F (-30°C to +70°C). NOTE: With limitations on the LCD screen that may show temporary distortion below 14°F (-10°C).

Switch mechanism:

From: 32°F to 131°F (0°C to +55°C). Max 380 A at 122°F (50°C) for 400A switches. Max 350 A at 131°F (55°C) for 400 A switches. For a more precise calculation of the temperature derating for your application please contact Socomec.

Wire harness

From -4° F up to $+158^{\circ}$ F (-20° C to $+70^{\circ}$ C).

4.6.1.2. Hygrometry



- 80% humidity without condensation at +131°F (+55°C).
- 95% humidity without condensation at +104°F (+40°C).

4.6.1.3. Resistance to impacts

- IK 05 as defined in IEC 62262 on the switch front face.
- IK 08 (6.8 J) rating as defined in UL 61010-2-201 on the controller front face.

4.6.1.4. Altitude



Up to 6561 feet (2000m) in altitude without derating.


For a calculation of the product derating for altitudes over 6561 feet (2000m), for your application please contact Socomec.

4.6.2. Storage



Products should be store for a maximum of 12 months, it is recommended to store product in dry, non-corrosive and non-saline atmospheric conditions. Recommended storage room temperature (77°F / 25°C) maximum storage temperature range from -4°F up to +158°F (-20°C up to +70°C).

A maximum of three boxes may be stacked vertically.

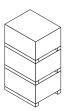

4.6.3. ATyS DT Volume and shipping weight by reference:

		_			Weigl	nt (kg)		
Rating	N° of Solid Poles Neutral		Reference Number	N	et	Gross		
				Lb.	Kg	Lb.	Kg	
100	3	Without	98A0 3010	52,65	23,88	87,92	39,88	
100	3	Without	9880 3010	52,65	23,88	87,92	39,88	
100	3	With	98A1 3010	54,41	24,68	89,68	40,68	
100	4	Without	98A0 4010	56,00	25,4	91,27	41,4	
200	3	Without	98A0 3020	52,65	23,88	87,92	39,88	
200	3	Without	9880 3020	52,65	23,88	87,92	39,88	
200	3	With	98A1 3020	54,41	24,68	89,68	40,68	
200	4	Without	98A0 4020	56,00	25,4	91,27	41,4	
260	3	Without	98A0 3026	63,01	28,58	98,28	44,58	
260	3	Without	9880 3026	63,01	28,58	98,28	44,58	
260	3	With	98A1 3026	64,55	29,28	99,83	45,28	
260	4	Without	98A0 4026	67,42	30,58	102,69	46,58	
400	3	Without	98A0 3040	63,01	28,58	98,28	44,58	
400	3	Without	9880 3040	63,01	28,58	98,28	44,58	
400	3	With	98A1 3040	64,55	29,28	99,83	45,28	
400	4	Without	98A0 4040	67,42	30,58	102,69	46,58	

4.6.4. Marking

The association of controller, harness and switching mechanism as well as other accessories is UL listed to UL 1008 (cULus marking), individually components (spare parts) are UL recognized (cURus marking).



5. PRODUCT DIMENSIONS


Drawings below include switch dimensions as well as minimum enclosure size. Switch & minimum enclosure size dimensions (4th pole represented with lugs installed.)

Dual Dimensions


Front view 4x Ø 0.41 4x Ø 10.5 *min.: 25.23* min.: 641 max.: 26.18 max.: 665 0

Side view D 6.09 154.8 30.25 26.81 7.52 min. 2.36

Switch top view

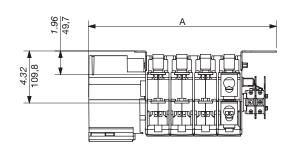


Controller dimensions

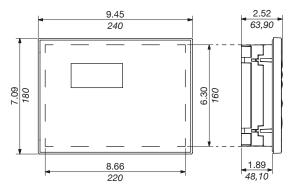


				SV	VITCH DI	MENSIO	MINIMUM ENCLOSURE SIZE								
		А		В		L		Р		Н		٧	V	[)
		in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm
100-200A	2P+N/3P	11.85	301,30	1.25	31,80	5.49	133,70	1.38	35	36	915	16	406	12	305
100-200A	3P+N/4P	13.24	336,30	1.25	31,80	6.60	168,70	1.38	35	36	915	16	406	12	305
260-400A	2P+N/3P	13.63	346,30	1.55	39,30	7	178,60	1.97	50	60	1524	24	610	12	305
	3P+N/4P	15.60	396,30	1.55	39,30	8.97	228,60	1.97	50	60	1524	24	610	12	305

Side view covers open

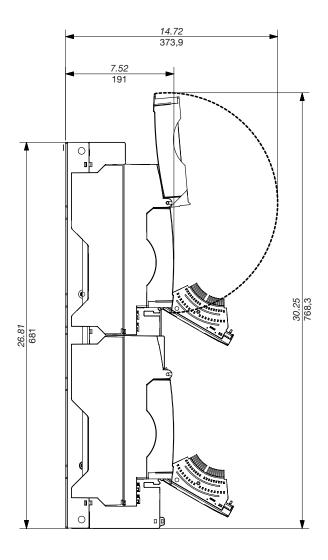

6. MOUNTING INSTRUCTIONS

6.1. Installation

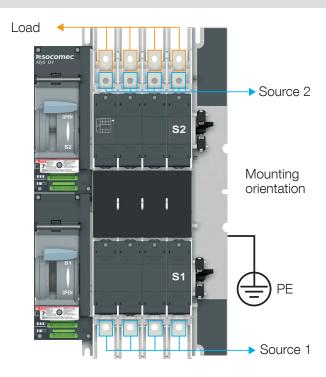


Socomec recommends connecting the Emergency (or alternate) source on the Source 2 power connections and the Normal (primary) source on the Source 1 power connectors.

However, it is possible to invert the position of the Normal and emergency sources on both the controller and on the switch; in this case source priority must also be inverted on the controller.



DANGER! Product must be installed vertically (cf image above) on a flat surface of a type 1, 3R, 12 and/or 12K enclosure, select an enclosure according to the minimum enclosure size indicated in the previous chapter.

Caution: when lifting the switch use the holes on the side of the mounting feet as shown in the following image, do NOT lift the product using the power terminals:

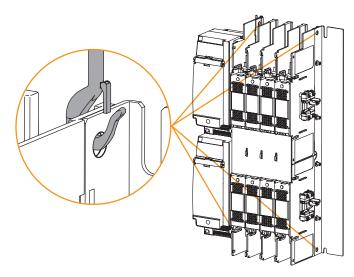

6.2. Mounting the switching mechanism

Product must be installed on a flat surface of a flat surface of a type 1, 3R, 12 and/or 12k enclosure, select an enclosure according to the minimum enclosure size indicated in the previous chapter.

Due to the weight of the switch it is recommended to install horizontally rather than vertically.


6.3. Mounting the C66 controller

6.3.1. Door Mounting

The ATyS C66 can be mounted Surface must be Types 1, 3R, 12 and/or 12K enclosure doors with up to 0.15 in (4mm) thickness.

STEP 1: Cut out for the controller

Cut a rectangle hole of 8.66 x 6.3 in (220x160mm) on the enclosure door.

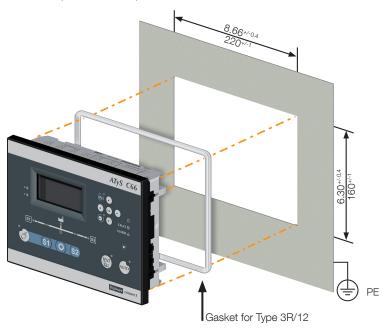


For NEMA 3R12 protection the gasket must be placed and fitted on the inside perimeter of the controller.

STEP 2: Fixing the controller on the door:



Place the switch inside of the cutout and clip the door mounting screw delivered with the product, on the side of the controller (2 screws per side). Tighten at 1.77 lb.in (0.2 N.m).

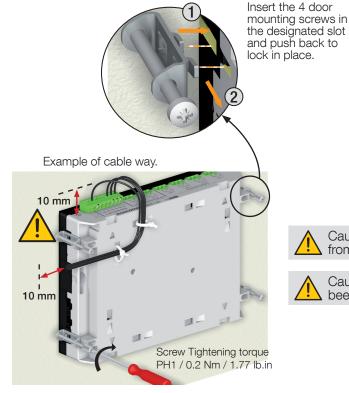



Caution! Cables must be more than 0.4 in (10mm) away from the RTC battery cover and USb connector.



Caution! Do not drill holes above the controller after it has been mounted


6.3.2. Backplate mounting

An alternative to mounting the controller on the door is to mount it on a backplate inside the enclosure.

This is especially useful to limit the access to the controller.


STEP 1: Placing the 4 mounting legs on the controller

Insert the mounting legs into the four slots (2 top side and 2 bottom side (c.f. below topside view)).

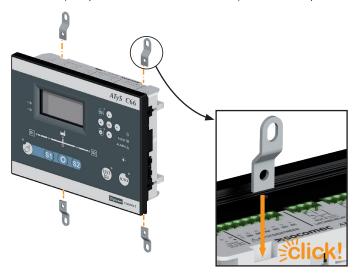

STEP 2: Fixing the controller on the backplate

Fix the controller through the mounting legs to the backplate, maximum screw diameter 0.22in/6mm.

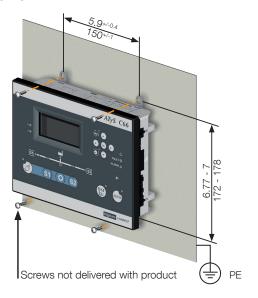



Note: screws for backplate mounting are not delivered with the product

6.4. Mounting the ATyS DT cable harness

6.4.1. Fixing the faston connectors

As shown on the wire harness schematics in chapter 4.3 the wiring harness includes 5 fast on connectors per source (5 connectors for source 1 and 5 connectors for source 2).

For Product references 98AX XXX these connectors are labeled:

Source 1 side:

- S1A
- S1B
- S1C
- S1N
- 102

S1 auxiliary contact


- 1C1
- 3C1

Source 2 side:

- S2A
- S2B
- S2C
- S2N
- 201

Source 2 auxiliary contact

- 1D1
- 3D1

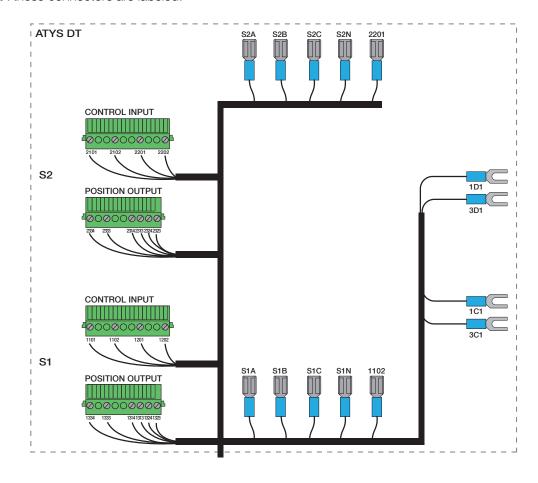

For Product references 988X XXX, these connectors are labeled:

Source 1 side:

- S1A
- S1A
- S1B
- S1B
- S1C

S1 auxiliary contact

- 1C1
- 3C1

Source 2 side:

- S2A
- S2A
- S2B
- S2B
- S2C

Source 2 auxiliary contact


- 1D1
- 3D1

Transformer 1:

- T1A
- T1B
- T1A'
- T1B'


Transformer 2:

- T2A
- T2B
- T2A'
- T2B'

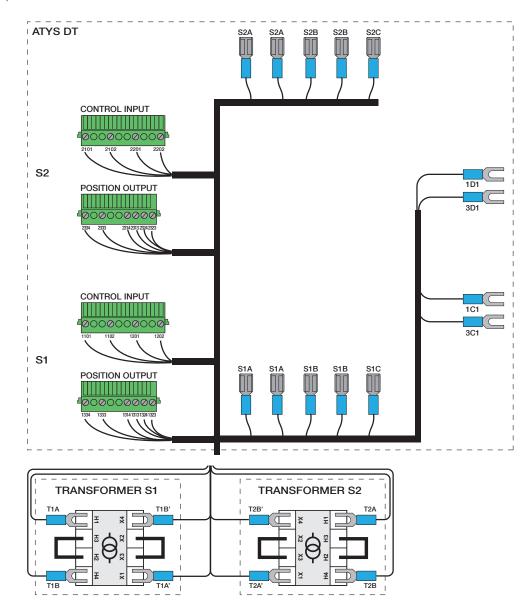

These Faston are to be connected in the switching mechanism on source 1 and source 2 poles under the power connectors as shown below


A maximum of 2 faston connectors can be placed on each pole.

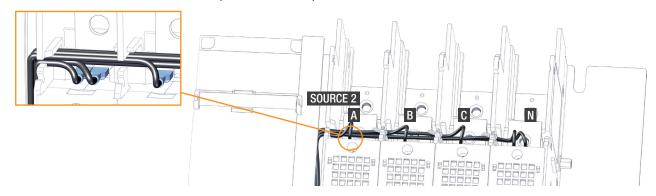

The Faston connectors must be placed specifically to match your network, in order to do this refer to the tables below:

											VOL	TAGE TR	ANSFORM	/IER										
											480	VAC	240	VAC										
NETWORK	TYPE	SOURCE	RTS	E FASTON	CONNECTIO	NS	AU.	XILIARY	CONTA	CT	PRIM	1ARY	SECONDARY											
TYPE	1111	OCOTIOL	А	В	С	N	1C1	3C1	1D1	3D1	H1	H4	X1	X4										
120/208 VAC	3P+N / 4P	S2	S2A & 2201	S2B	S2C	S2N			1D1	3D1														
120/200 VAC	3F+IN / 4F	3F+IN / 4F	3F+N/4F	3F+N/4F	3F+N/4F	3F+N/4F	3F+IN / 4F	OI TIN/ 41	OI +IN/ 4I	OI TIN / 41	OI +IV/ +I	S1	S1A & 1102	S1B	S1C	S1N	1C1	3C1						
208 VAC	3P	3P	S2	S2A & 2201	S2B	S2C	_ (1)			1D1	3D1													
200 VAC			S1	S1A & 1102	S1B	S1C	_ (1)	1C1	3C1															
277/480 VAC	3P+N / 4P	S2	S2A	S2B	S2C	S2N & 2201			1D1	3D1														
211/400 VAC	3P+IN / 4P	3P+N / 4P	S1	S1A	S1B	S1C	S1N & 1102	1C1	3C1															
480 VAC	2D	S2	2xS2A	2xS2B	S2C	-			1D1	3D1	T2A	T2B	T2A'	T2B'										
+ Transformer	3P	3P	S1	2xS1A	2xS1B	S1C	-	1C1	3C1			T1A	T1B	T1A'	T1B'									


⁽¹⁾ See chapter "6.4.2. Switch side connectors", page 32 for information on how to connect unused cables.

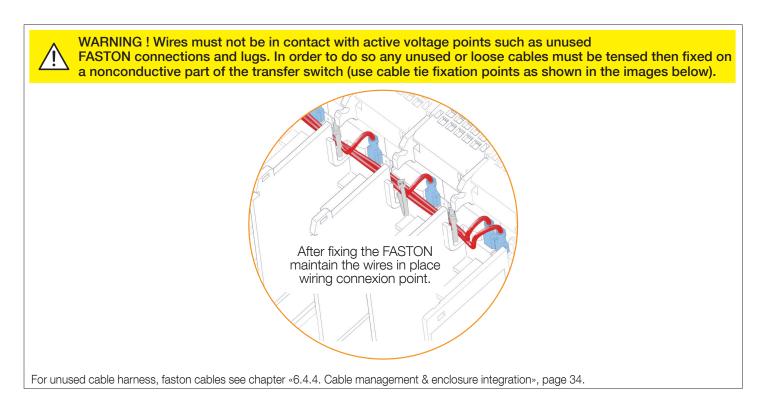


6.4.2. Switch side connectors

Connect and tighten the two connectors (10 pin and 8 pin) on the correspond slots located below the plastic cover. The cables inserted in each connector will correspond to the label on the left of the two connectors.

Tighten using a Flat 3mm screwdriver with a 4.4 Lb. torque (0.5 N.m),

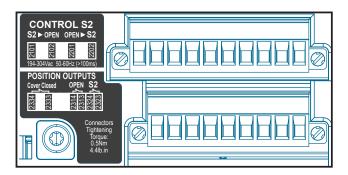

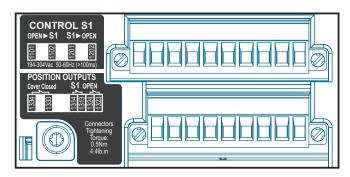


32 EN ATyS DT - 551764C - SOCOMEC

6.4.3. Controller side connectors

6.4.3.1. Connectors with harness

The remaining connectors of the cable harness must be placed on the controller; the location of these connectors is highlighted below:

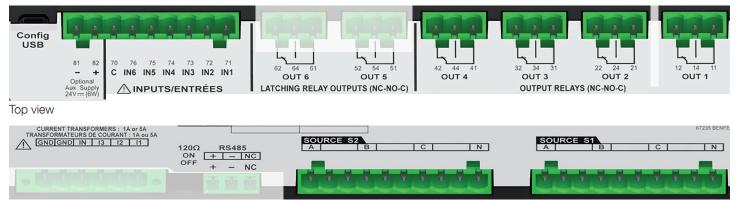

Bottom view



CAUTION! Take care to correctly identify connectors when inserting "OUT1", "OUT2", "OUT3", "OUT4" connectors and "SOURCE 1", "SOURCE 2" connectors, as they are interchangeable.

The remaining connectors are included in connector kit (separate from harness) these can be used for customer input/outputs, RS485 communication and current sensors.

6.4.3.2. User available connectors

For details on user available connection points refer to the table below:

(in grey connection points integrated in the harness in white available connection points)

TYPE	TERMINAL N°	DESCRIPTION	CHARACTERISTICS	RECOMENDED CROSS SECTION	TIGHTENING TORQUE
Sensing source 1	SOURCE 1 L1/L2/L3/N	Voltage sensing inputs source 1 & voltage supply (L1-L2)	Sensing voltage 50 - 575 V.a.c P-P - 50/60 Hz (+/- 10%) Supply voltage (L1-L2)	AWG 18-14	
Sensing source 2	SOURCE 2 L1/L2/L3/N	Voltage sensing inputs source 2 & voltage supply (L1-L2)	0.75-2.5mm ²		
	71	IN1: reserved (SWITCH IN POS1)			
	72	IN2: reserved (SWITCH IN POS2)			
Inputs	73	IN3: reserved (SWITCH S1 IN POS0)			
	74	IN4: reserved (SWITCH S2 IN POS0)	Do not connect to any power supply from terminal 70 common point.		
	75	IN5: reserved (COVER OPEN)**	torrina 70 corrinor point.		
	76	IN6: programmable input			
	70	Common point for inputs			4.4-5.3 Lb.in 0.5-0.6 Nm
Aux power supply	81/82	- : negative terminal for aux supply +: positive terminal of aux supply	12-24 Vd.c.	AWG 16-14 1.5-2.5mm ²	0.5-0.0 14111
	12/14/11	OUT1: reserved (POS 1 ORDER)			
Outouto	22/24/21	OUT2: reserved (POS 2 ORDER)			
Outputs	32/34/31	OUT3: reserved (POS 0 ORDER S1)	Dry contacts 8A / 277 VAC 50/60 Hz		
	42/44/41	OUT4: reserved (POS 0 ORDER S2)	5A / 24 VDC		
Latabina valava	52/54/51	OUT 5: elevator control			
Latching relays	62/64/61	OUT 6: genset start relay			
Current transformers	IN/I3/I2/I1	CT neutral / CT phase C / CT phase B / CT phase A	CT input 1A or 5A		
Serial connection	RS485	Connection RS485 -: negative terminal of RS485 bus +: positive terminal of RS485 bus NC : Ground	RS485 bus insulated	LiYCY sheilded twisted pair 30-14 AWG / 0.14 to 1.5 mm ²	1.9 - 2.2 Lb.in 0,22 - 0,25 Nm
Digiware*	DIGIBUS	Connection point for I/O 10 optional accessories (must use 24 VDC input)	RJ 45 digiware cable	-	-


For details on input / output functions available on the C66 controller refer to the C66 instruction sheet 549868 available on the Socomec website:

https://www.socomec.us/range/atys-c66/

6.4.4. Cable management & enclosure integration

6.4.4.1. Switch side cable management


As indicated in «6.4.1. Fixing the faston connectors», page 30 of this chapter wires with faston connectors must be maintained in place using cable ties.

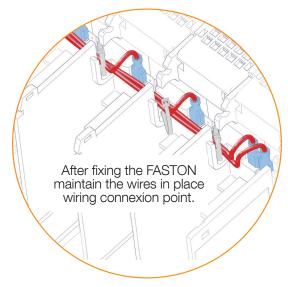


^{*} For more information check I/O module instruction sheet ref 545597.

** After wizard configuration "COVER OPEN will not be programmed by default, users must go to "MAIN MENU">"PARAMETERS">"I/O">"INPUTS" and configure "INPUT 5" to "COVER OPEN" and "INPUT 5 TYPE" to "NC".


The wires should be passed along the cable duct as shown below (this includes cables with unused Faston connectors).

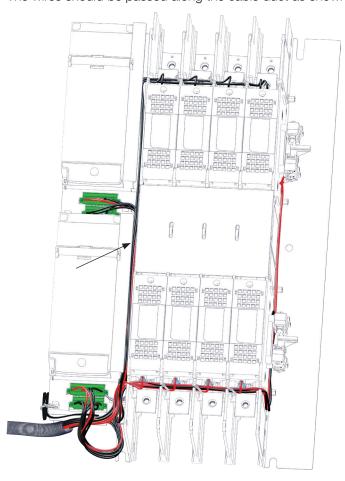


Pull the cables down so that all wires are tight and use a cable tie to maintain all cables coming from the cable duct into place (cf. image below):

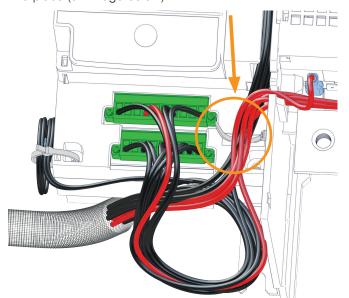

Then fix any cables with unused faston connectors on the side of the switch as shown below:

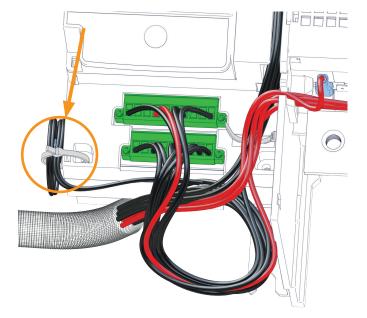


Use the side inserts to maintain the auxiliary contact cables in place with cable ties as shown below:

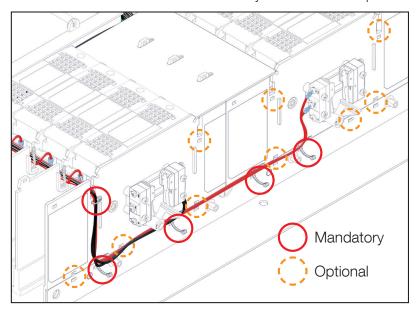

For example, these can be used to maintain cables in place when connecting wires to the customer position auxiliary contacts.

6.4.4.2. Controller side cable management


The controller also includes provisions for connection cables ties, see image below:

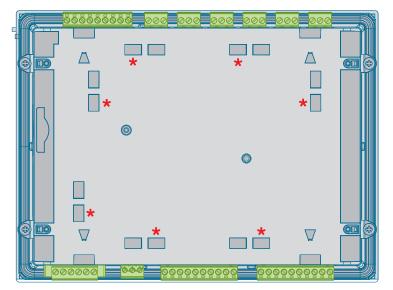

36 EN ATyS DT - 551764C - SOCOMEC

Left side hinge door

Right side hinge door

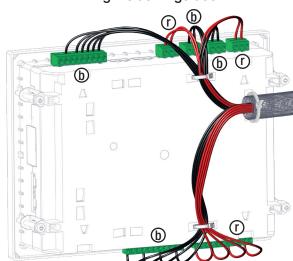


CAUTION! Cables must be more than 0.4 in (10mm) away from the RTC battery cover and USB connector.

b black cables

red cables

6.4.4.3. Enclosure cable management

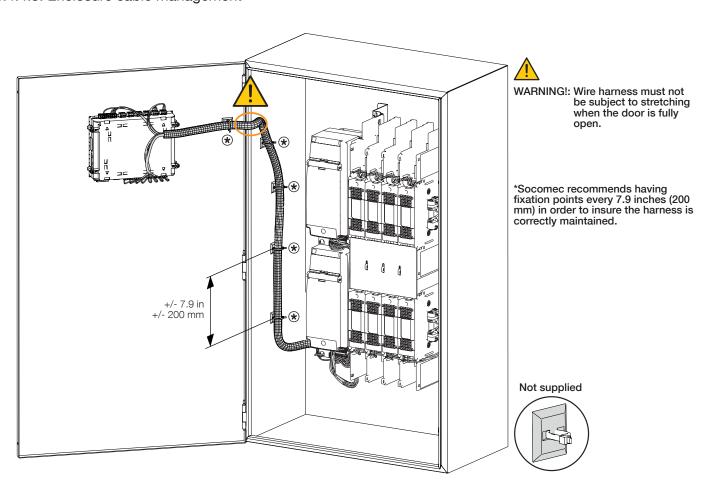

EN 37 ATyS DT - 551764C - SOCOMEC

6.5. Mounting optional accessories


The accessories mentioned in this chapter are not included inside the ATyS DT package and must be ordered separately. For accessory list, see chapter «4.4. Optional accessories», page 19.

6.5.1. Terminal shrouds

Terminal shrouds can be installed to protect against direct contact on active conductive parts, order this accessory according to the table below, each part number includes both top (source 2 and load) and bottom (source 1) protection.


	No. of poles	Reference*
	2P	96982020
100-200A	3P/2P+N	96983020
	4P/3P+N	96984020
	2P	96982040
260-400A	3P/2P+N	96983040
	4P/3P+N	96984040

Before mounting the terminal shrouds, break off the removable plastic part corresponding with the switch rating and cables used:

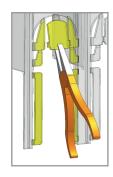


For 250, 300 & 600 KCMIL (200 , 260 400A) break off all removable parts (highlighted on the picture). For 1/0 & (100A) do not remove any parts.

Fix the terminal shrouds in place and push back.

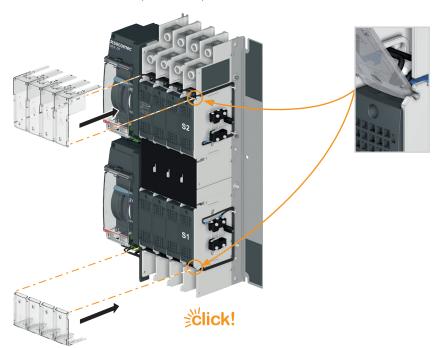

When fixing the shrouds make sure the pieces fit in the switch as shown in the image above then push back to clip in place.

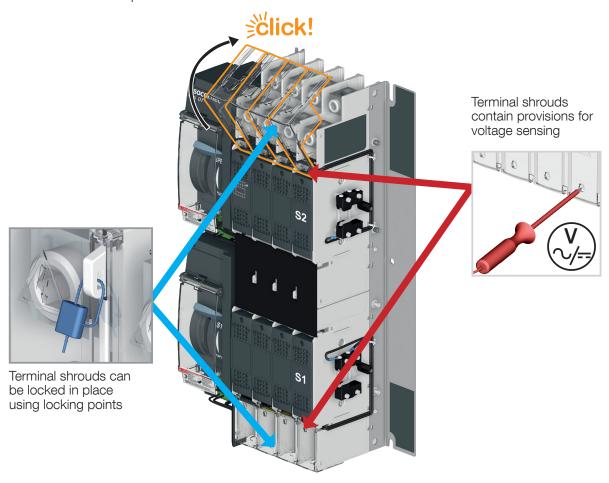

Terminal shrouds can also be fixed in place using cable ties as shown above, they also include small diameter holes to allow for voltage sensing without removing the covers.

6.5.2. Lugs

Switch are delivered with crimped nuts on each pole as well as the corresponding screws, use the screws when connecting lugs.



CAUTION! Only use screws delivered in product, in case of loss of screws please contact Socomec.



Note: on the top side of the switch, it is recommended to mount the terminal lugs for the load before mounting the source 2 terminal lugs.




100A switches tested with 1/0 AWG copper wires. 200A switches tested with 250 KCMIL copper wires. 260A switches tested with 300 KCMIL copper wires. 400A switches tested with 600 KCMIL copper wires.

Refer to the table below for tightening torques:

Product	Designation	Ref. lugs	Quantity	Openings		/ Section AWG)	Pre	essure torq		ew	Bolt torque				\] -	, v
Rating (A)			reference	per lug	min.	max.	lb.in	lb.in Nm		ze in	lb.in	Nm	,	Size	in	mm
100A	Ilsco D0957	Conta	act us	1	14	1/0	50	5,65	•	8	70.8	8	0	5mm	0.625	15,9
200A	llsco D2831	Conta	act us	1	6	250 KCMIL	275	31,1	0	5/16	70.8	8	0	5mm	1	25,4
		39542020	39542020 2			300										
100-200 A		39543020	3	1	6	KCMIL	275	31,1	0	5/16	70.8	8	0	5mm	1.12	28,4
	CMC LA-300R	39544020	4			TOWIL										
	2	39542040	2			600										
260-400 A		39543040	3	1	4	KCMIL	550	62,1	0	1/2	310	35	0	8mm	1.79	45,7
	CMC LA-630R	39544040	4			INCIVIL										
260-400 A	00 A Ilsco D3096		act us	1	4	600 KCMIL	600	67,8	0	1/2	310	35	0	8mm	1.79	45,7


6.5.3. Extra auxiliary contact and cover

The ATyS DT switches are delivered with four Pre-installed C-Form auxiliary contacts (the two central auxiliary contact are connected to the harness, the two external auxiliary contacts can be used to relay position information) on the left side of the switch:

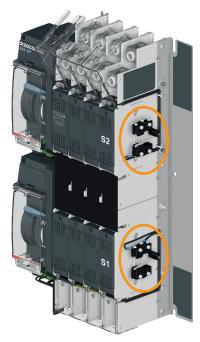

40 **E**N

The auxiliary contacts have the following characteristics:

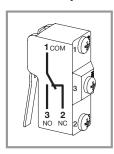

Terminal tightening torque 7.9 lb.in / 0.9 Nm


Auxiliary contact electrical characteri	stics
Rated current (125-480 VAC)	22 A
Rated current (125 VDC)	0.5A
Rated current (250 VDC)	0.25 A
Rated horse power up to 250 VAC	½ HP
Rated horse power up to 480 VAC	1/4 HP
Recommended wire section for 22A	10 AWG 4 mm ²



Use the correct protection according to your auxiliary contact circuit and your load.


The additional auxiliary contact kit allows user to add two additional auxiliary contacts on the side of the switch and comes with barriers to protect against direct contacts with live parts.

To install additional contacts, first remove the contacts in place using a PH2 screwdriver:

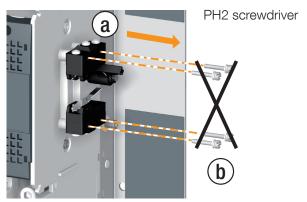


Pre-installed screws can be discarded.

Then assemble the existing contacts as well as the contacts of the kits and the barriers using the screws supplied in the kit as shown below:

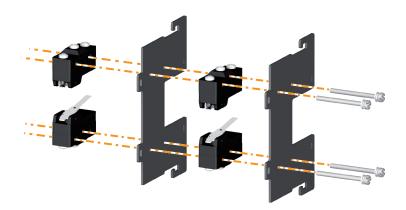

Then fix the assembled products on the switch:

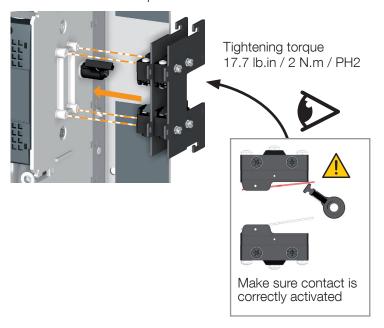

Finally place the plastic cover, push the cover to clip into the two inter-contact barriers.



This barrier can then be locked in place using cable ties.

(To remove squeeze the top and bottom parts of the transparent piece and pull out).

6.5.4. I/O 10

Digital I/O modules are accessories not delivered with the product. These optional modules can be ordered using the references below:




Digital I/O modules provide additional inputs /outputs to be used with/by the C66 controller.


The maximum length of the Digiware bus is 4000 feet (100 meters).



Note: the maximum number of I/O optional modules that can be added through the Digiware bus to the controller is 6; this is equivalent to 24 digital inputs and 12 digital outputs. In order to use the I/O modules the 24VDC input of the C66 controller must be supplied with 24 VDC.

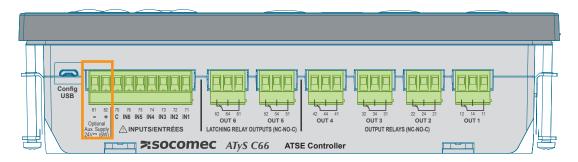


An end-of-the-bus resistor is necessary for a correct communication between the modules and the controller:

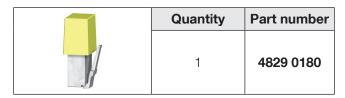

Mounting the I/O modules:

Position the I/O modules on DIN rail or on backplate as shown on the image bellow.

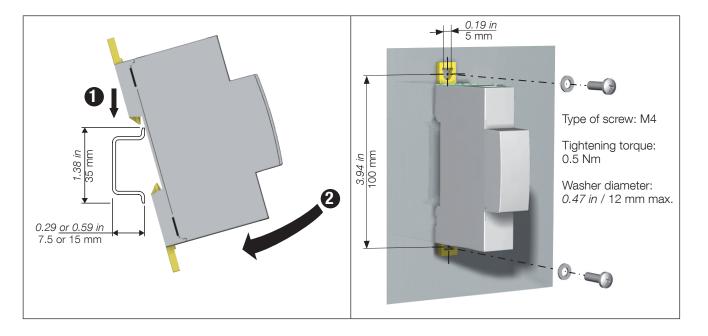

The connection between modules and to the ATyS C66 Digiware input is on the side of the controller by means of an RJ45 connector and after this the other modules are daisy chained (up to 6 modules).



7. CONFIGURATION


This document will cover basic programming of the C66 controller in the ATyS DT application, for more details on timers, specific function, input/output configurations and others refer to the ATyS C66 instruction sheet (549868) available on the Socomec website:

https://www.socomec.us/range/atys-c66/

When powered up for the first time the C66 will prompt users to go through the installation wizard.

The first out of 8 questions will be the language. User can choose between the following 3 languages:

- English
- French
- Spanish

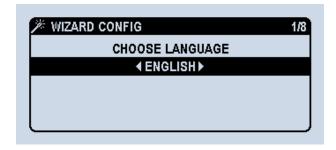

Then it will follow the option to start the wizard with the following options:

- Start now
- Remind me the next power on
- Never ask me again

The wizard will remain accessible inside the menu PARAMETERS/WIZARD.

In case the decision taken is to begin with the wizard configuration, then the options are:

- To use the smart configuration: parameters like voltage, frequency and phase rotation will be auto detected and shown to users (at which point users can correct if auto-detection has not selected the correct parameters for the installation)
- To use the manual configuration: in this case users will enter all network parameters manually.

The controller will require the configurator 4-digit password before the configuration (by default set to 1000).

Once the configuration starts, the user needs to enter the date format, date and time as follows:








These time/date values will be saved and from that moment the RTC battery will keep the clock running even if the supply to the controller is lost.

Once these parameters are set, the next step is the source settings, where the user has to confirm the values proposed by the controller (in case of smart configuration) or enter the values (in case of manual configuration) for the number of poles of the switch / wires coming from the sources, nominal voltage, nominal frequency and phase rotation.

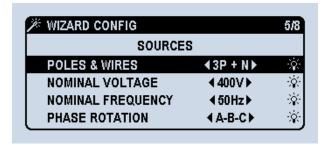


Step 6 is about the installation parameters.

Application type stands for the type of sources coming to the controller. The options are:

- Main-Genset (by default): Power supply coming from a transformer on the priority source and from a Genset on the non-priority source.
- Main-Main: Power supply coming from a transformer for both sources 1 and 2.
- Genset-Genset: Power supply coming from a diesel generator for both sources 1 and 2.

Source priority stands for the preferred source in automatic mode when both sources are fully available. The options are:


- Source 1: the source connected to source 1 sensing on the switch will become the preferred source and the transfer switch will automatically transfer to this source as long as it is available and the timers are respected.
- Source 2: the source connected to source 2 sensing on the switch will become the preferred source and the transfer switch will automatically transfer to this source as long as it is available and the timers are respected.

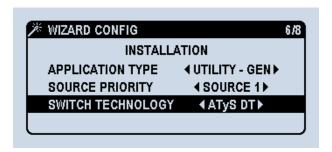





Important: Switch technology must be set to "ATyS DT".

The 7th step is not affecting the functioning of the transfer switch but permits the user to select a name for the product. As default, it's ATyS C66, but it can be changed for any combination of letters, numbers and signs, for instance, "Cooling", "Line 1" or "DTC/21".

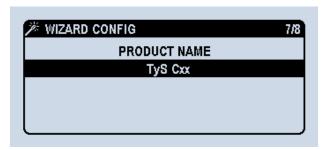

To finalize the configuration, the wizard asks for the communication parameters, such as the slave address (by default 6) and the communication parameters:

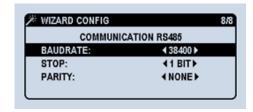

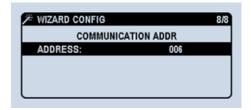

After entering and confirming these parameters, the wizard informs that the minimum parameters needed for the transfer switch to work are set and invites to go to the menu home screen where the user can set more parameters and functions manually (see next chapter).





Note: Configuring input 5 to cover OPEN: Wizard will not configure IN5 to COVER OPEN, however it is strongly recommended to do so. In order to program input 5, go to "MAIN MENU" > "PARAMETERS" > "I/O" > "INPUTS" Select "INPUT 5" and configure to "COVER OPEN".

8. MAINTENANCE



WARNING! Maintenance on the product and any other associated equipment including but not limited to servicing operations must be performed by adequately trained and qualified personnel.

8.1. Mechanical manual operations for maintenance purposes




DANGER! More than one live circuit! Disconnect all sources of supply before servicing and/or using the manual operation.



Unscrew both handle cover to access the handle and unscrew the arc chute cover top screw to inspect contacts.



Note: controller will be "NOT IN AUTO" mode which will inhibit controller automatism and show the corresponding message, when the cover is unscrewed.

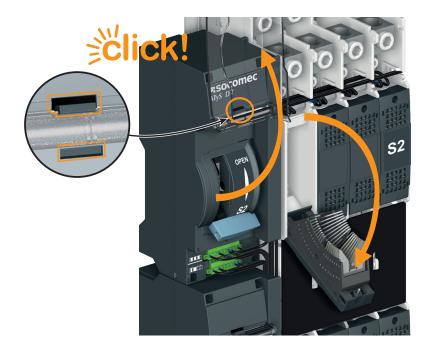

Push back the plastic cover until it is clearly fixed in place, for contact inspection, the arc chute champ will be maintained in the open position if the switch is mounted vertically in the enclosure.


Once the handle cover is open users will have access two operating modes:

- Using Standard operation handle (marked "FAST OPERATION" on the image below) which will operate contacts at the same speed as they would normally operate using electrical operation, independently of the speed used to operate the handle.
- Using the maintenance operation handle accessible by sliding the cover indicated by the orange arrow below and inserting a screwdriver (0.25 in / 6mm diameter max) in the socket revealed, the screwdriver can then be used as a handle to change the switch position.

When using this handle the movement of the contacts will directly be linked to the movement of the handle, this allows users to move the contacts slowly for easier inspection of switch mechanisms and contacts.



Note: after using the maintenance operation it is recommended to do at least one manual operation with the Standard operation handle (Fast operation) before putting back in service.

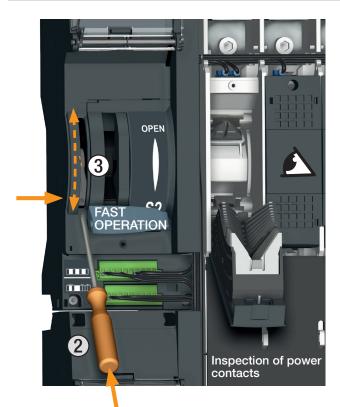

\(\frac{1}{1}\)

CAUTION! Once all manual operations are completed make sure to screw back the arc chutes and plastic protection cover in place, tightening torque 17.7 Lb.in (2 N.m) using PH2 type screwdriver.

0.25 in / 6mm diam max. SLOW OPERATION

When using the handles to change position:













1. Connecting to source 2:

To connect the load to Source 2 (S2) position both handle to the bottom position (top handle to S2, bottom handle to OPEN).

2. Connecting to source 1

To connect the load to Source 1 (S1) position both handle towards the top (top handle to OPEN, bottom handle to S1).

3. Connecting to center off

To connect the load to center off (OPEN) position the top switch handle to the top position and the bottom switch handle to the bottom position.

4. Interlocking mechanism

The mechanical interlock ensures that S1 and S2 are mutually exclusive and inhibits one switch from being closed unless the other switch is open.



WARNING! When manually switching always place one of the two handles in the OPEN position BEFORE switching the second handle.

8.2. Electrical manual operation

Manual Operation (CTRL mode): it allows the user to take the control of the commands sent by the controller and the automatic procedure is disabled.

To enter manual mode, click the Manual operation button:

The LCD will prompt the user to enter the operator password. The Manual mode LED will light up and the manual operation buttons will be enabled. Select (\$1) to switch to source 1, (\$2) to go to source 2 and ((0)) to go to center off position (if existing).



Note: in manual mode, if a source is lost, the genset (if any) will start and the controller will not force an automatic transfer. The controller will remain in manual mode until reverted to Auto by the user.

8.3. LOAD TEST and NO LOAD TEST

Test Mode: This allows an authorized maintenance person to perform a transfer to perform a transfer to backup source (default Source 2) and to decide when to go back to the priority source (default Source 1). The testing of the ENGINE START can be performed using a NO LOAD TEST test in the menu or assigning the TEST button to this function. The TEST mode can be launched from both MANUAL or AUTOMATIC modes.

To switch to TEST mode, make sure there are no external inhibitions and click the automatic Test button: rest



The LCD will prompt the user to enter the operator password. The TEST mode LED will light up.



Note: the switch may transfer as soon as TEST mode has been enabled, respecting the elevator timers, in-phase timers (for open transition switches with positions I-II) and center-off position timer (if the switch has a 0 position).


8.4. Clearing faults

For faults with a pop-up, the pop-up will either be cleared when the fault is cleared or by pressing any button on the front face of the controller. The total number of faults logged on the controller is dynamic, whilst the total number of "faults + alarms" is 100. Total events excluding faults and alarms 3000 and uses a FIFO listing.

To clear Faults through the HMI, it is possible through the LOG/FAULTS menu with the option "PRESS OK TO CLEAR FAULTS", using the configurator profile password. There is also a shortcut by holding the 💥 button for 1.5s and validating on the pop-up that appears. If the fault is still active, it will be inside the log "in progress" but the fault

LED and output will be off. If the faults are no longer active, they will be logged in the "history" log.

Clearing the fault will be automatically proposed by the controller through a pop-up:

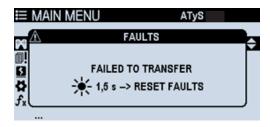

EN 51 ATyS DT - 551764C - SOCOMEC

8.5. Recommendations for maintenance

To clean the front face of the equipment, use a soft cloth with water and non-abrasive liquids.

The ATyS C66 controller is conceived to be a maintenance free controller however, it is recommended to perform visual inspections periodically on the device, checking the connections, that the display screen is functional and the LED using the lamp test button and ensuring the correct functioning with the switching device and with any possible associated software.

As a best practice, perform at least one full cycle with your equipment (solution with the controller + transfer switch) every year.

The ATyS DT shall be maintained in accordance with industry standards and as per this manual.

As per NFPA 110 requirements for emergency and standby power systems the ATyS DT should be inspected and should be exercised under load at least monthly.

Refer to the manufacturer's instructions for any manual, non-electric, offload operations recommended for service.

There are no user serviceable parts in the controller except for the RTC replaceable battery. In case of a malfunction, do not attempt to open the product and contact your local supplier. In this case the model, firmware version and serial number of the unit will be useful to provide and can be found inside the ABOUT menu as well as on the product labels and QR code on the rear side of the controller.


RTC Battery replacement

Depending on the working and environmental conditions the battery will need to be replaced when the controller displays a message «RTC Low Battery». A low battery may result in the time & date at power up to be incorrect.

To replace the RTC battery:

- 1. Safely disconnect all power and voltage to the ATS controller
- 2. Disconnect all terminals from the controller
- 3. Release the cover on the side of the controller containing the battery
- 4. Remove the old battery with an appropriate plastic tool
- 5. Place the new battery on the correct side (polarity) in the holder from the pcb and push with the finger until it reaches the position of the old one.
- 6. Put back the plastic cover on the side of the controller and pressure slightly until it perfectly fits.
- 7. Connect back the terminals to the controller
- 8. Power up and adjust time and date

For battery replacement, use a BR2032 coin-type battery cell.

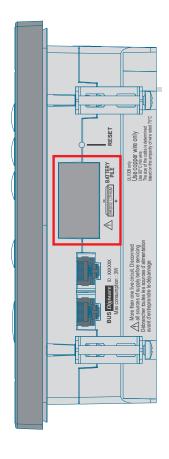


9. TROUBLE SHOOTING

Fault on screen	Description (Potential cause)	Action
Unexpected transfer	The controller receives information that position has been changed without having sending a position change order.	Make sure that the "COVER OPEN" input is correctly configured (input 5) and that the cable on input 5 is intact.
Failed to transfer	Position order has been sent to the the switch but position was not reached.	 Make sure that the voltage is present on the source of destination and that it is within the coil operation range of 194-304 VAC. Check that position inputs are correctly configured (Input 1 : Position 1, input 2 position 2) and that the cable is not damaged.
Maximum operation per minutes	The maximum number of operations has been reached.	Wait a few minutes before sending new orders to transfer. Check that the controller voltage and frequency thresholds are adapted to your network.
Maximum password attempts reached	The user has entered too many incorrect passwords.	Will automatically reset after a certain time (time to reset is user configurable using the controller maintenance password).
Genset Fail start	Genset has not started within the configured time.	- Check your genset Increase the genset startup timer to allow more time to start the genset.
COVER OPEN	Input 5 linked to the switch manual handle cover is active.	Check that the cover protecting the manual handle is correctly screwed in place.


ANNEX I. SINGLE LINE DIAGRAMS




\ <u></u>		I 25 04	G	п	т	D	Ω	₩.	>
	DATE R	H 04.11.2020 F 25.09.2018 A	_						
	REV ETABLI	A OMO						12 11 10	FOLIO POLIO 01
2	a EL	0 0						Schér Schér Schér	
								Schéma circuit pulssance / Power circuit diagram Schéma circuit commande / Command circuit diagram ATYS DT Schéma circuit commande / Command circuit diagram CONTROLLER C66	2 3 DESIGNATION FOLIO Page de garde / Cover sheet Liste des folios / Sheet list
ω	7	MAJ C						ilt pulss ilt comn	N FOLIO e / Cove
	MODIFICATIONS Revisions	MAJ COMPLETE DU SCHEMA 1ère EMISSION 1 st Issue						ance / Frande /	IO IO et list
	SNOIL	DU SCHEN						Comma Comma	
4		NA						rcult dia and circu	4
								agram uit diagr	
۵.	AVIS_	1						am AT\	01
	REV VER	MP OV						/S DT	
6	TOUS DRO							LER C6	6
	NT DE DIVULGAT							<u> </u>	
7	ON SWIE AND I	- ove ASOCOMEC Innovative Power Solutions						п п п	F INDICE
	SAME AND REPRODUCTION ALL RIGHT OF DISCLOSURE PARTIAL ARE PROHIBITED								
	67235 FRANCE TEL (33) (0							04.11.2020 04.11.2020 04.11.2020	DATE 04.11.2020 04.11.2020
ω	BENFELD	enein						20 20 20	8
9		CLIENT: Customer:							9
10									10
1	PROJET	List AT							11
	=	SE (
12)pen							12
	CODE	ATSE Open Type Dual Operator Liste de Folios/Sheet list							
	17	st Dua							
13		<u>я</u> Ор							13
H	N° PLAN	erato							
14		≍							14
H									H
15	367702								15
H	2 India								
16	N° Folio:								16
	8	I	G	П	т	D	0	Œ	>

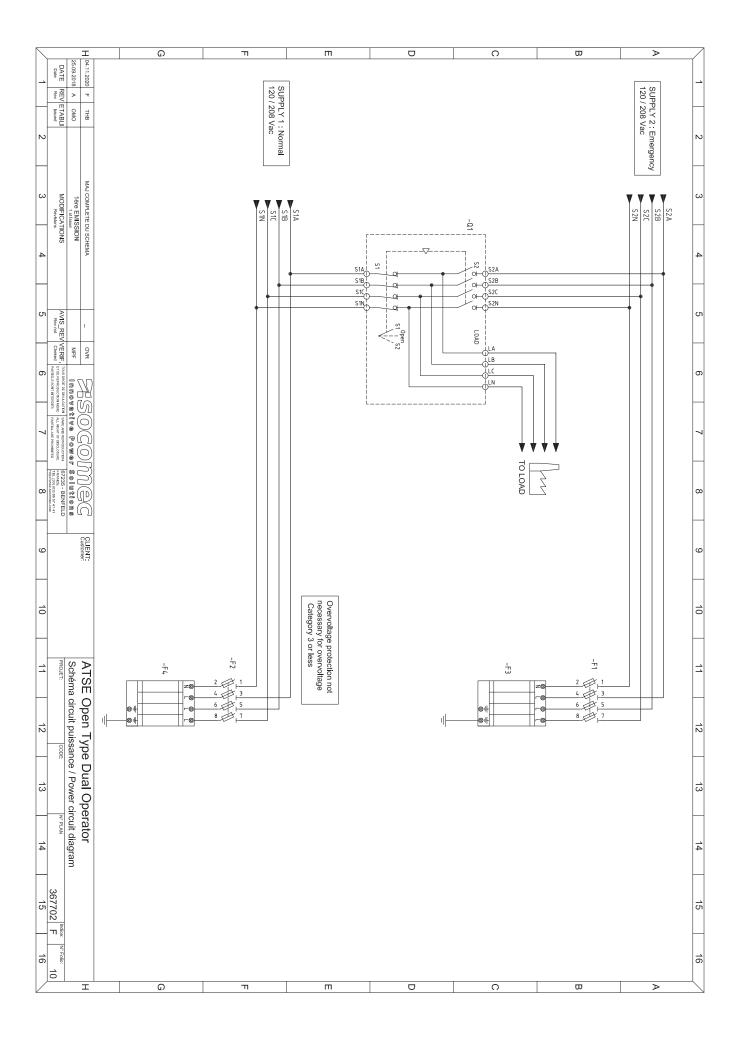

56 EN ATyS DT - 551764C - SOCOMEC

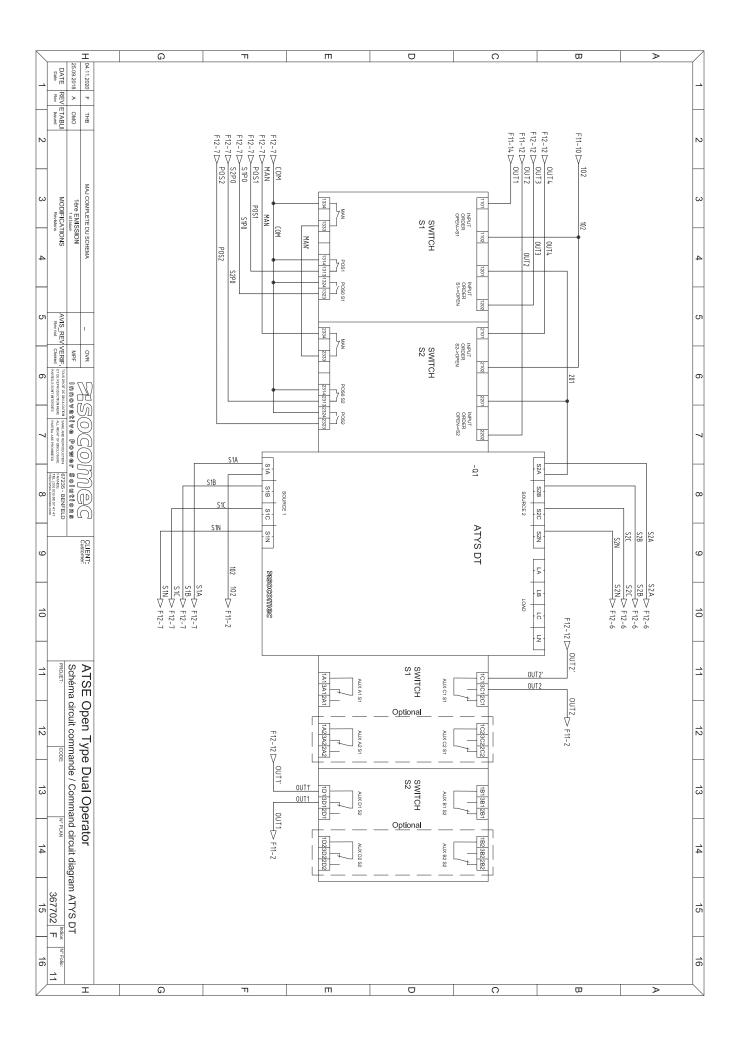

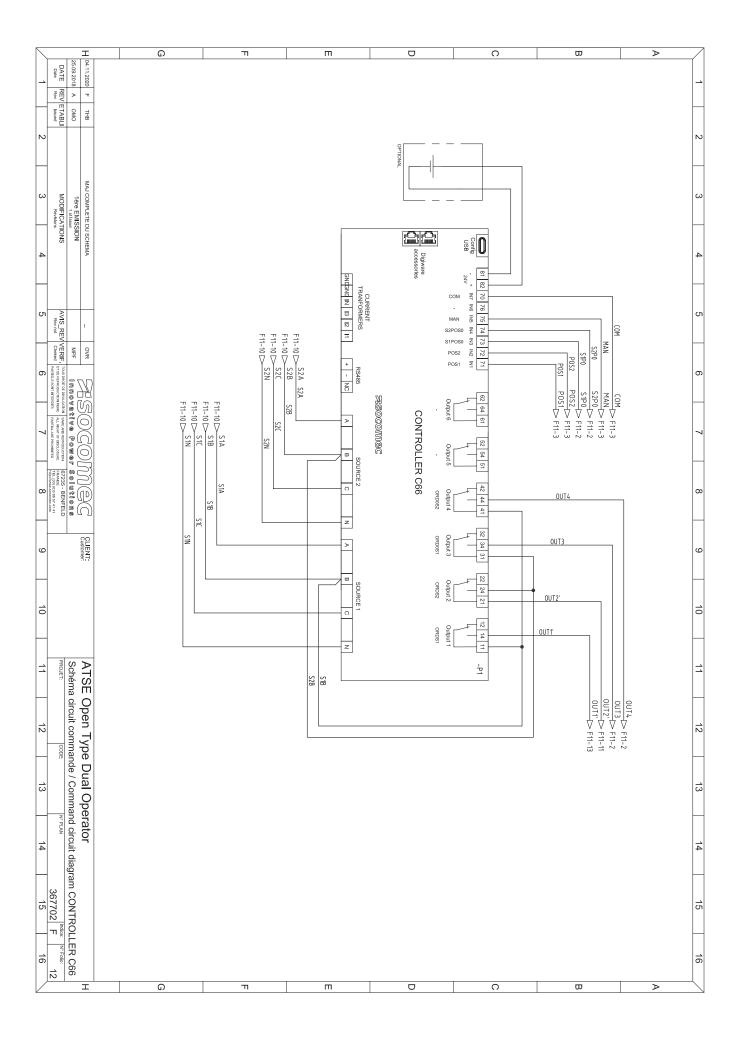


58 EN ATyS DT - 551764C - SOCOMEC




EN 59 ATyS DT - 551764C - SOCOMEC


	$\overline{}$		I 2		G		П			Ш			U			C)		Φ					⊳		7
-	DATE F	A 0107 60 E2	H 04.11.2020 F		Г				_	_				_											-	_
	REV ETABLI		-																12	1	10	02	01	FOLIO		4
_			, w			П				T									Schér	Schér	Schér	Liste		DESI	N	S
																			na circu	na circu	na drcı	Liste des folios / Sheet list	Page de garde / Cover sheet	DESIGNATION FOLIO		
C			MAJC																uit comn	it comn	asind tir	os / She	le / Cov	ON FOL		رن ان
	MODIFICATIONS Revisions	1 st lss	MAJ COMPLETE DU SCHEMA 1ère EMISSION																nande /	nande /	ance / F	et list	er shee	ō		~
	TIONS	5	DU SCHEN																Comma	Comma	ower c					
4			A																Schéma circuit commande / Command circuit diagram CONTROLLER C66	Schéma circuit commande / Command circuit diagram ATYS DT	Schéma circuit puissance / Power circuit diagram				t	4
F																			uit diagr	uit diagr	agram					+
O	AVIS		1																am COI	am AT\					c	ת
H	of Chek	N.	NO OVI																VTROL	'S DT						$\frac{1}{2}$
o	ET DE REP	1 7																	LER C6						c	ກ
L	RODUCTION MEN SONT INTERDITS	n n o v s	W 3	<u>/</u>															6							
_	ME ALL RIGHT O	8 A 13 C				П								1					П	П	F	П	П	INDICE	_	7
	DE DISICLOSURE E PROHISITED	18 18 O d	00)						+				+					0	ó	0,	ó				
	FRANCE TEL (33) (0 http://www.	. 801m		5															04.11.2020	04.11.2020	04.11.2020	04.11.2020	04.11.2020	DATE		
O	3.88 57.41.41 0000mec.com	REVIEW D)															ŏ	ő	ŏ	ŏ	ŏ			∞
																										1
٧			CUSTOMER																						ď	٥
																										-
2																									5	10
																										$\frac{1}{2}$
=	PROJET	LIS	<u> </u>																						=	1
	3	te de F	SE (
_		Liste de Folios/Sheet list	ATSE Open Type Dual Operator																							_
7	CODE	sheet	Тур																						7	J
		ISI	e Du																							1
C			al Op																						2	ż
	N° PLAN		perat																							$\frac{1}{2}$
4			악																						1	14
-	-																									$\frac{1}{2}$
5	367703																								-	75
	03 F																									
0	z																									16
	02		I		G		П	-		Ш	-		D		Т	C)		B			1		≻		
\angle					۵/		- "				1					٠.	•		55							1

60 EN

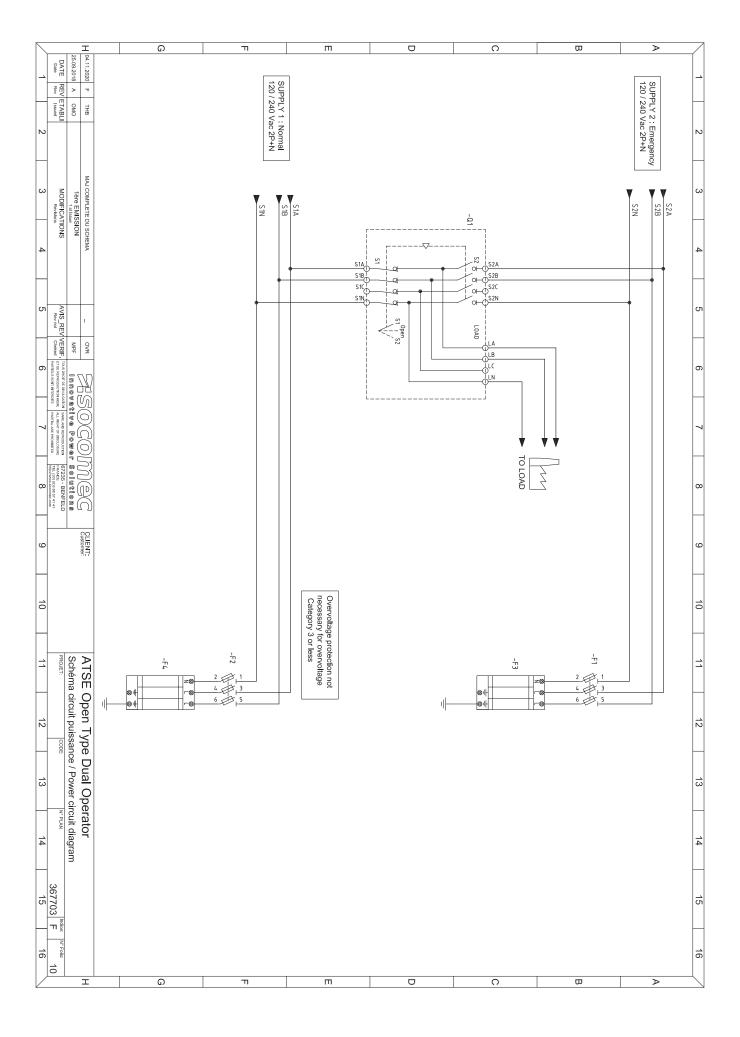

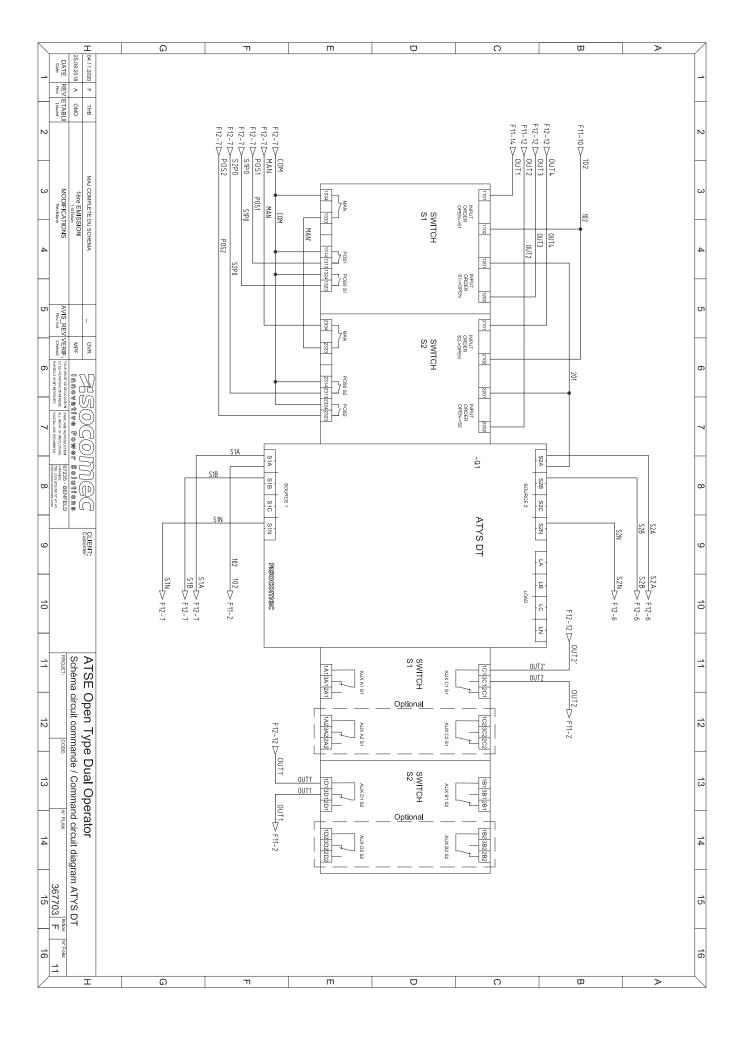


62 EN ATyS DT - 551764C - SOCOMEC

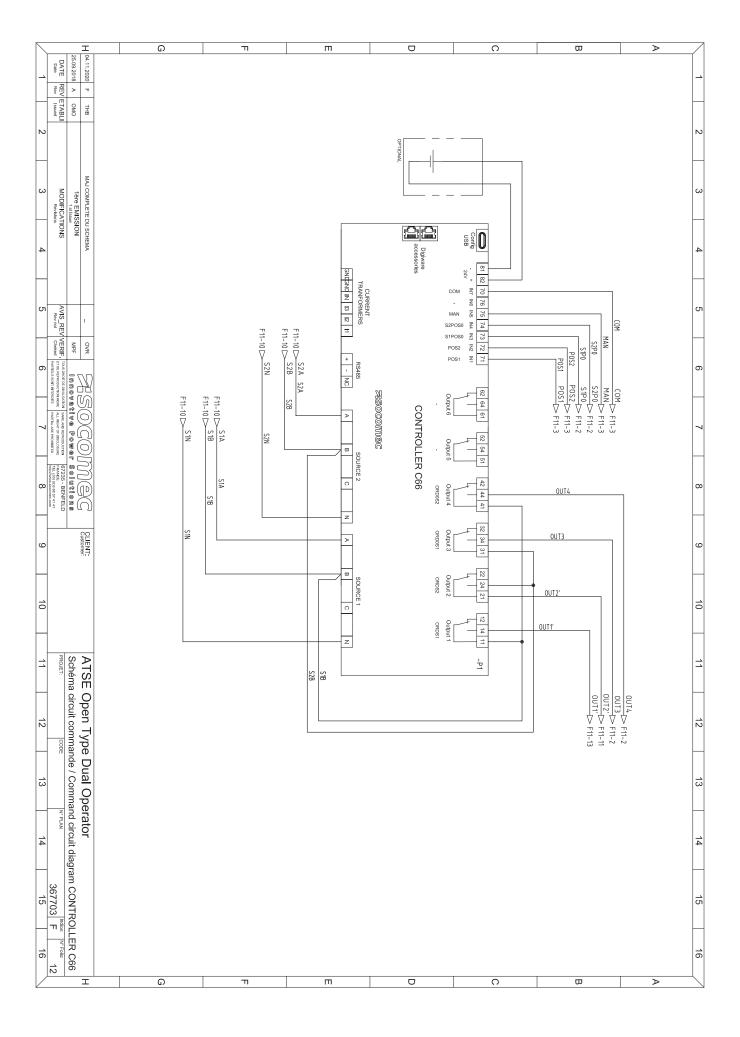





	DATE	H 04.11.2020	G	П	Ш		O		С		₪				≻	
	TE REV ETABLI	> >									12	1 2	02	01	FOLIO	_
2	FABLI ssued	THB													O DESIG	N:
											na circuit c	na circuit c	Liste des folios / Sheet list	de garde /	DESIGNATION FOLIO	
ω	MODIFICATIONS Revisions	1ère EMISSION									ommande	ommande	Sheet list	Page de garde / Cover sheet	OLIO:	c
	ATIONS	NOISSION									/ Commar	/ Commar	2	<u>e</u>		
4											id circuit di	Schéma circuit commande / Command circuit diag				4
51	AVIS										Schema dircuit commande / Command circuit diagram CONTROLLER C66	Schéma dircuit commande / Command circuit diagram ATYS DT	3			G
	REV VERIF.	OVR									NTROLLE	YS DT				
6	TOUS DROIT DE DIVI ET DE REPRODUCTIO PARTIELS SONT INTE										R C66					σ
7	NUMBRE ALLENGHT										D	>)	> >	>	INDICE	
	REPRODUCTION OF DISCLOSURE RE PROHISTED													_		
00	67235 - BENFELI FRANCE TEL (33) (0)3 88 57 41 41	OVR Innovative Power Solutions									04 11 2020	04.11.2020	04.11.2020	04.11.2020	DATE	α
9		CLIENT														9
		mer.														
10																10
	P															
11	PROJET:	ATSE (1
12		ATSE Open Type Dual Operator Liste de Folios/Sheet list														12
	CODE	ype D														
3		ual Op														13
	N° PLAN	erator														_
14																4
15	369316															15
	D Indice															
16	N° Folio:	I	G	П	т		D		C		B				⊳	16

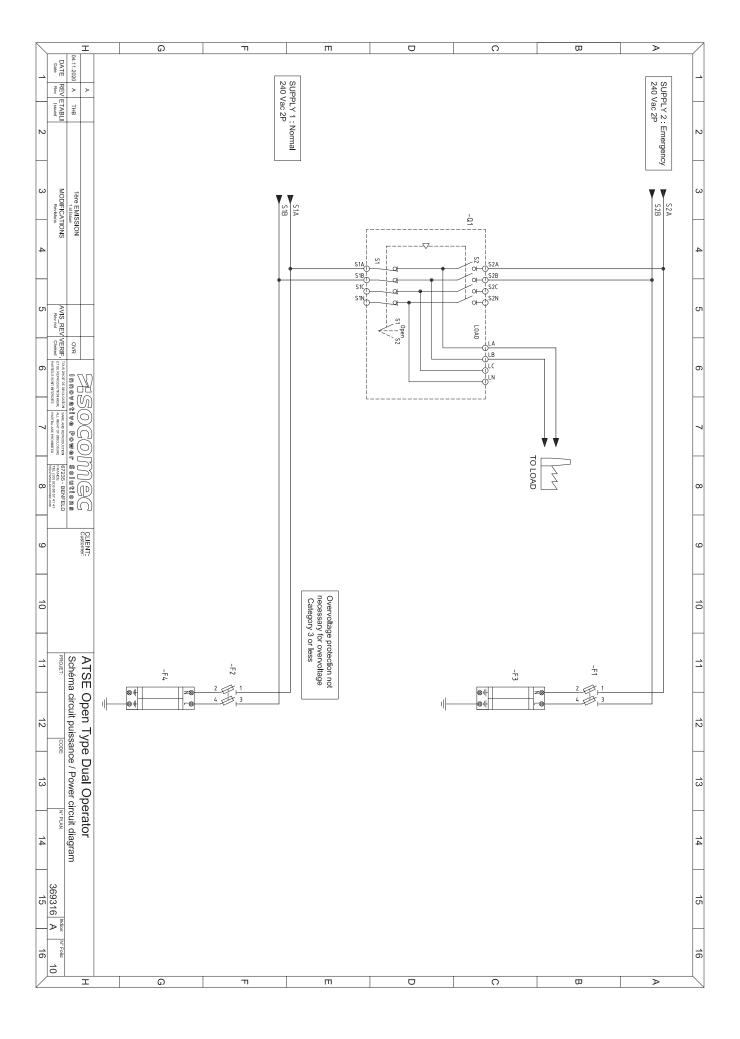

66 EN ATyS DT - 551764C - SOCOMEC

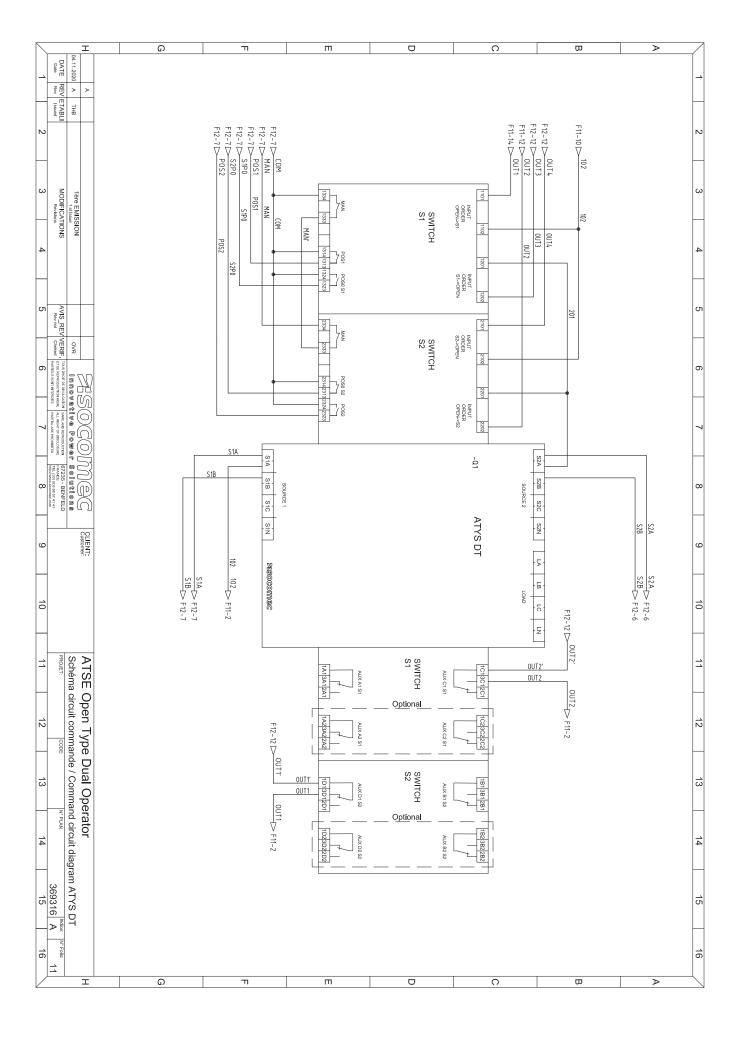


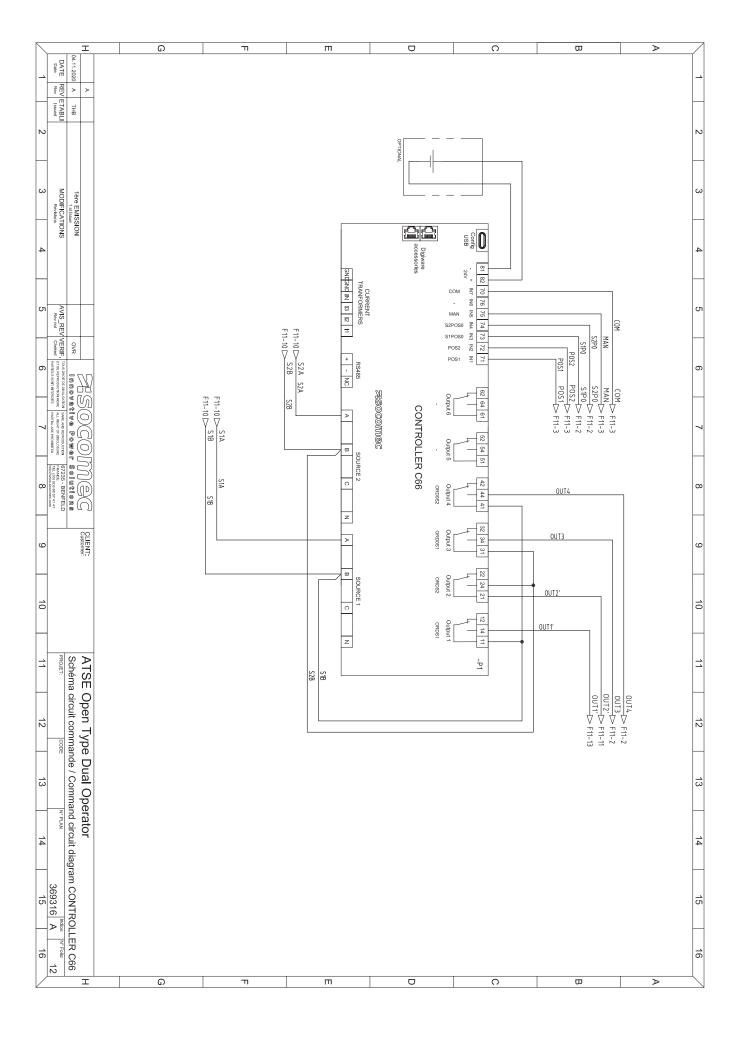





EN 69 ATyS DT - 551764C - SOCOMEC

		I	G	П	ш	D	0	œ	> /
	DATE F	04.11.2020							
	REV ETABLI	A A						12 11 10	FOLIO POLIO 01
2	3LI	ω						Schéma dro Schéma dro Schéma dro	
ω	MODIFI	1ère El						xult pulssance xult commande xult commande	2 3 DESIGNATION FOLIO Page de garde / Cover sheet Liste des folios / Sheet list
4	MODIFICATIONS Revisions	1ère EMISSION						Schéma dircuit pulssance / Power circuit diagram Schéma dircuit commande / Command dircuit diagram ATYS DT Schéma dircuit commande / Command dircuit diagram CONTROLLER C66	eet 4
ر ن	AVIS_RE							igram Jit diagram ATYS Jit diagram CONT	υ
6	Cheked PARTIELS SONT INTE	OVR Inna						DT ROLLER C66	6
7	SOFTS PARTIAL ARE PROM	SOCO						> > >	INDICE A
8	BTED http://www.sacomec.com	ove Innovative Power Solutions						04.11.2020 04.11.2020 04.11.2020	DATE 04.11.2020
9	- 6	CLIENT:							9
10									10
1	PROJET:	ATSE							
12	CODE	ATSE Open Type Dual Operator Liste de Folios/Sheet list							12
3		e Dual Ope list							13
14	N° PLAN	erator							14
15	369317 A								15
16	N° Folio:	I	ര	П	m	0	0	₩	16 A

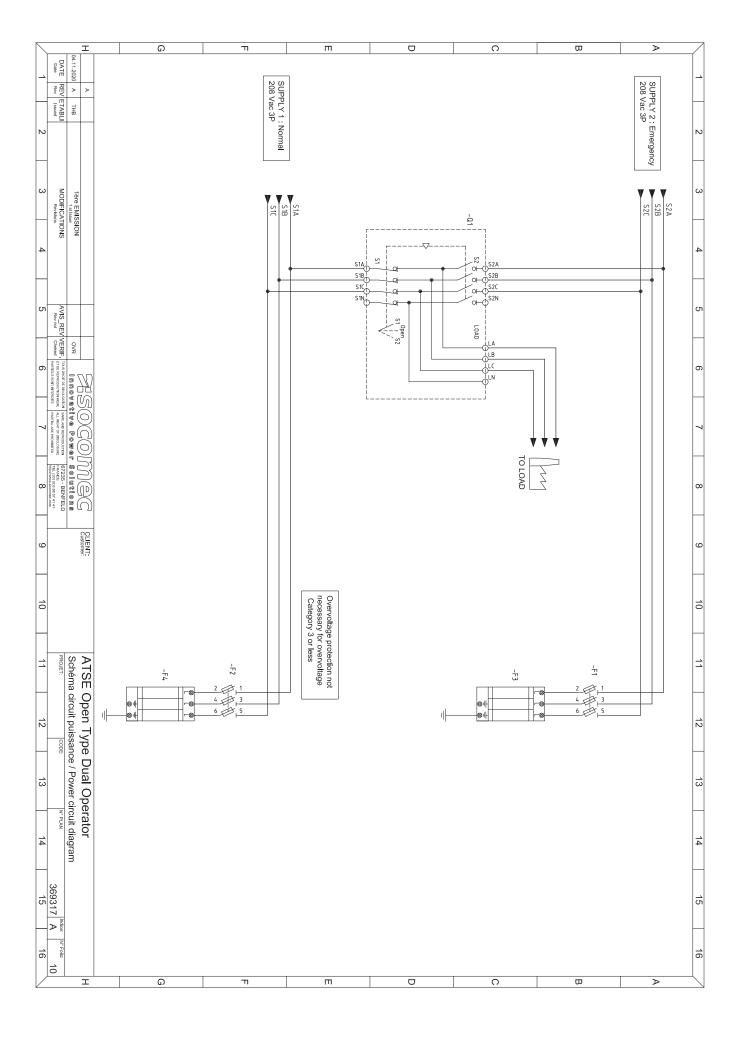


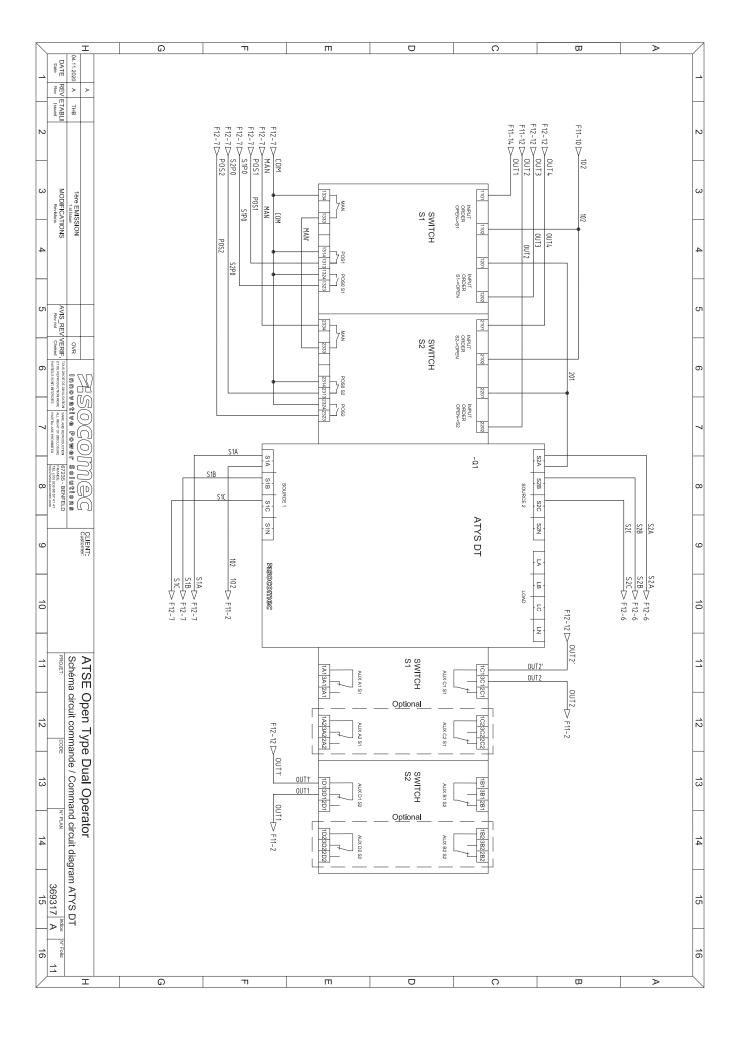

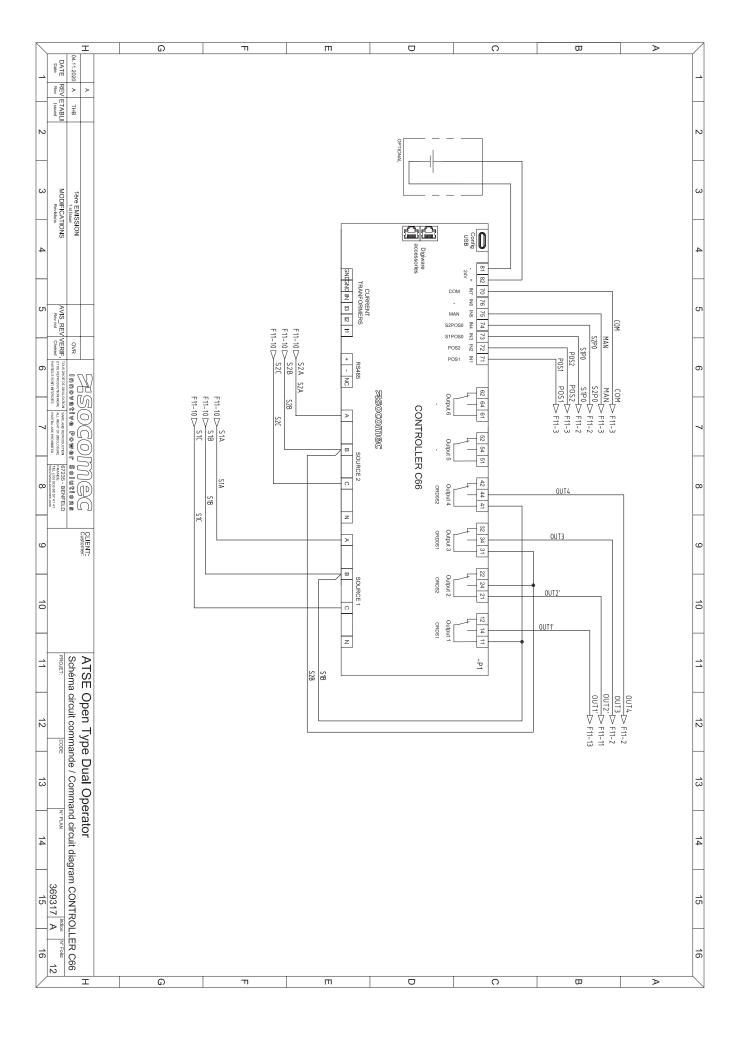





		H 02.11		G .		П	m	D		O	Ø				⊳	
_	DATE REV ETABLI		_								12		10	01	FOLIO	_
2	TABLI	OMO THB													IO DESI	2
											ma circuit	ma circuit	ma drcult	de garde	DESIGNATION FOLIO	
ω	MODIF	MAJ COMPLI 1ère E									Schéma circuit commande / Command circuit diagram CONTROLLER C66	Schéma circuit commande / Command circuit diagram ATYS DT	Schéma drcult pulssance / Power circuit diagram	Page de garde / Cover sheet	FOLIO	ω
	MODIFICATIONS Revisions	MAJ COMPLETE DU SCHEMA 1ère EMISSION 1 st Issue									e / Comma	e / Comm	t / Power c	eet		
4		MA									and circuit	and circuit	rcult dlag			4
5	AV										diagram (diagram /	ram			رن ن
	IS_REV VER	I 9									CONTROL	ATYS DT				
6	Ked PARTIELS SON	\$ \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\									LER C66					o
	DUCTION MEME ALL DUCTION MEME ALL PAR														7	
7	E AND REPRODUCTION RIGHT OF DISCLOSURI										~		× ×	_	INDICE	7
000	67235 - B FRANCE TEL (33) (0)3 8 http://www.soo	- ovr ASOCOMEC									02 11 2020	02 11 2020	02 11 2020	02.11.2020	DATE	8
L	B 57 41 41															
9		Customer														9
F																
10																10
11	PROJET	<u></u>	_													<u> </u>
L	JET:	TSE O														
12		ATSE Open Type Dual Operator Liste de Folios/Sheet list														12
	CODE	ype Du														
13		<u>ла</u> Ор														ವೆ
_	N° PLAN	erator														_
14																14
15	367701															15
-	スindios															
16	N° Folio: 02															16
\angle		I		<u>0</u>	1 .	П	П	D		С	₽				≻	

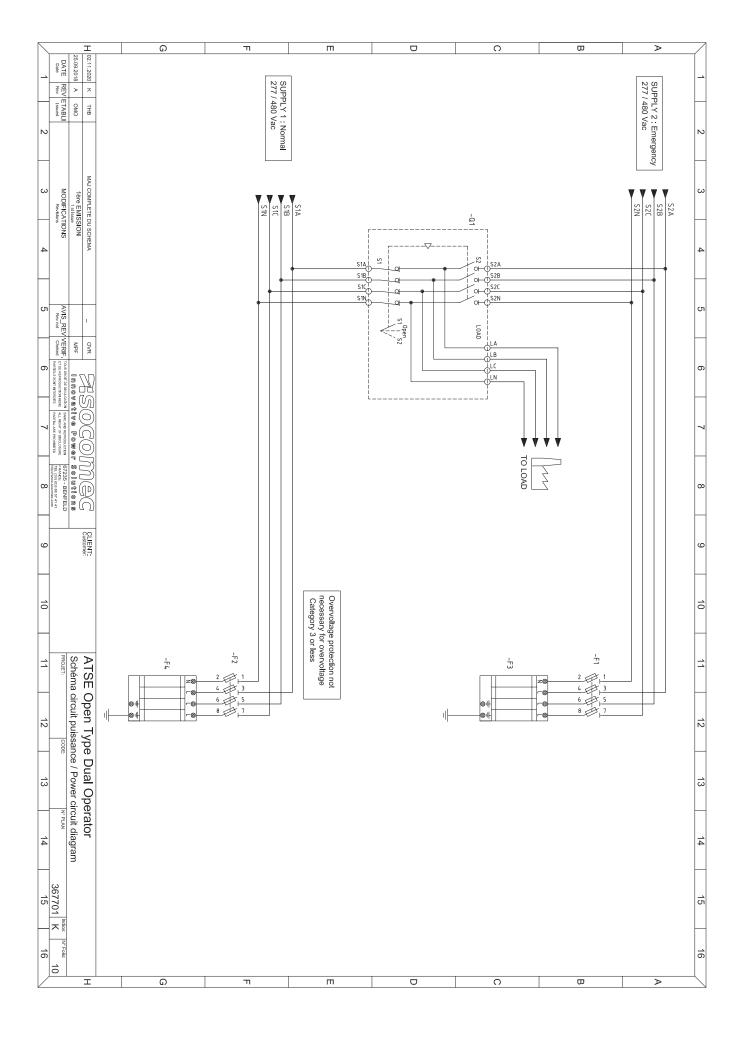

76 EN ATyS DT - 551764C - SOCOMEC

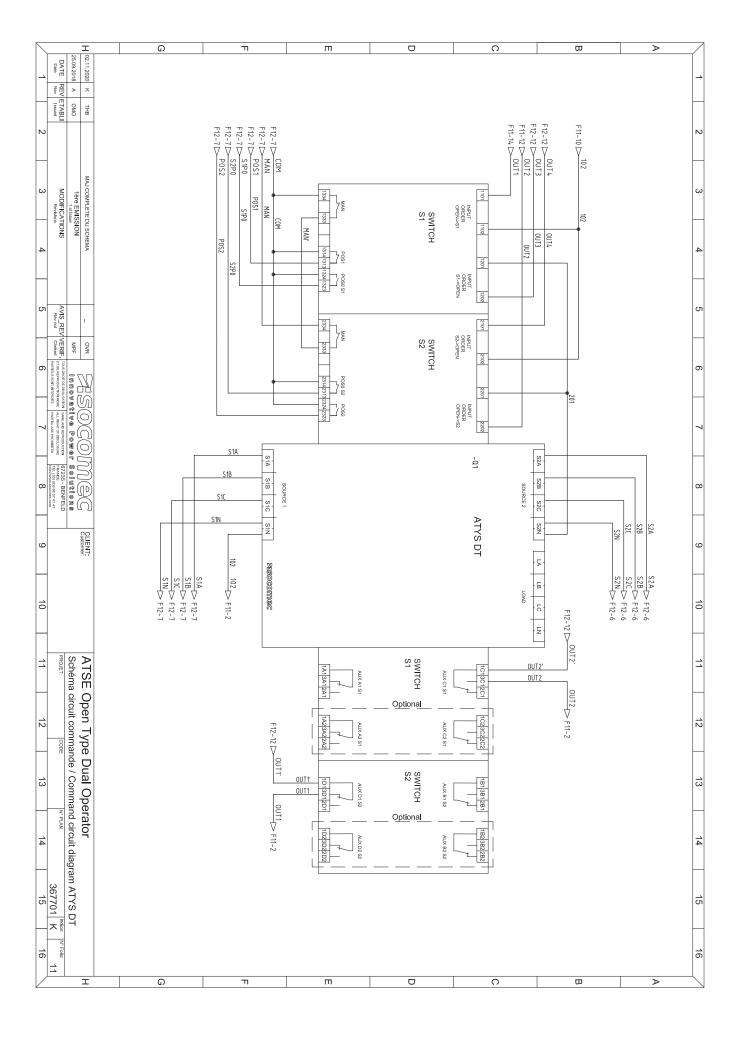


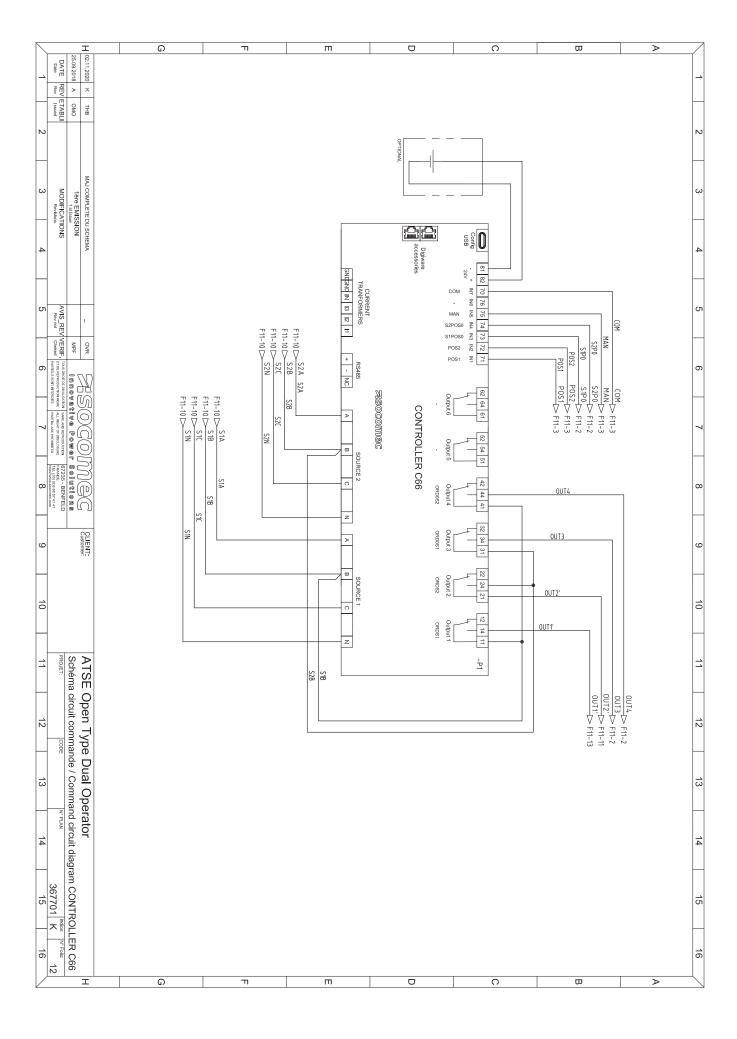





	_	2	I	G	П	m	D	0	Œ	>
-	Date Rev Issued	25.09.2018 A	H 17.02.2021 K							
	w Issued	OMO	-						12 11	FOLIO 01
7									Schéma circuit puissance / Power circuit diagram Schéma circuit commande / Command circuit diagram ATYS DT Schéma circuit commande / Command circuit diagram CONTROLLER C66	2 3 DESIGNATION FOLIO Page de garde / Cover sheet Liste des folios / Sheet list
			AJOU						cuit puis	ION FOL
C	MODIFICATIONS Revisions	1 stissue	T FUSIBLES						sance / F mande / mande /	LIO ver sheet list
4		i Sick	AJOUT FUSIBLES DU TRANSFO						ower circ Comman Comman	4
									cuit diagra	
U	. >	:							am diagram /	О
	Rev not C		1						ATYS DI	
σ	heked PARTIE	MPF	OVR)LLER C	6
	BPRODUCTION MEN & SONT INTERDITS	l m m o v a							66	
_	AVIS REVVERIF. Industrial sour kritikatis partia, ake projectionis (RAME) (RAME	4 @A[3							x x x	x x INDICE
	POHBITED	. 1 18 180 ©	<u>4</u>						17.0 17.0 17.0	
α	BRANCE TEL (33) (0)3 88 57 http://www.socome	Solutio							17.02.2021 17.02.2021 17.02.2021	DATE 17.02.2021 17.02.2021
	74141 0.00m	99	(A)							
ď			CLIENT:							9
0										10
Ξ	PROJET:	Liste	ATS							=======================================
		de Folic	E Op							
1		Liste de Folios/Sheet list	en Ty							12
	CODE	tlist	pe Du							
G			al Op							۵
	N° PLAN	-	ATSE Open Type Dual Operator							
4			٦							4
	36									
ö	367704 K									15
10	z									16
/	8		I	ര	П	m	D	0		>
\vee			_		•					

80 EN

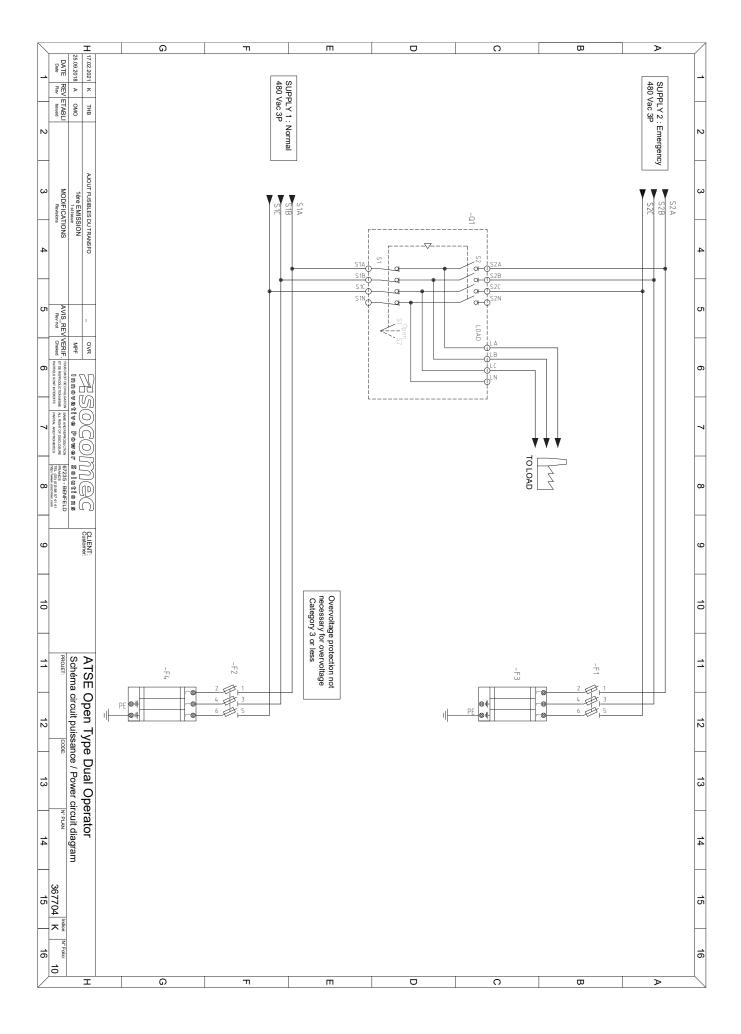

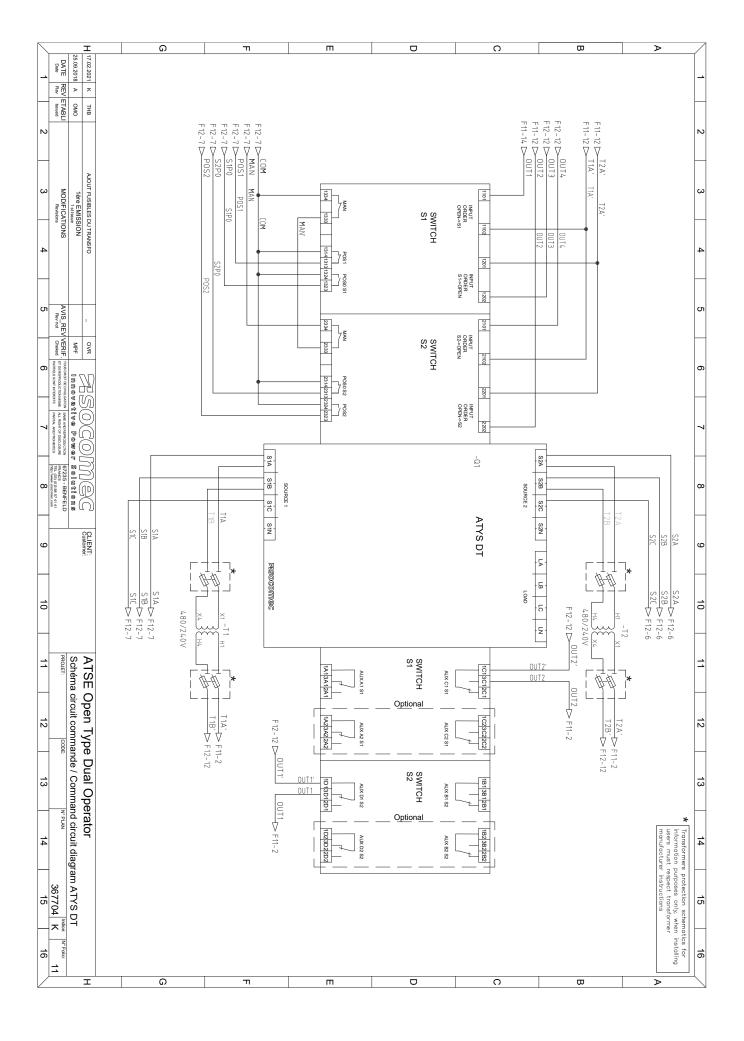

82 EN ATyS DT - 551764C - SOCOMEC

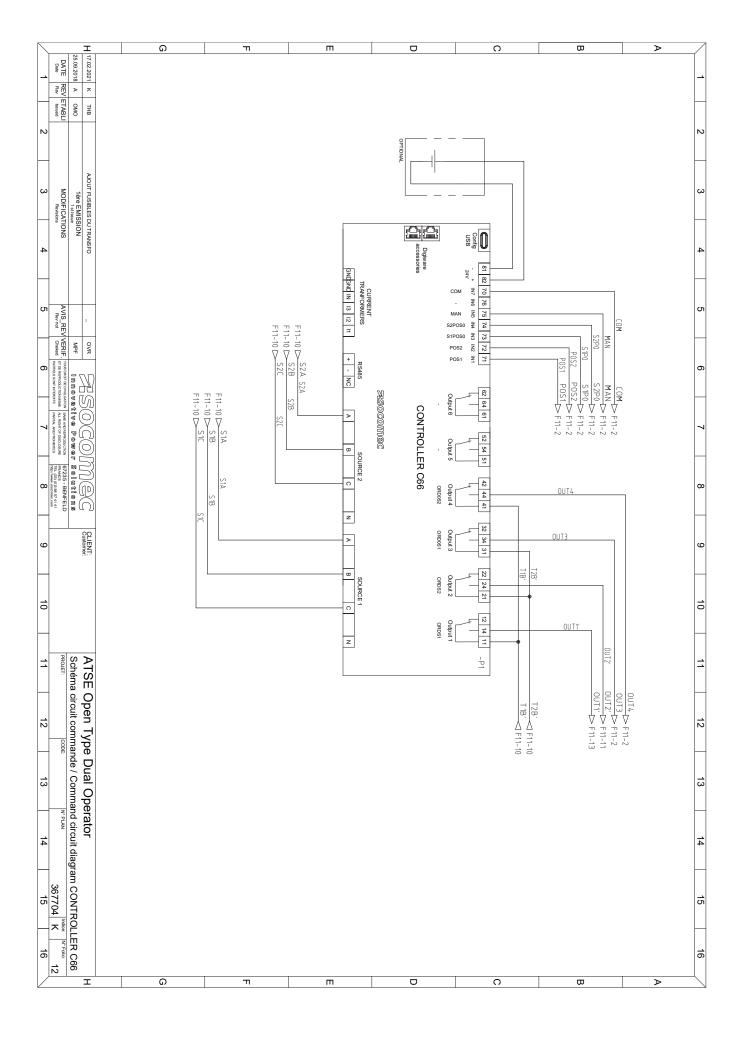

CORPORATE HQ CONTACT: SOCOMEC SAS 1-4 RUE DE WESTHOUSE 67235 BENFELD, FRANCE

www.socomec.com



