




ATyS UL 1008

Transfer Switching Equipment

EN

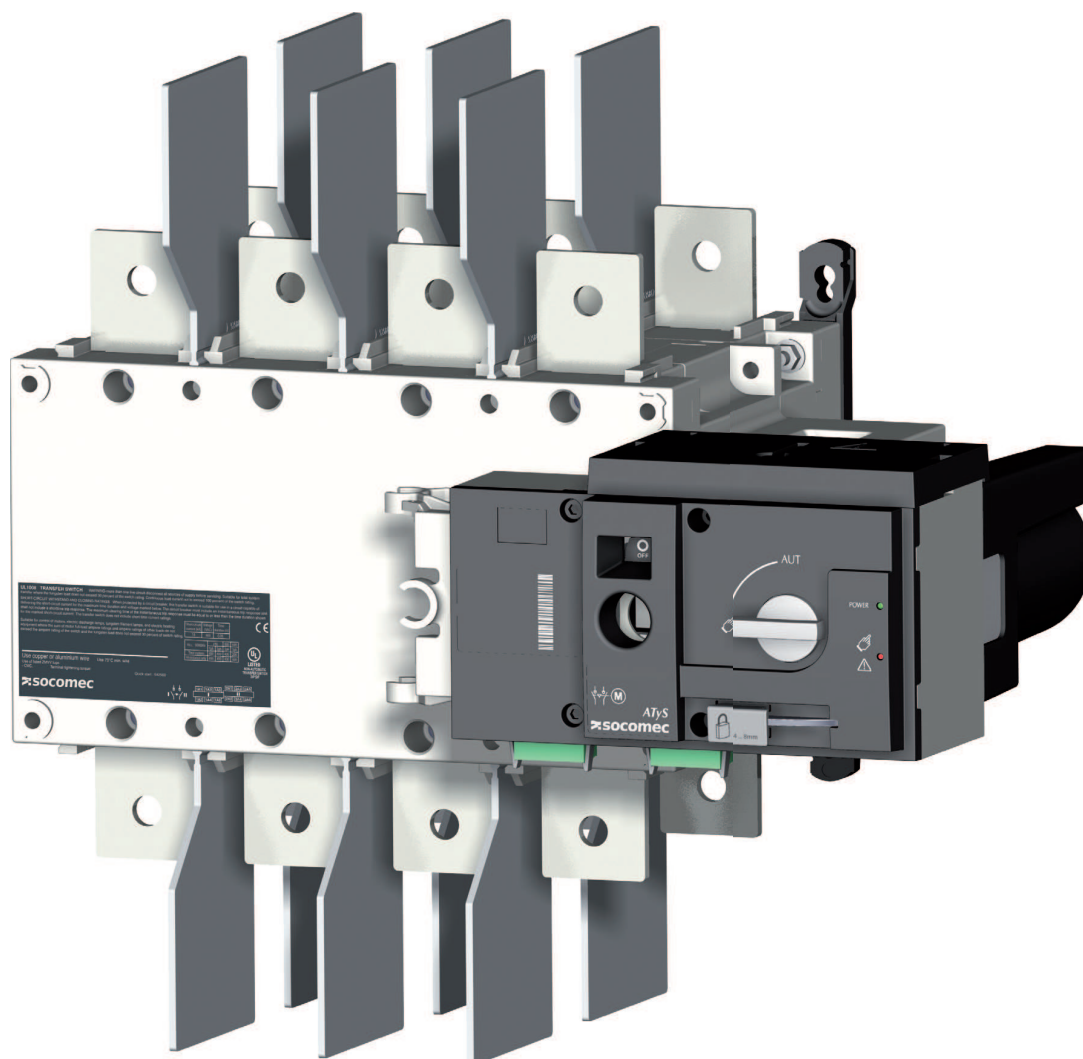

www.socomec.com
www.socomec.com/operating-instructions
To download, brochures, catalogues and technical manuals.

socomec
Innovative Power Solutions

INDEX

1. GENERAL SAFETY INSTRUCTIONS	4
2. INTRODUCTION	5
3. QUICK START	6
3.1. QUICK START ATYS UL 1008 FRAME B4 TO B5 (100A TO 400A)	6
3.1. QUICK START ATYS UL 1008 FRAME B4 TO B5 (100A TO 400A) CONTINUED	8
3.2. QUICK START ATYS UL 1008 FRAME B6 TO B7 (600A TO 1200A)	10
3.2. QUICK START ATYS UL 1008 FRAME B6 TO B7 (600A TO 1200A) CONTINUED	12
4. GENERAL OVERVIEW	14
4.1. PRODUCT INTRODUCTION	14
4.2. PRODUCT IDENTIFICATION	15
4.3. ENVIRONMENTAL	16
4.3.1. IP RATING IEC 60529	16
4.3.2. OPERATING CONDITIONS	16
4.3.2.1. TEMPERATURE	16
4.3.2.2. HYGROMETRY	16
4.3.2.3. ALTITUDE	16
4.3.3. STORAGE CONDITIONS	16
4.3.3.1. TEMPERATURE	16
4.3.3.2. STORAGE DURATION PERIOD	16
4.3.3.3. STORAGE POSITION	16
4.3.4. VOLUME AND SHIPPING WEIGHTS BY REFERENCE ATYS	17
4.3.5. UL MARKING	17
4.3.6. CE MARKING (FROM 100 TO 400A)	17
4.3.7. 2011/65/EU ROHS	17
5. INSTALLATION	18
5.1. PRODUCT DIMENSIONS: FRAME B4 TO B5 (100A TO 400A)	18
5.2. PRODUCT DIMENSIONS: FRAME B6 TO B7 (600A TO 1200A)	19
5.3. MOUNTING ORIENTATION	20
5.3.1. MOUNTING ORIENTATION FOR 100 TO 400A	20
5.3.2. MOUNTING ORIENTATION FOR 600 TO 1200A	20
5.4. ASSEMBLY OF CUSTOMER MOUNTED ACCESSORIES	20
5.4.1. BRIDGING BARS (OPTIONAL ACCESSORY)	21
5.4.2. MOUNTING OF TERMINAL COVERS (OPTIONAL ACCESSORY)	22
5.4.2.1. TERMINAL COVER FOR 100 TO 200A	22
5.4.2.2. TERMINAL COVER FOR 260 TO 400A	22
5.4.2.3. TERMINAL COVER FOR 600 TO 1200A	23

5.4.3. MOUNTING OF ADDITIONAL AUXILIARY CONTACTS FOR 100 TO 400A (OPTIONAL ACCESSORIES) . . .	23
5.4.4. POWER TERMINAL CONNECTIONS (OPTIONAL ACCESSORIES)	24
5.4.4.1. POWER TERMINAL CONNECTIONS FOR 100 TO 400A	24
5.4.4.2. POWER TERMINAL CONNECTIONS FOR 600 TO 1200A	25
5.5. CONTROL CIRCUITS.	26
5.5.1. TYPICAL ATYS WIRING (480/277 VAC)	26
5.5.2. TYPICAL ATYS WIRING (208/120 VAC)	26
5.5.3. ATYS INPUT AND OUTPUT CONTACTS	27
5.5.3.1. TERMINAL DENOMINATION, DESCRIPTION AND CHARACTERISTICS.	27
6. ATYS OPERATING MODES	28
6.1. MANUAL OPERATION	29
6.2. PADLOCKING	29
6.3. ELECTRICAL OPERATION	30
6.3.1. POWER SUPPLY	30
6.3.2. FIXED INPUTS	30
6.3.2.1. DESCRIPTION	30
6.3.2.2. TECHNICAL DATA (FIXED INPUTS)	31
6.3.2.3. CONTROL LOGIC	31
6.3.3. FIXED OUTPUTS - DRY CONTACTS.	32
6.3.3.1. DESCRIPTION	32
6.3.3.2. POSITION AUXILIARY CONTACT	32
6.3.3.3. ATYS PRODUCT AVAILABLE OUTPUT (MOTORISATION)	32
6.3.3.4. TECHNICAL DATA (FIXED OUTPUTS)	33
7. CHARACTERISTICS	34
8. PREVENTIVE MAINTENANCE	35
9. TROUBLE SHOOTING GUIDE	35
10. THE ATYS FAMILY	36
10.1. THE ATYS RANGE KEY FEATURES	36
11. ATYS FAMILY: ORDERING INFORMATION	38

1. GENERAL SAFETY INSTRUCTIONS

- This manual provides instructions on safety, connections and operation of the ATYS transfer switch manufactured by SOCOMEC.
- Whether the ATYS is sold as a loose product, as a spare, as an enclosed solution or as any other configuration, this device must always be installed and commissioned by qualified and experienced personnel, in line with the manufacturers recommendations, following good engineering practices and after having read and understood the details in the latest release of the relative product instruction manual.
- Maintenance on the product and any other associated equipment including but not limited to servicing operations must be performed by adequately trained and qualified personnel.
- Each product is shipped with a label or other form of marking including rating and other important specific product information. One must also refer to and respect markings on the product prior to installation and commissioning for values and limits specific to that product.
- Using the product outside the intended scope, outside SOCOMEC recommendations or outside the specified ratings and limits can cause personal injury, death and/or damage to equipment.
- This instruction manual must be made accessible so as to be easily available to anyone who may need to read it in relation with the ATYS.
- The ATYS meets the harmonised ANCE, CSA, UL 1008 standard (December 2014 approved by ANSI) governing this type of product and includes CE marking on each product.
- No covers on the ATYS should be opened (with or without voltage) as there may still be dangerous voltages inside the product such as those from external circuits.
- **Do not handle any control or power cables connected to the ATYS when voltage may be present on the product directly through the mains or indirectly through external circuits.**
- Voltages associated with this product may cause injury, electric shock, burns or death. Prior to carry out any maintenance or other work on live parts or other parts in the vicinity of exposed live parts, ensure that the switch including all control and associated circuits are de-energized.

 DANGER	 WARNING	 CAUTION
RISK: Electric shock, burns, death	RISK: Possible personal injury	RISK: Equipment damage

- As a minimum the ATYS complies with the following international standards:
 - UL 1008
 - IEC 60947-6-1 for 100 to 400A

Refer to the specific reference numbers at the back of this document to order the right UL 1008 and other IEC certified products.

The information provided in this instruction manual is subject to change without notice, remains for general information only and is non-contractual.


2. INTRODUCTION

ATYS transfer switches are designed for use in **total system optional standby** power applications for the safe transfer of a load supply between a normal and an alternate source. The changeover is done in open transition and with minimum supply interruption during transfer ensuring full compliance with UL 1008, IEC 60947-6-1 as listed.

The ATYS is a full load break (switch type) transfer switching equipment where the main switching components are proven technology devices also fulfilling requirements in UL98 and IEC 60947-3 standards.

ATYS transfer switching equipment ensures:

- Power Control and Safety between a normal and an alternate source.
 - A complete product delivered as a fully assembled and tested solution.
 - Intuitive HMI for local operation.
 - Integrated and robust switch disconnection.
 - A stable OFF position with built in padlocking to facilitate safe maintenance.
 - A window with clearly visible position indication I – 0 - II.
 - An inherent failsafe mechanical interlock.
 - Stable positions (I – 0 – II) non affected by typical vibration and shock.
 - Constant pressure on the contacts non affected by network voltage.
 - Energy Efficient with virtually no consumption whilst on the normal, alternate or off positions.
 - Quick, easy and safe dual “on-load” emergency manual operation.
(Manual operation is functional with and without the motorization in place).
 - Straight forward installation with effective ergonomics.
 - Minimal downtime with the possibility to perform easy maintenance.
 - Simple and secure motorization remote controls interface.
 - Integrated switch position auxiliary contacts.
 - An active “product availability” status feedback.
 - Ample accessories to suit specific requirements.
 - Compatibility with virtually any make of ATS, AMF, Genset controller provided with volt free contacts.
-
- Power supply continuity for most total system optional standby power applications.

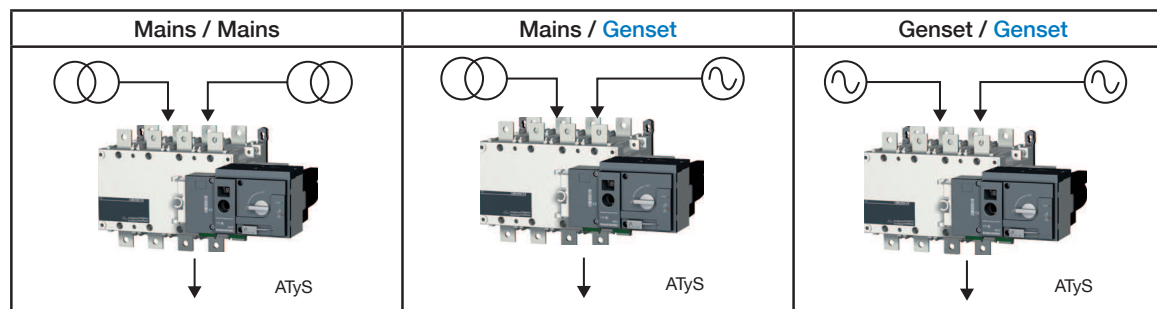

3. QUICK START

3.1. Quick Start ATYS UL 1008 Frame B4 to B5 (100A to 400A)

socomec
Innovative Power Solutions

QUICK START

ATyS 

Transfer Switch
UL 1008: Optional Standby Power
100A, 200A, 260A, 400A

Preliminary operations

Check the following upon delivery and after removal of the packaging:

- Packaging and contents are in good condition.
- The product reference corresponds to the order.
- Contents should include:
Qty 1 x ATyS
Qty 1 x Emergency handle and fixing clip
Quick Start instruction sheet

Warning

 Risk of electrocution, burns or injury to persons and / or damage to equipment.

This Quick Start is intended for personnel trained in the installation and commissioning of this product. For further details refer to the product instruction manual available on the SOCOMECS website.

- This product must always be installed and commissioned by qualified and approved personnel.
- Maintenance and servicing operations should be performed by trained and authorised personnel.
- Do not handle any control or power cables connected to the product when voltage may be, or may become present on the product, directly through the mains or indirectly through external circuits.
- Always use an appropriate voltage detection device to confirm the absence of voltage.
- Ensure that no metal objects are allowed to fall in the cabinet (risk of electrical arcing).

Failure to observe good engineering practises as well as to follow these safety instructions may expose the user and others to serious injury or death.

 Risk of damaging the device

- In case the product is dropped or damaged in any way it is recommended to replace the complete product.

Accessories

- Bridging bars and connection kits.
- Terminal screens.
- Auxiliary contacts (Additional).
- Terminal lugs.

Spares

- Motorisation module

For further details for spares and accessories, please refer to the instruction manual in chapter - "Spare parts and accessories"

www.socomec.com
To download, brochures, catalogues and technical manuals:



<http://www.socomec.com/en/atys-ul-1008>

Printing informations: 1 color Black. White paper 90g/m².
Printing size: 420x297. Final size 210x297. This page visible first.



CE **UL 1008**

542 563 C - 12/14 - EN Non contractual document. Subject to change without notice.

Installation and Commissioning

STEP 1
Cabinet / Back Plate
Installation

STEP 2
Connecting the
POWER section

STEP 3
COMMAND /
CONTROL terminal
connections


STEP 4
Power SUPPLY
terminal connections

STEP 5
CHECK

STEP 6A
Control by an external
order (AUTO)

STEP 6B
Emergency Manual
Operation




STEP 6C
Padlocking

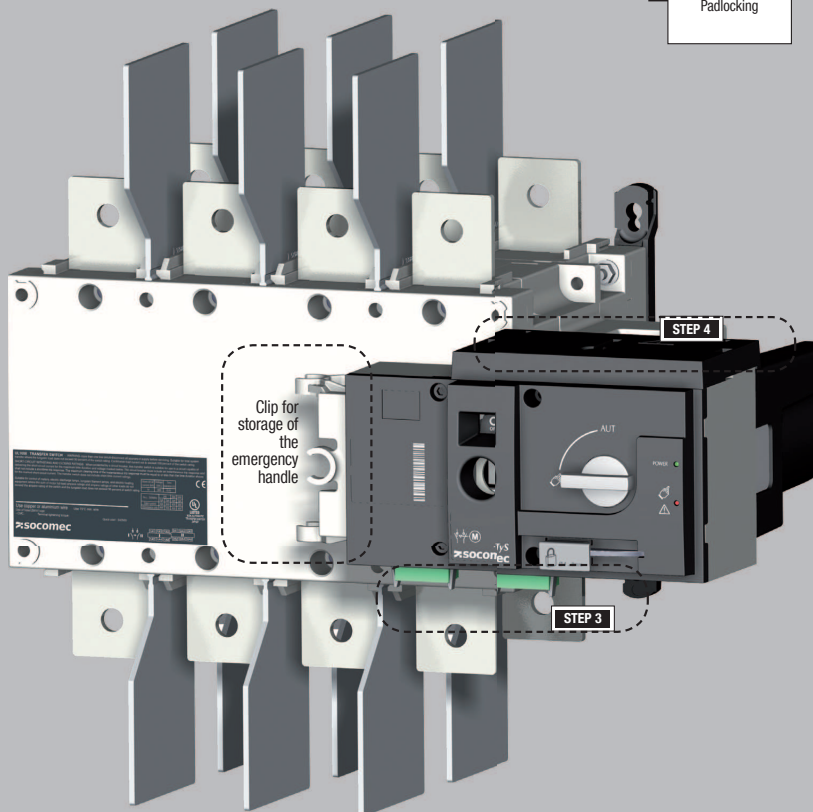

STEP 1A


Installation

Attention: Ensure that the product is installed on a flat rigid surface.

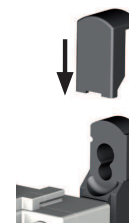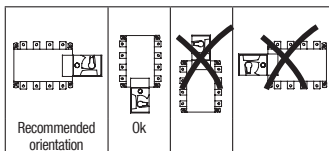


	FRAME B4						FRAME B5					
	100 A			200 A			260 A			400 A		
	2P	3P	4P	2P	3P	4P	2P	3P	4P	2P	3P	4P
Ref ATyS UL	97232010	97233010	97234010	97232020	97233020	97234020	97232026	97233026	97234026	97232040	97233040	97234040
Dim. code	1	1	2	1	1	2	3	3	4	3	3	4

STEP 1B

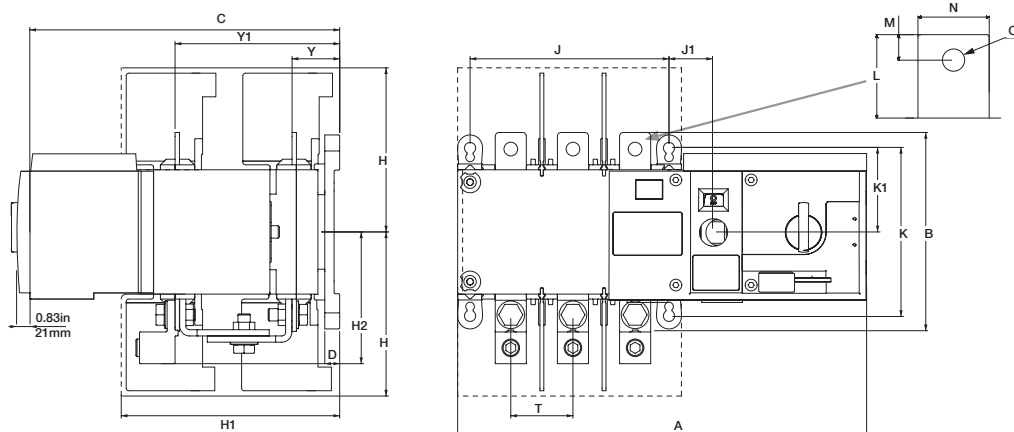

Dimensions in/mm

Ref. code		A	B	C	D	H	H1	H2	J	J1	K	K1	L	M	N	O	T	Y	Y1																			
		in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm																			
1	2/3P	12.91	328	6.30	160	9.60	244	0.41	10.5	5.08	129	6.8	173	4.21	107	6.30	160	210	1.37	35	7.67	195	3.84	97.5	1.18	30	0.53	13.3	0.98	25	0.43	11	2	50	1.51	38.5	5.21	132.5
2	4P	14.88	378													8.26	210																					
3	2/3P	14.84	377	10.23	260	12.62	320.5	0.41	10.5	8	200	9.7	247	6.53	166	8.26	210	270	1.37	35	7.67	195	3.84	97.5	1.96	50	0.49	20	1.38	45	0.51	13	2.6	65	2.04	52	7.48	190
4	4P	17.20	437													10.63	270																					

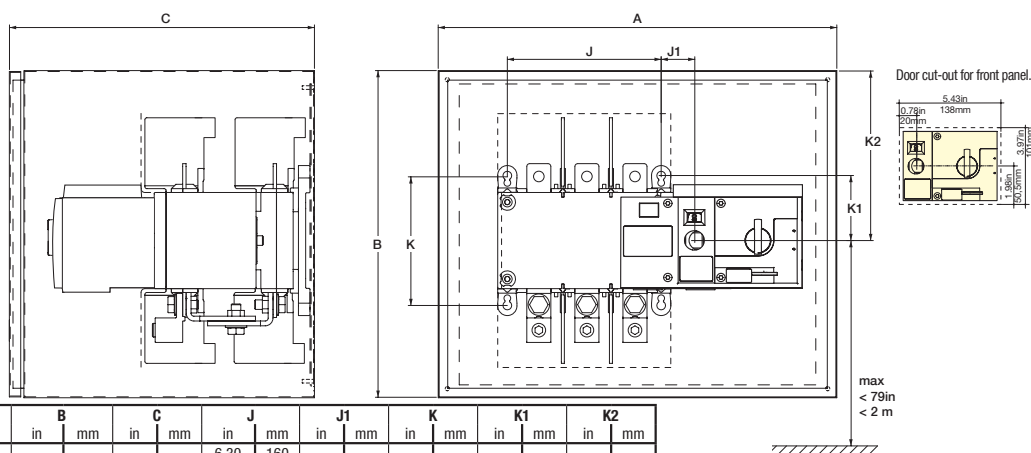


Dimensions in/mm


Ref. code		A		B		C		J		J1		K		K1		K2	
		in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm
①	2/3P	24	610	24	610	12	305	6.30	160	1.37	35	5.31	135	2.67	68	12	305
②	4P							8.26	210								
③	2/3P	32	813	32	813	16	406	8.26	210	1.37	35	7.67	195	3.84	97,5	15	381
④	4P							10.63	270								

STEP 2A

Bridging bars (optional accessory)

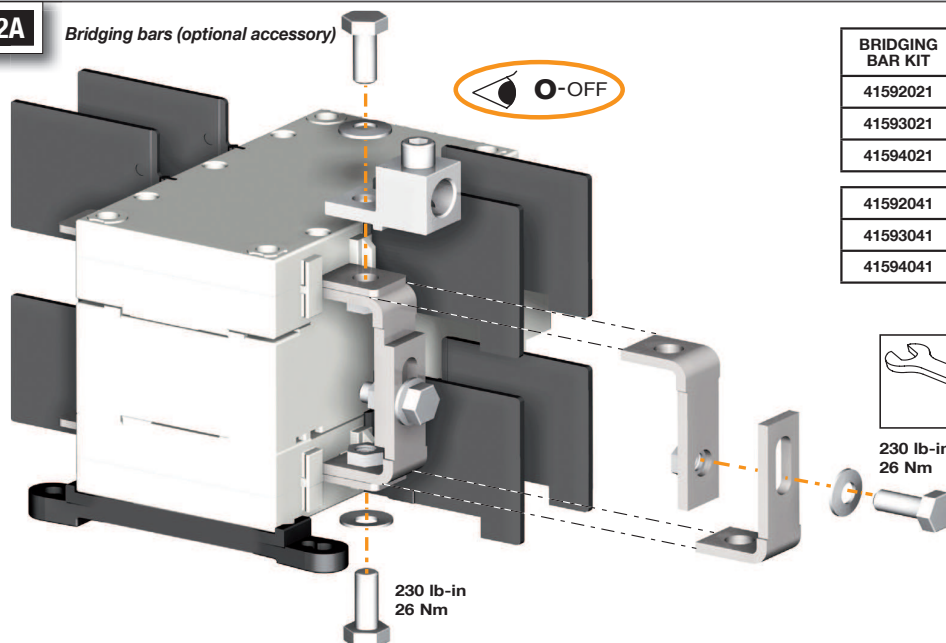

BRIDGING BAR KIT	USED FOR ATYS REF.
41592021	97232010 / 97232020
41593021	97233010 / 97233020
41594021	97234010 / 97234020
41592041	97232026 / 97232040
41593041	97233026 / 97233040
41594041	97234026 / 97234040





230 lb-in
26 Nm

3.1. Quick Start ATYS UL 1008 Frame B4 to B5 (100A to 400A) continued


STEP 2B

Power Terminal Connections (optional accessories)

To be connected using terminal lugs, rigid or flexible busbars.


	FRAME B4						FRAME B5					
	100 A			200 A			260 A			400 A		
	2P	3P	4P	2P	3P	4P	2P	3P	4P	2P	3P	4P
Ref ATYS	97232010	97233010	97234010	97232020	97233020	97234020	97232026	97233026	97234026	97232040	97233040	97234040
Ref lugs	39542020	39543020	39544020	39542020	39543020	39544020	39542040	39543040	39544040	39542040	39543040	39544040
Qty per reference	2	3	4	2	3	4	2	3	4	2	3	4
Ref qty to order	x3	x3	x3	x3	x3	x3	x3	x3	x3	x3	x3	x3
Désignation	 CMC LA300-R						 CMC LA630-R					
Size (AWG) min.	# 6						# 4 1/0					
Size (AWG) max.	300 Kcmil						600 Kcmil - 250 Kcmil					
Opening per lug	1						1 2					
Size of screw	13						17					
Torque lb.in / mm	160 / 18						310 / 35					

When ordering ensure to order QTY 3 for each lug reference
(Quantity 2 for incoming power cables and quantity 1 for outgoing cables)

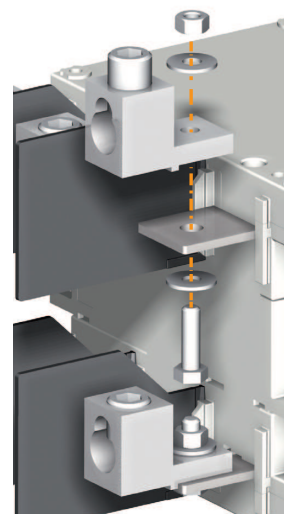


STEP 2C

Mounting of terminal covers (optional accessory)

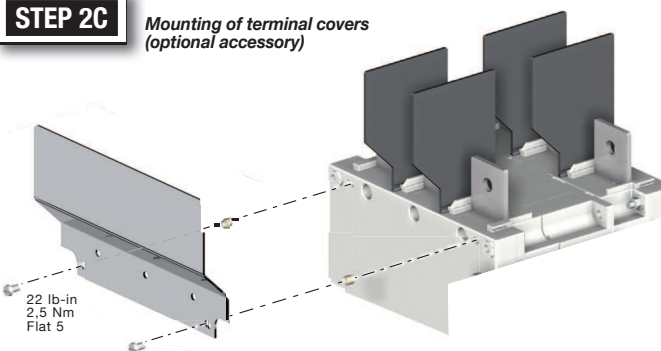

22 lb-in
2,5 Nm
Flat 5

Ref. TOP or BOTTOM	USED FOR
41583041	97232026 / 97232040 97233026 / 97233040
41584041	97234026 / 97234040

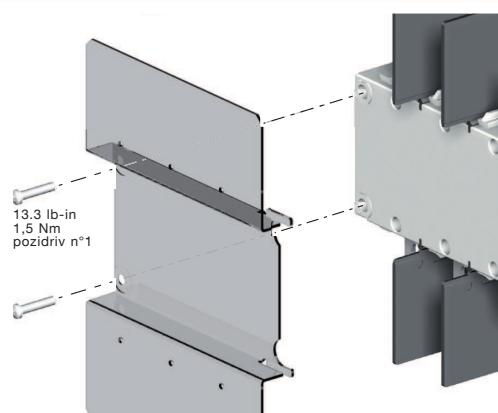


13.3 lb-in
1,5 Nm
pozidriv n°1


Ref.	USED FOR
41583021	97232010 / 97232020 97233010 / 97233020
41584021	97234010 / 97234020

STEP 3A


Mounting of additional auxiliary contacts (optional accessories)

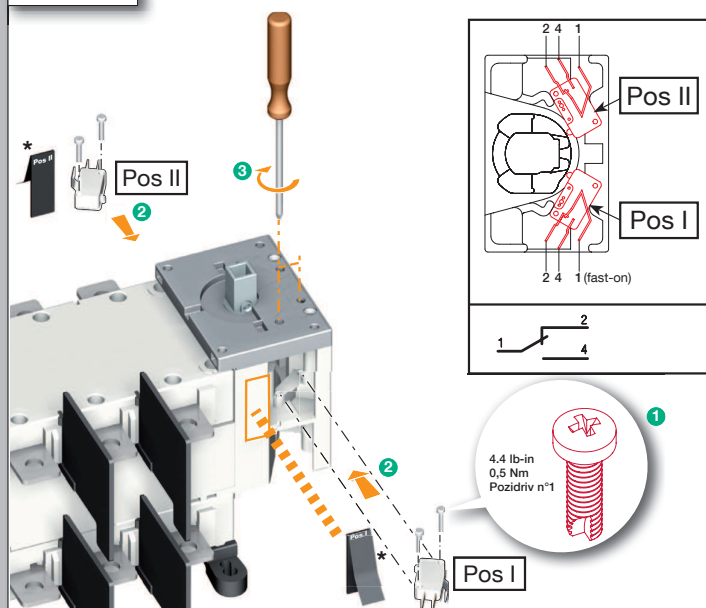

41590021
125 - 250 V a.c. 60 Hz
General Use 10A
1/2 HP
I min. 100 mA


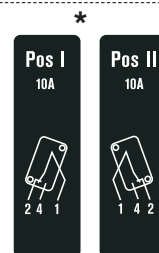


41590022
125 V a.c. 60 Hz
General Use 1A

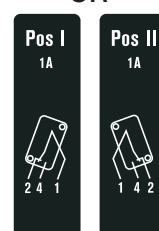

STEP 3B




CONTROL / COMMAND Terminals - Ensure that the product is in Manual Mode.

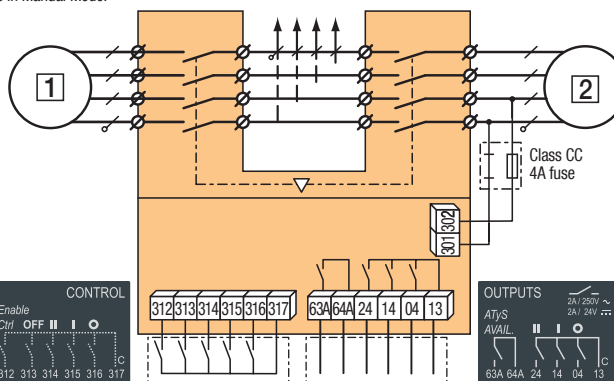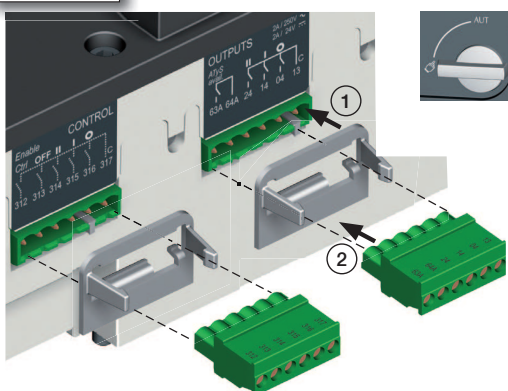

Connect the product with a cable of section of 24 to 16 AWG.
Screw M3 - Tightening torque: min.: 5 lb-in - max. 7 lb-in.

STEP 4

Power Supply Terminal - Remove the Top cover to access and connect the terminal - Replace the cover before putting in service.

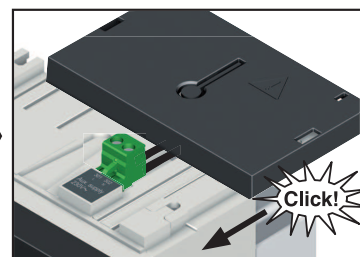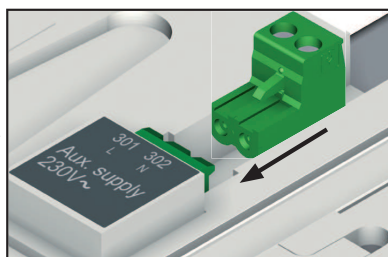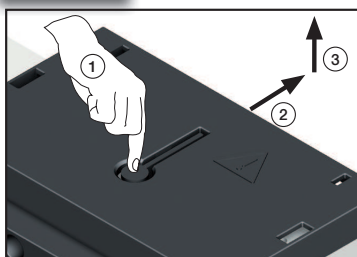

STEP 5

Check

Whilst in manual mode, check the wiring and if ok power up the product.

LED "Power" Green: ON
LED Manuel/Default Red (Product not Available): ON


NOTE: Nominal Aux. Supply Voltage : 208 – 277Vac



STEP 6A

Motorised Operation

Ensure that the emergency handle is not inserted in the product and turn the mode selector to the AUT position.
LED "Power" Green: ON
LED Manuel/Default: OFF

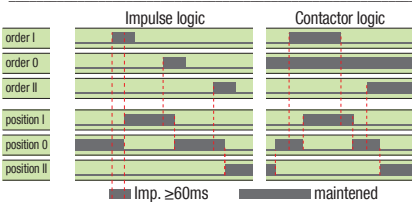


To enable control, close contact 312 with 317.
To force the product to 0 position/OFF bridge the contact 313 with 317.
For contactor logic bridge contact 316 with 317.
To operate: close the contact corresponding to the desired position.



STEP 6B

Emergency Manual Operation

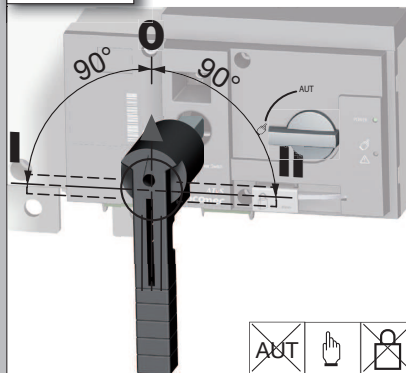


STEP 6C

Padlocking Mode (in position 0)



Spares: Motorisation module

Ref. Spare part motorisation	USED FOR ATyS REFERENCE			
97095010	100A	2, 3, 4 P	B4	97232010 / 97233010 / 97234010
97095020	200A	2, 3, 4 P		97232020 / 97233020 / 97234020
97095026	260A	2, 3, 4 P	B5	97232026 / 97233026 / 97234026
97095040	400A	2, 3, 4 P		97232040 / 97233040 / 97234040

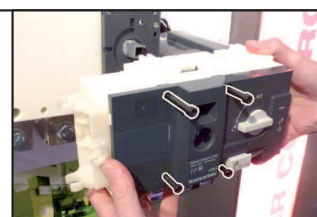

3.2. Quick Start ATYS UL 1008 Frame B6 to B7 (600A to 1200A)

socomec
Innovative Power Solutions

QUICK START

ATYS 

Transfer Switch
UL 1008: Optional Standby Power
600A, 800A, 1200A

Preliminary operations

Check the following upon delivery and after removal of the packaging:

- Packaging and contents are in good condition.
- The product reference corresponds to the order.
- Contents should include:
Qty 1 x ATYS
Qty 1 x Emergency handle and fixing clip
Quick Start instruction sheet

Warning

 Risk of electrocution, burns or injury to persons and / or damage to equipment.

This Quick Start is intended for personnel trained in the installation and commissioning of this product. For further details refer to the product instruction manual available on the SOCOMECE website.

- This product must always be installed and commissioned by qualified and approved personnel.
- Maintenance and servicing operations should be performed by trained and authorised personnel.
- Do not handle any control or power cables connected to the product when voltage may be, or may become present on the product, directly through the mains or indirectly through external circuits.
- Always use an appropriate voltage detection device to confirm the absence of voltage.
- Ensure that no metal objects are allowed to fall in the cabinet (risk of electrical arcing).

Failure to observe good engineering practises as well as to follow these safety instructions may expose the user and others to serious injury or death.

 Risk of damaging the device

- In case the product is dropped or damaged in any way it is recommended to replace the complete product.

Accessories

- Bridging bars and connection kits.
- Terminal screens.
- Terminal lugs.

Spares

- Motorisation module

For further details for spares and accessories, please refer to the instruction manual in chapter - "Spare parts and accessories"

www.socomec.com

To download, brochures, catalogues and technical manuals:



www.socomec.com/operating-instructions

Printing informations: 1 color Black. White paper 90g/m².
Printing size: 420x297. Final size 210x297. This page visible first.



546814A

UL 1008

Non contractual document.
Subject to change without notice.

Installation and Commissioning

STEP 1
Cabinet / Back Plate
Installation

STEP 2
Connecting the
POWER section

STEP 3
COMMAND /
CONTROL terminal
connections


STEP 4
Power SUPPLY
terminal connections

STEP 5
CHECK

STEP 6A
Control by an external
order (AUTO)


STEP 6B
Emergency Manual
Operation

STEP 6C
Padlocking

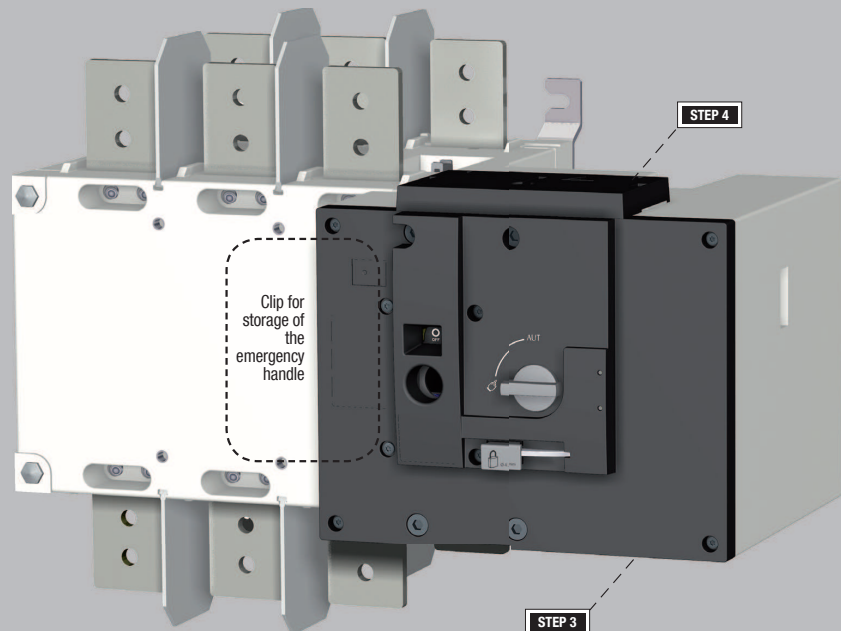

STEP 1A Installation


Attention: Ensure that the product is installed on a flat rigid surface.




	FRAME B6		FRAME B7			
	600 A		800 A		1200 A	
	3P	4P	3P	4P	3P	4P
Ref ATYS	97233060	97234060	97233080	97234080	97233120	97234120
Dim. code	1	2	3	4	5	6

STEP 1B

Dual Dimensions

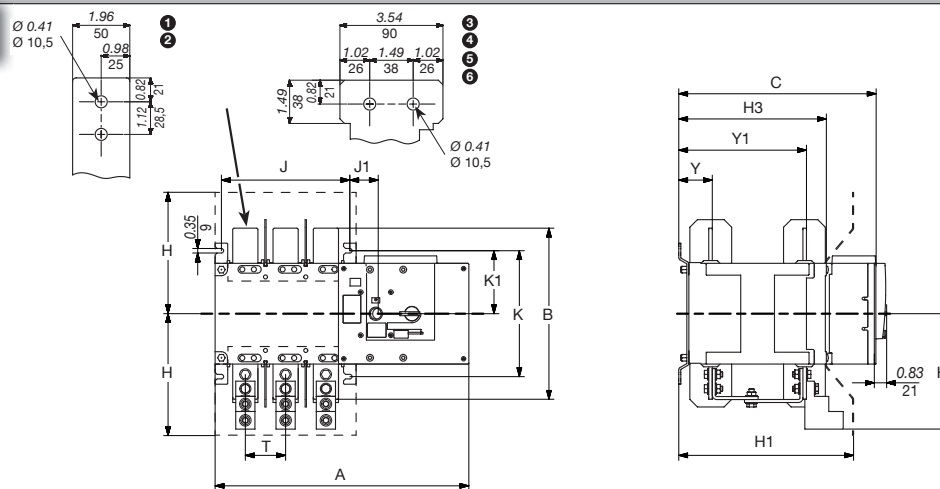

Ref. code		A	B	C	H	H1	H2	H3	J	J1	K	K1	T	Y	Y1
1	3P	19.8	504	13.38	340	15.4	392	9.09	231	13.7	347	9.05	230	11.5	293
2	4P	22.99	584	13.38	340	15.4	392	9.09	231	13.7	347	9.05	230	11.5	293
3	3P	23.5	596	11.34	288	15.4	392	8.30	211	13.7	347	8.03	204	11.5	293
4	4P	28.2	716	11.34	288	15.4	392	8.30	211	13.7	347	8.03	204	11.5	293

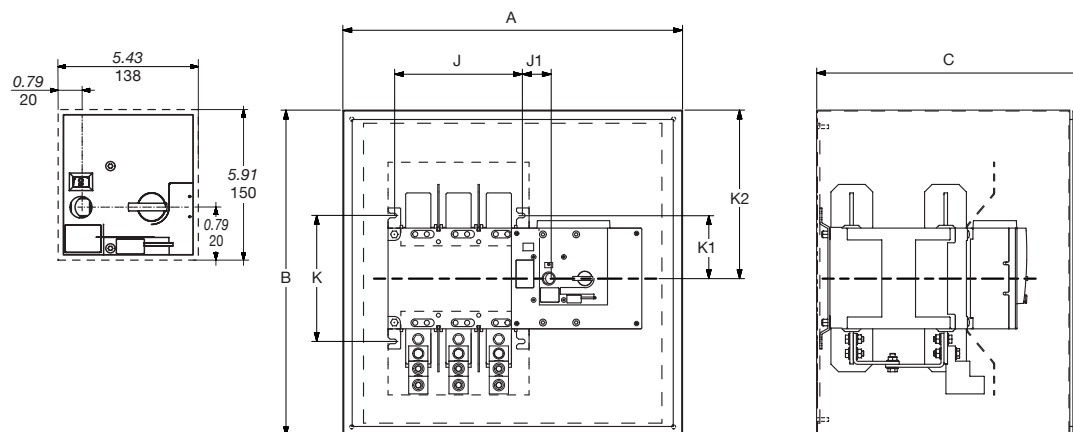


Ref. code		A	B	C	J	J1	K	K1	K2
1	3P	36	915	48	1220	20	508	10.04	255
2	4P	36	915	48	1220	20	508	12.18	335
3	3P	36	915	60	1524	20	508	13.66	347
4	4P	36	915	60	1524	20	508	18.38	467
5	3P	36	915	60	1524	20	508	13.66	347
6	4P	36	915	60	1524	20	508	18.38	467


STEP 2A

Size 17

BRIDGING BARS KIT	USED FOR ATYS REF.
41593063	97233060
41594063	97234060

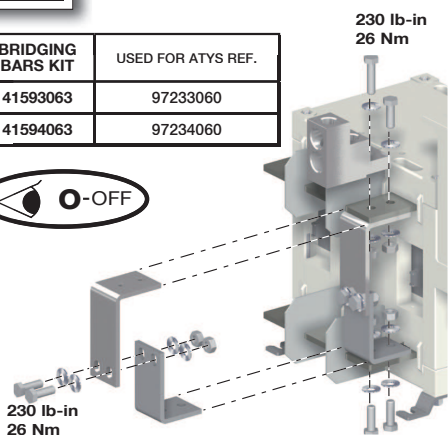

BRIDGING BARS KIT	USED FOR ATYS REF.
41593080	97233080 / 97233120
41594080	97234080 / 97234120

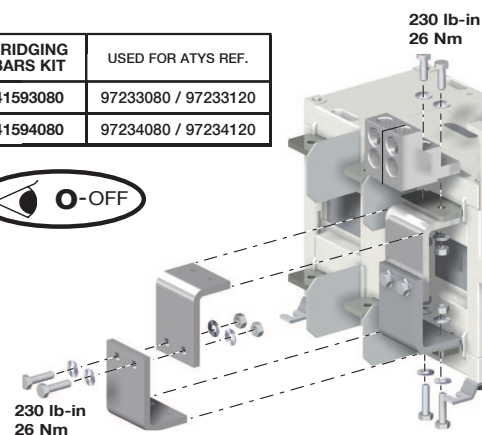

3.2. Quick Start ATYS UL 1008 Frame B6 to B7 (600A to 1200A) continued


STEP 2B

Power Terminal Connections (optional accessories)

To be connected using terminal lugs, rigid or flexible busbars.


	FRAME B6		FRAME B7			
	600 A		800 A		1200 A	
	3P	4P	3P	4P	3P	4P
Ref ATyS	97233060	97234060	97233080	97234080	97233120	97234120
Ref lugs	39543060	39544060	39543080	39544080	39543120	39544120
Qty per reference	3	4	6	8	6	8
Ref qty to order	x3	x3	x3	x3	x3	x3
Désignation	 PV2-600					
Size (AWG) min.	# 2					
Size (AWG) max.	600 Kcmil					
Opening per lug	2	2	2 x 2			
Size of screw	H M10x45- 6.8					
Torque lb.in / mm	310 / 35					

When ordering ensure to order QTY 3 for each lug reference
(Quantity 2 for incoming power cables and quantity 1 for outgoing cables)

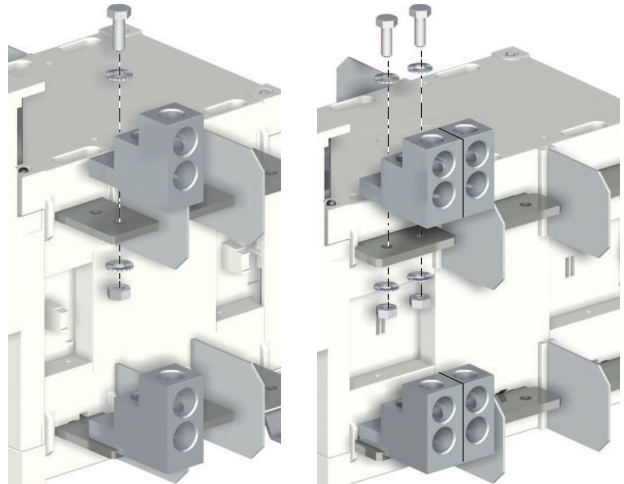


STEP 2C

Mounting of terminal covers (optional accessory)

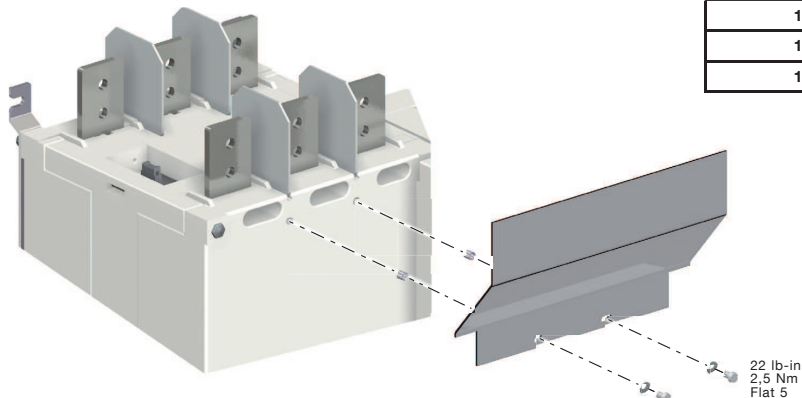


Ref. TOP or BOTTOM	USED FOR
16093063	97233060
16094063	97234060
16093080	97233080 / 97233120
16094080	97234080 / 97234120

STEP 3A

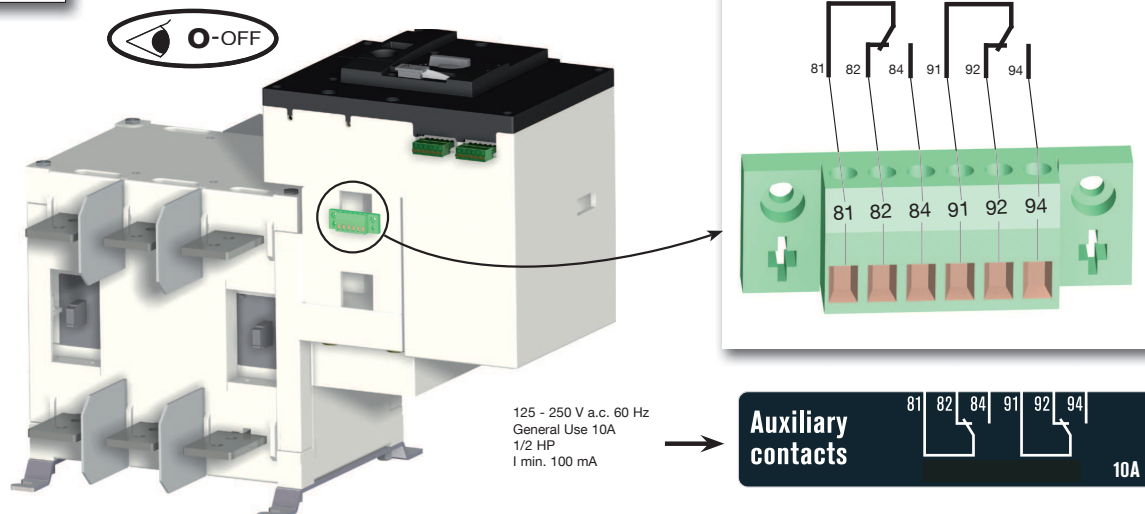


STEP 3B

Control / Command Terminals - Ensure that the product is in Manual Mode.

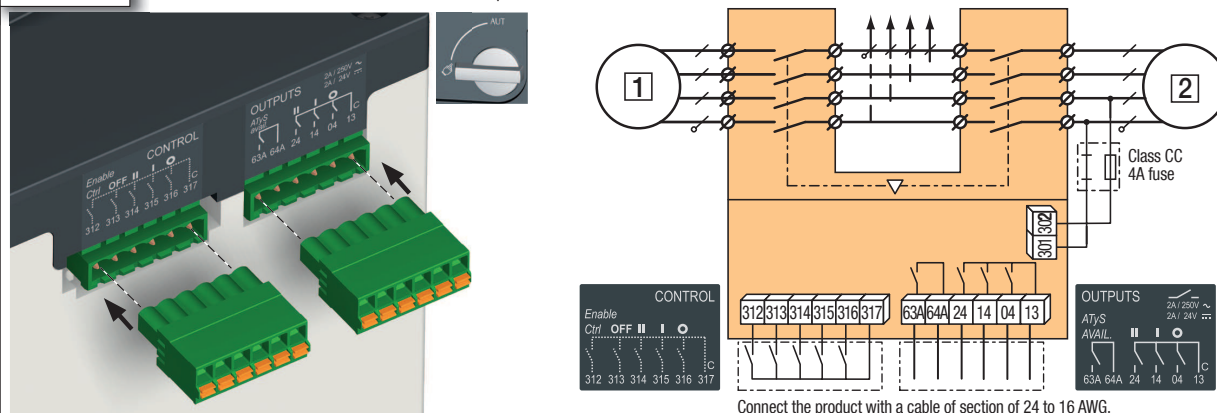

STEP 4

Power Supply Terminal - Remove the Top cover to access and connect the terminal - Replace the cover before putting in service.

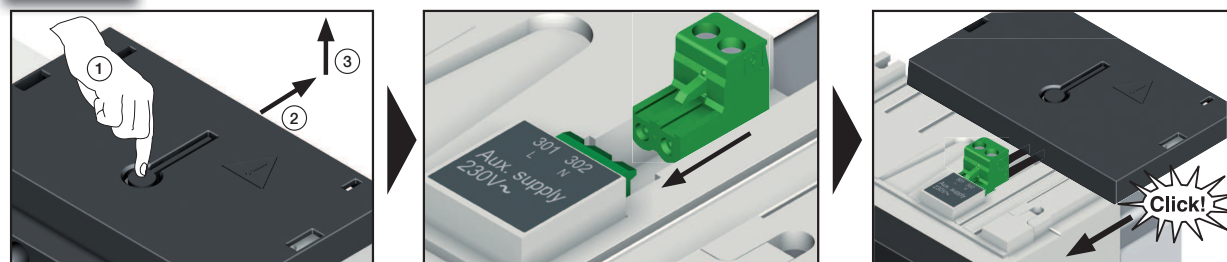

STEP 5

Check

Whilst in manual mode, check the wiring and if ok power up the product.

LED "Power" Green: ON
LED Manuel/Default Red (Product not Available): ON


NOTE: Nominal Aux. Supply Voltage : 208 – 277Vac



STEP 6A

Motorised Operation

Ensure that the emergency handle is not inserted in the product and turn the mode selector to the AUT position.
LED "Power" Green: ON
LED Manuel/Default: OFF

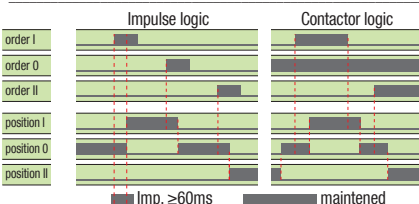


To enable control, close contact 312 with 317.
To force the product to 0 position/OFF bridge the contact 313 with 317.
For contactor logic bridge contact 316 with 317.
To operate: close the contact corresponding to the desired position.




STEP 6B

Emergency Manual Operation

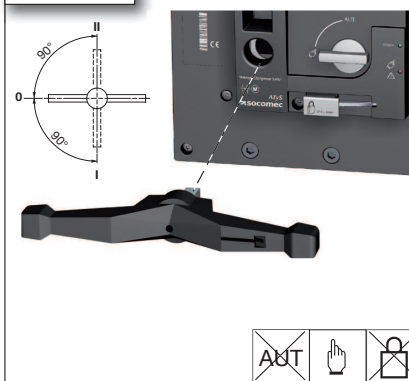


STEP 6C

Padlocking Mode (in position 0)

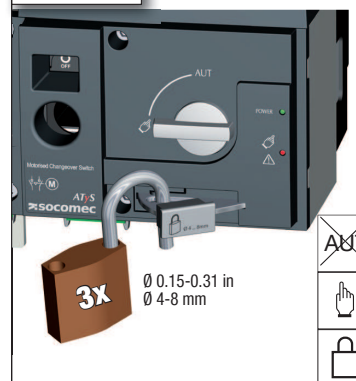


Spares: Motorisation module

Ref. Spare part motorisation		USED FOR ATyS REFERENCE		
97095060	600A	3, 4 P	B6	97233060 / 97234060
97095080	800A		B7	97233080 / 97234080
97095120	1200A			97233120 / 97234120

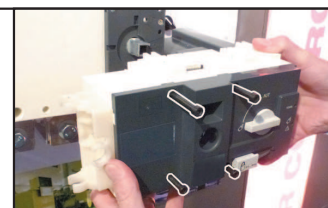


4. GENERAL OVERVIEW

4.1. Product introduction

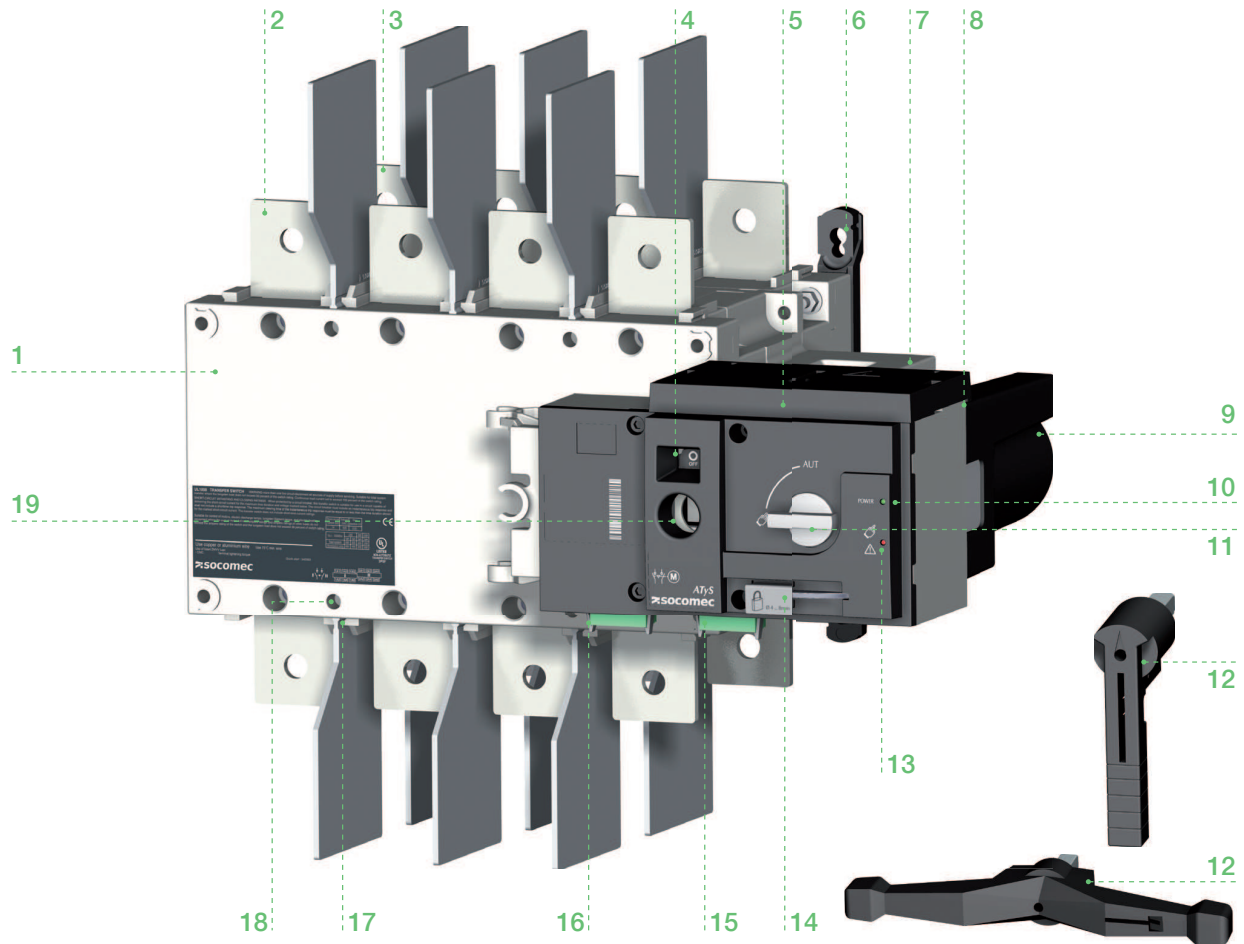

1. Power Section : Changeover switch assembly with inherent mechanical interlock
2. Front : Switch number 1 terminals (2, 3 or 4 pole)
3. Back : Switch number 2 terminals (2, 3 or 4 pole)
4. Switch position indication window :- I (On) – O (Off) – II (On)
5. Auxiliary power supply cover: 230Vac (208 – 277Vac)
6. Back-plate mounting ATYS fixing lugs
7. Additional Pre breaking and signaling position (I and II) auxiliary contacts.
8. Motorized Control Unit
9. Motor housing
10. Green LED Indication : Power (ATYS control voltage input within specified range).
11. Auto / Manual mode selector switch
12. Emergency manual operation "Direct Handle"
13. Red LED Indication : Product Unavailable / Manual Mode / Fault Condition
14. Padlocking facility (Up to 3 padlocks of dia. 4 – 8mm / 0.15-0.31in)
15. Output contacts x 4 (Position indication I-O-II and product availability outputs)
16. Input contacts x 5 :-
 Position order I-O-II
 Remote control enable
 Override controls and force to Off position
17. Phase barriers
18. Fixing holes for terminal Shields
19. Emergency manual operation shaft location (Accessible only in manual mode)

4.2. Product identification

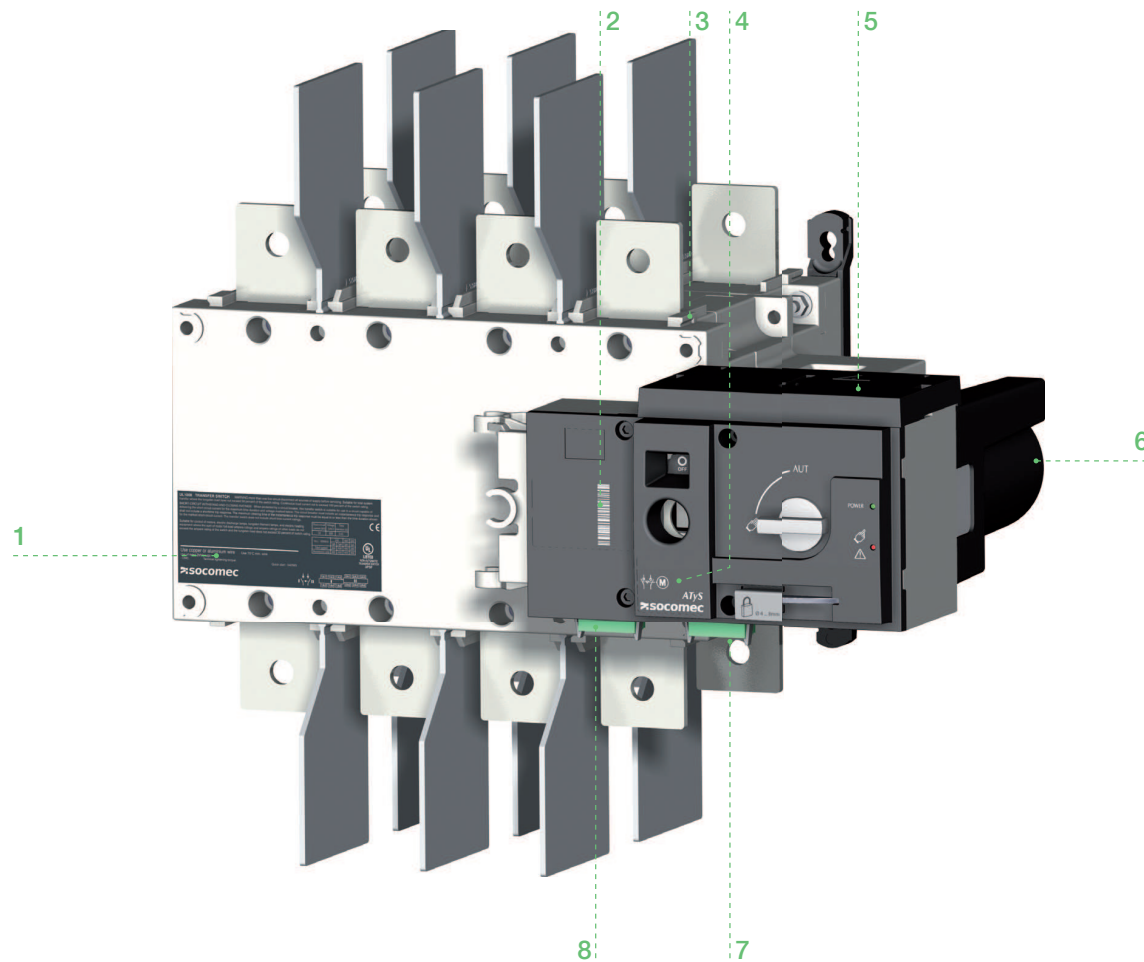

1. Main changeover switch identification label:
Electrical characteristics
Applicable standards and
Terminal incoming and outgoing wiring details.
2. Complete ATYS product serial number and barcode.
3. Switch 1 (Front) and Switch 2 (back) identification labels
4. ATYS product current rating and reference number label
5. Auxiliary power supply contacts identification label (under the protection cover)
6. Motor barcode and serial number
7. Output contacts identification label
8. Input contacts identification label

4.3. Environmental

The ATYS product meets the following environmental requirements:

4.3.1. IP Rating IEC 60529



- IP2X against direct contact for the ATYS motorization control unit.
- IP2X against direct contact for the power section with the connections in place and when including suitable, correctly installed incoming and outgoing terminal shields.
- IP 0 for the bare power section without terminal shields in place.

4.3.2. Operating Conditions

4.3.2.1. Temperature



- From -20 to +40°C (-4°F to +104°F) without derating

4.3.2.2. Hygrometry



- 80% humidity without condensation at 55°C (+131°F)
- 95% humidity without condensation at 40°C (+104°F)

4.3.2.3. Altitude



- Up to 2000m (6562ft) in altitude without derating

4.3.3. Storage Conditions



4.3.3.1. Temperature





- From -40 to +70°C (-40°F to +158°F)

4.3.3.2. Storage duration period

- Maximum storage up to a period of 12 months
- (Recommendation: To be stored in dry, non corrosive and non saline atmospheric conditions)

4.3.3.3. Storage position

100 - 400A	600 - 1200A
A maximum of 3 boxes may be stocked vertically. 	Boxes MUST NOT be stocked vertically. 

4.3.4. Volume and shipping weights by reference ATYS

Frame Size	Rating	N° of Poles	Reference Number	Weight (kg)		Volume (length x width x height cm) inc Packing
				Net	Gross	
B4	100A	2	97 23 2 010	6.41	9.87	470 x 355 x 350
		3	97 23 3 010	6.76	10.61	470 x 355 x 350
		4	97 23 4 010	7.64	11.49	470 x 355 x 350
	200A	2	97 23 2 020	6.41	9.87	470 x 355 x 350
		3	97 23 3 020	6.76	10.61	470 x 355 x 350
		4	97 23 4 020	7.64	11.49	470 x 355 x 350
B5	260A	2	97 23 2 026	10.76	15.76	535 x 490 x 425
		3	97 23 3 026	12.20	17.20	535 x 490 x 425
		4	97 23 4 026	14.44	19.44	535 x 490 x 425
	400A	2	97 23 2 040	10.76	15.76	535 x 490 x 425
		3	97 23 3 040	12.20	17.20	535 x 490 x 425
		4	97 23 4 040	14.44	19.44	535 x 490 x 425
B6	600	3	97 23 3 060	29	45	730 x 800 x 600
		4	97 23 4 060	34	50	730 x 800 x 600
B7	800	3	97 23 3 080	34	50	730 x 800 x 600
		4	97 23 4 080	40	56	730 x 800 x 600
	1200	3	97 23 3 120	34	50	730 x 800 x 600
		4	97 23 4 120	40	56	730 x 800 x 600

4.3.5. UL marking



4.3.6. CE marking (From 100 to 400A)

The ATYS complies with the European directive for:

- The Electromagnetic compatibility no. 2004/108/CE dated 15th of December 2004.
- Low voltage directive no. 2014/35/EU dated 26th of February 2014.




4.3.7. 2011/65/EU RoHS

- The ATYS follows a lead free process and complies with the European directive for RoHS.



5. INSTALLATION


5.1. Product dimensions: Frame B4 to B5 (100A to 400A)

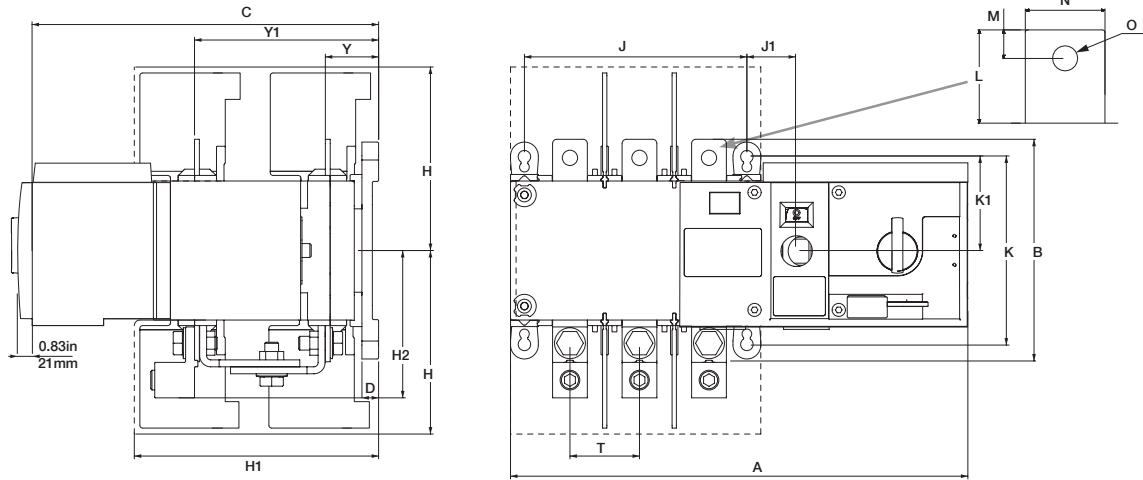

Dimensions in/mm

Rating	Ref. code		A	B	C	D	H	H1	H2	Y	Y1
			in mm	in mm	in mm	in mm	in mm	in mm	in mm	in mm	in mm
100 - 200A	97232010 / 97233010 / 97232020 / 97233020	2/3P	12.91	328	6.30	160	9.60	244	0.41	10.5	5.08
	97234010 / 97234020	4P	14.88	378	6.30	160	9.60	244	0.41	10.5	5.08
260 - 400A	97232026 / 97233026 / 97232040 / 97233040	2/3P	14.84	377	10.23	260	12.62	320.5	0.41	10.5	8
	97234026 / 97234040	4P	17.20	437	10.23	260	12.62	320.5	0.41	10.5	8


Rating	Ref. code		J	J1	K	K1	L	M	N	O	T
			in mm	in mm	in mm	in mm	in mm	in mm	in mm	in mm	in mm
100 - 200A	97232010 / 97233010 / 97232020 / 97233020	2/3P	6.30	160	1.37	35	7.67	195	3.84	97.5	1.18
	97234010 / 97234020	4P	8.26	210	1.37	35	7.67	195	3.84	97.5	1.18
260 - 400A	97232026 / 97233026 / 97232040 / 97233040	2/3P	8.26	210	1.37	35	7.67	195	3.84	97.5	1.18
	97234026 / 97234040	4P	10.63	270	1.37	35	7.67	195	3.84	97.5	1.18

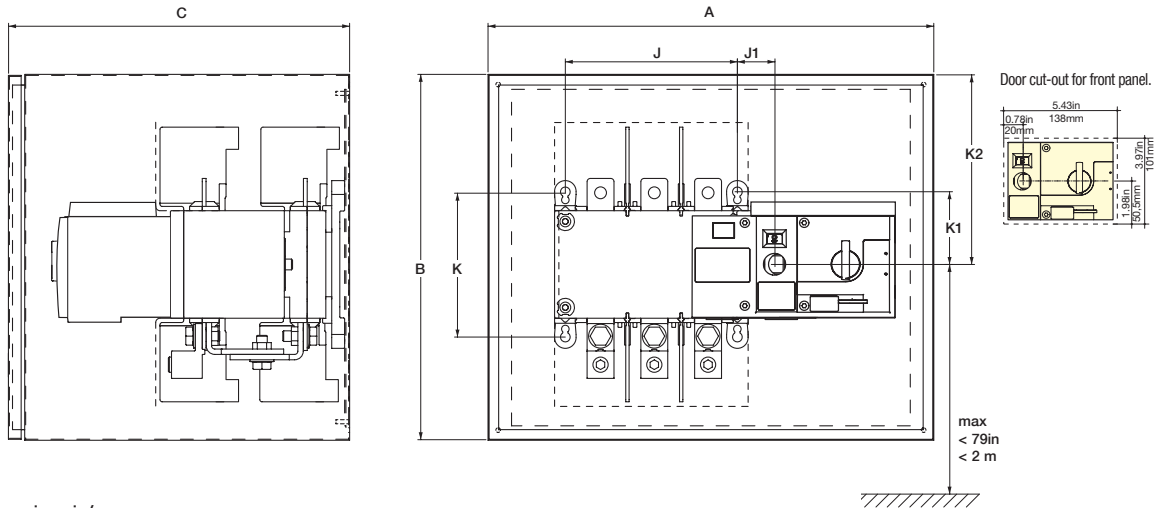


Dimensions in/mm

Rating	Ref. code		A	B	C	J	J1	K	K1	K2
			in mm	in mm	in mm	in mm	in mm	in mm	in mm	in mm
100 - 200A	97232010 / 97233010 / 97232020 / 97233020	2/3P	24	610	24	610	12	305	6.30	160
	97234010 / 97234020	4P	24	610	12	305	8.26	210	1.37	35
260 - 400A	97232026 / 97233026 / 97232040 / 97233040	2/3P	32	813	32	813	16	406	8.26	210
	97234026 / 97234040	4P	32	813	16	406	10.63	270	1.37	35

5.2. Product dimensions: Frame B6 to B7 (600A to 1200A)

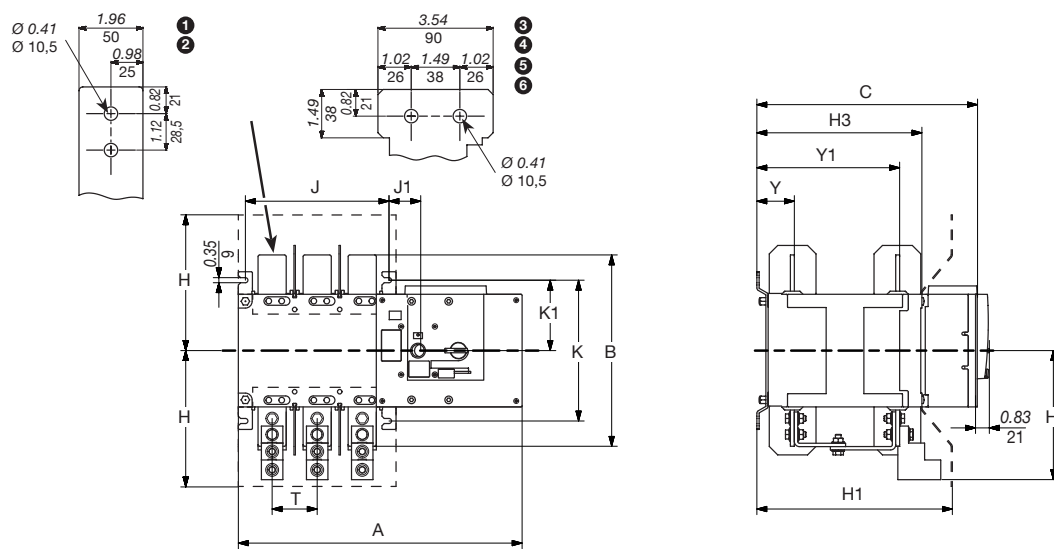

Ref. code		A		B		C		H		H1		H2		H3		J		J1		K		K1		T		Y		Y1	
		in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm
1	3P	19.8	504	13.38	340	15.4	392	9.09	231	13.7	347	9.05	230	11.5	293	10	255	2.02	51.5	9.84	250	4.92	125	3.15	80	2.61	66.5	9.98	254
2	4P	22.99	584													13.2	335												
3	3P	23.5	596	11.34	288	15.4	392	8.30	211	13.7	347	8.03	204	11.5	293	13.7	347	2.02	51.5	9.84	250	4.92	125	4.72	120	2.65	67.7	9.98	254
4	4P	28.2	716													18.4	467												

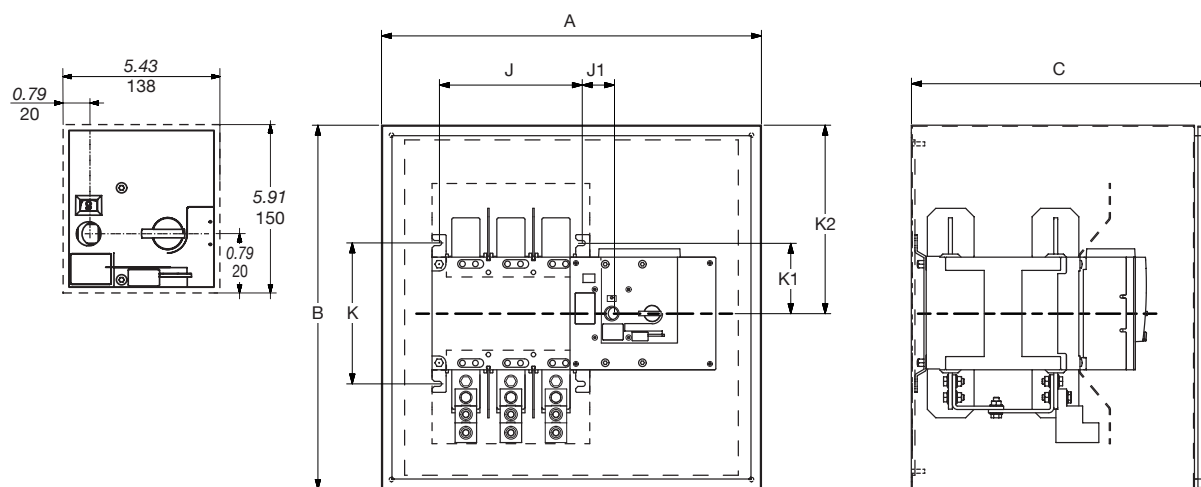

Ref. code		A		B		C		J		J1		K		K1		K2	
		in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in	mm
1	3P	36	915	48	1220	20	508	10.04	255	2.02	51.5	9.84	250	4.92	125	24	610
2	4P							12.18	335								
3	3P	36	915	60	1524	20	508	13.66	347	2.02	51.5	9.84	250	4.92	125	30	762
4	4P							18.38	467								
5	3P	36	915	60	1524	20	508	13.66	347	2.02	51.5	9.84	250	4.92	125	30	762
6	4P							18.38	467								

5.3. Mounting orientation

	CAUTION	Always install the product on a flat and rigid surface.
--	----------------	---

5.3.1. Mounting orientation for 100 to 400A

Recommended orientation	OK	Not Allowed	Not Allowed



5.3.2. Mounting orientation for 600 to 1200A

Recommended orientation	OK	Not Allowed	OK

5.4. Assembly of customer mounted accessories


	DANGER	Never handle any customer mounted accessories while there may be the risk of voltage being or becoming present.
--	---------------	---

5.4.1. Bridging bars (optional accessory)

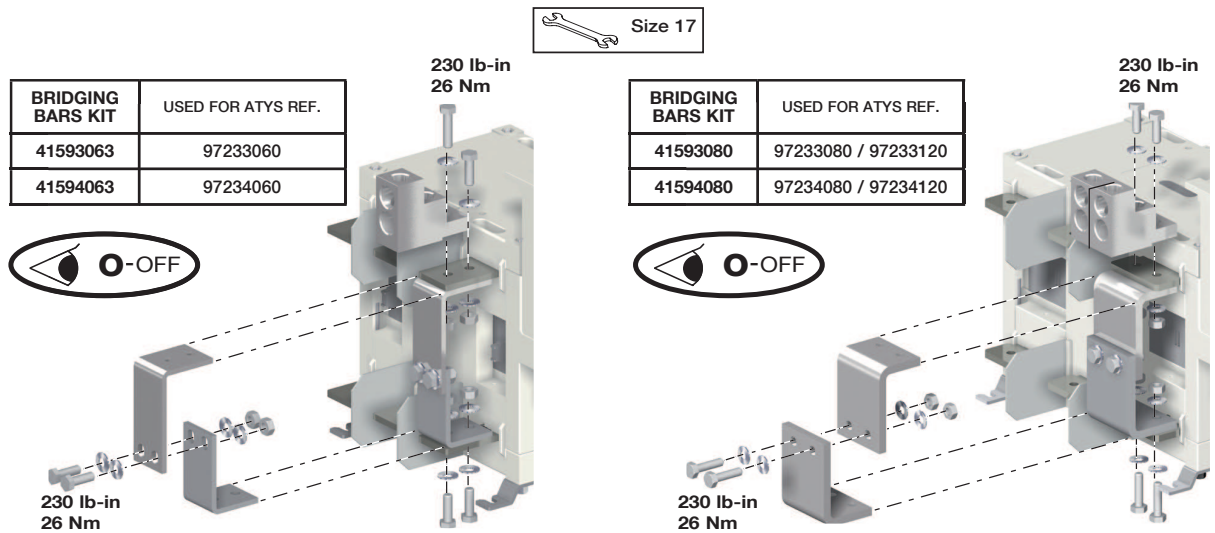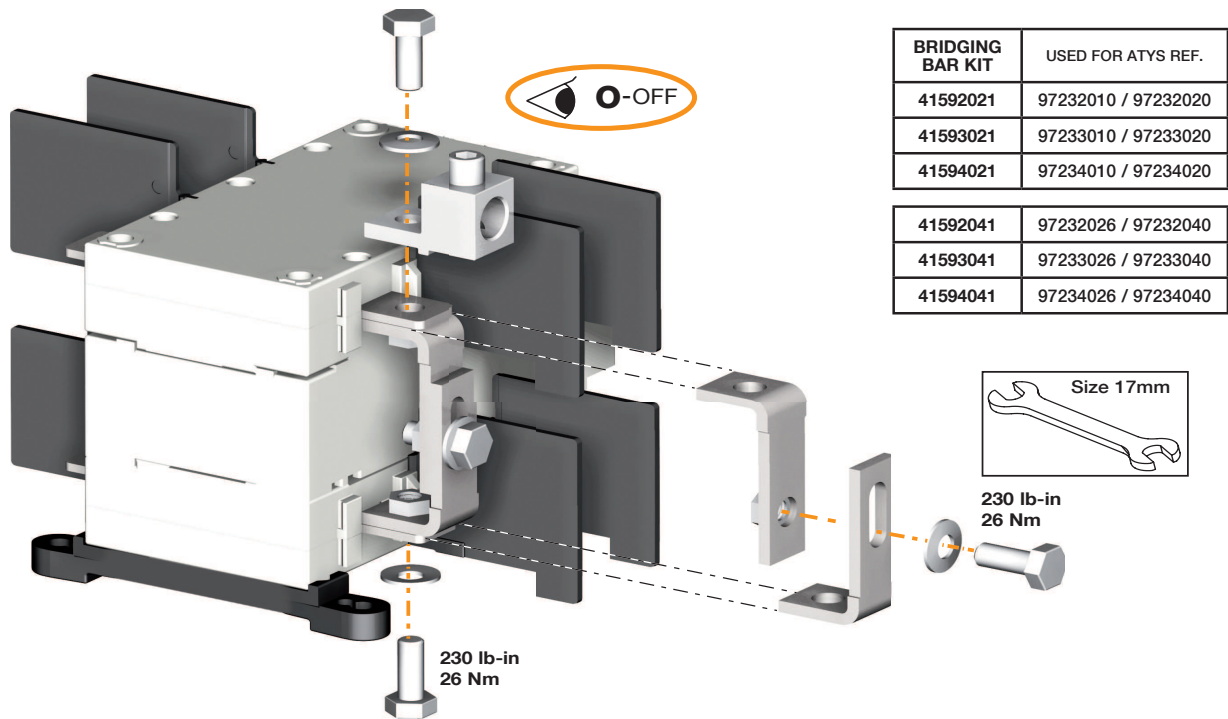


5.4.2. Mounting of terminal covers (optional accessory)

5.4.2.1. Terminal cover for 100 to 200A

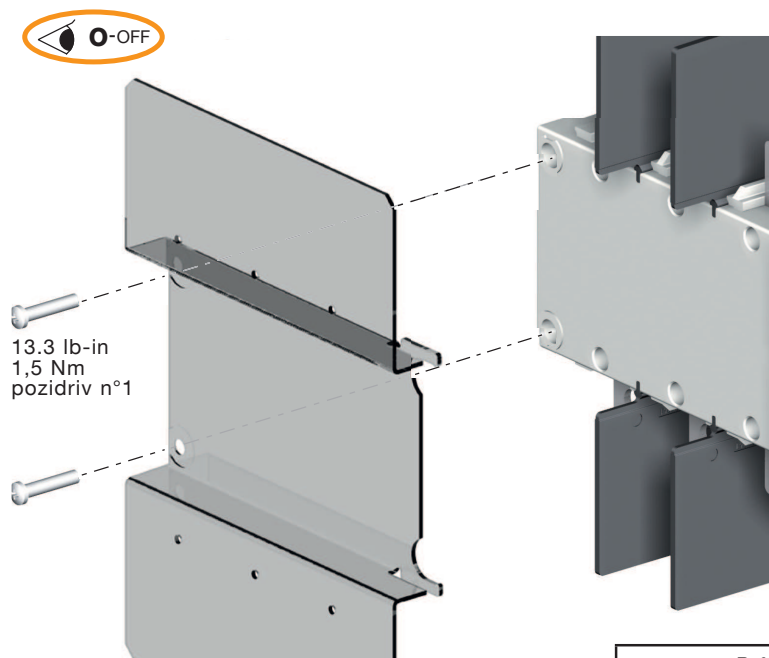

Ref.	USED FOR
41583021	97232010 / 97232020 97233010 / 97233020
41584021	97234010 / 97234020


5.4.2.2. Terminal cover for 260 to 400A

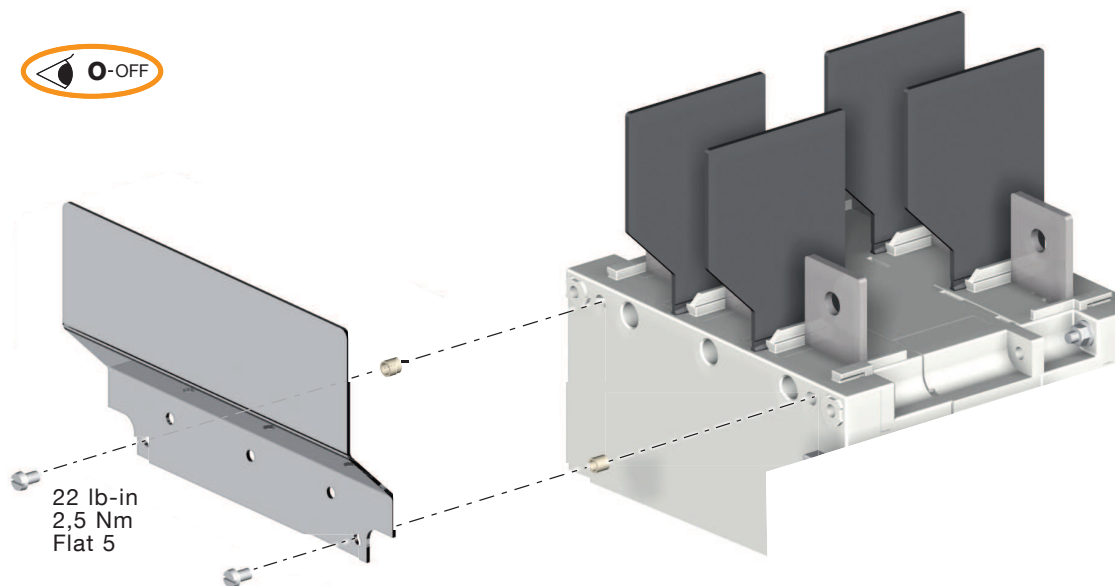

Ref. TOP or BOTTOM	USED FOR
41583041	97232026 / 97232040 97233026 / 97233040
41584041	97234026 / 97234040

5.4.2.3. Terminal cover for 600 to 1200A

**Mounting of terminal covers
(optional accessory)**

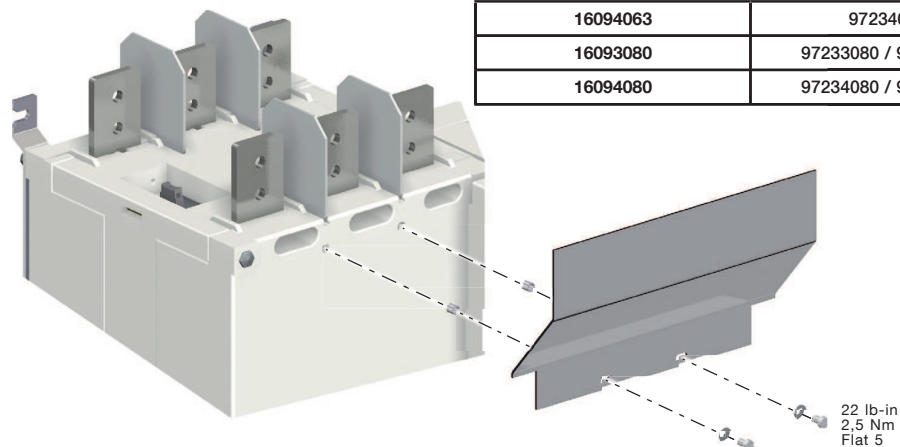


Ref. TOP or BOTTOM	USED FOR
16093063	97233060
16094063	97234060
16093080	97233080 / 97233120
16094080	97234080 / 97234120

5.4.3. Mounting of additional auxiliary contacts for 100 to 400A (optional accessories)

Intended for pre breaking and signaling of positions I and II:

A maximum of 2 NO/NC additional auxiliary contacts can be fitted for each position. (Customer assembly required.)


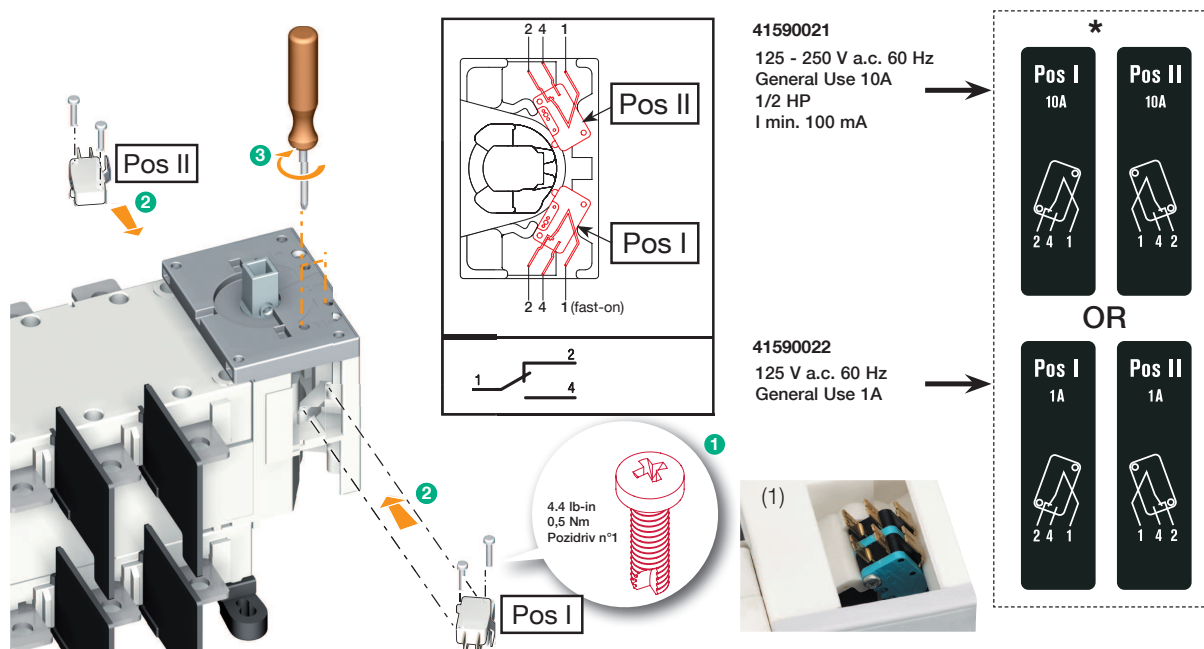


(1) When mounting one auxiliary contact on position I or II, use the short screws provided.
When mounting two auxiliary contacts on position I or II, use the long screws provided.


5.4.4. Power Terminal Connections (optional accessories)

5.4.4.1. Power Terminal Connections for 100 to 400A

To be connected using terminal lugs, rigid or flexible busbars.

	FRAME B4						FRAME B5					
	100 A			200 A			260 A			400 A		
	2P	3P	4P	2P	3P	4P	2P	3P	4P	2P	3P	4P
Ref ATYS	97232010	97233010	97234010	97232020	97233020	97234020	97232026	97233026	97234026	97232040	97233040	97234040
Ref lugs	39542020	39543020	39544020	39542020	39543020	39544020	39542040	39543040	39544040	39542040	39543040	39544040
Qty per reference	2	3	4	2	3	4	2	3	4	2	3	4
Ref qty to order	x3	x3	x3	x3	x3	x3	x3	x3	x3	x3	x3	x3
Désignation	 CMC LA300-R						 CMC LA630-R					
Size (AWG) min.	# 6						# 4 1/0					
Size (AWG) max.	300 Kcmil						600 Kcmil - 250 Kcmil					
Opening per lug	1						1 2					
Size of screw	13						17					
Torque lb.in / mm	160 / 18						310 / 35					


When ordering ensure to order QTY 3 for each lug reference
(Quantity 2 for incoming power cables and quantity 1 for outgoing cables)

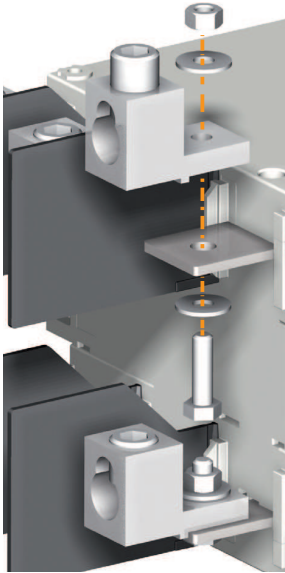


5.4.4.2. Power Terminal Connections for 600 to 1200A

Power Terminal Connections (optional accessories)

To be connected using terminal lugs, rigid or flexible busbars.

	FRAME B6		FRAME B7			
	600 A		800 A		1200 A	
	3P	4P	3P	4P	3P	4P
Ref ATyS	97233060	97234060	97233080	97234080	97233120	97234120
Ref lugs	39543060	39544060	39543080	39544080	39543120	39544120
Qty per reference	3	4	6	8	6	8
Ref qty to order	x3	x3	x3	x3	x3	x3
Désignation	PV2-600					
Size (AWG) min.	# 2					
Size (AWG) max.	600 Kcmil					
Opening per lug	2	2	2 x 2			
Size of screw	H M10x45- 6.8					
Torque lb.in / mm	310 / 35					

When ordering ensure to order QTY 3 for each lug reference
(Quantity 2 for incoming power cables and quantity 1 for outgoing cables)

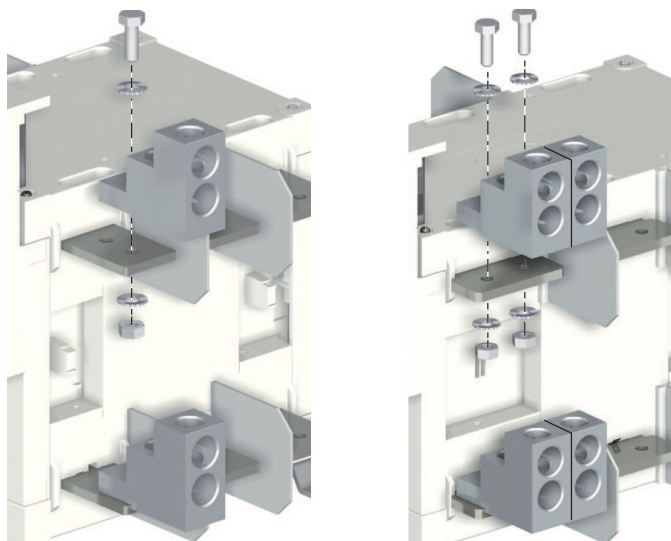

5.5. Control circuits




Verify that the nominal auxiliary power supply feeding terminals 301 and 302 are within the limits of 208VAC -> 277VAC



Do not handle any control or power cables connected to the ATYS when voltage may be present.


5.5.1. Typical ATYS wiring (480/277 VAC)

Example: Control wiring for a 480VAC application having a 3 phase and neutral supply.

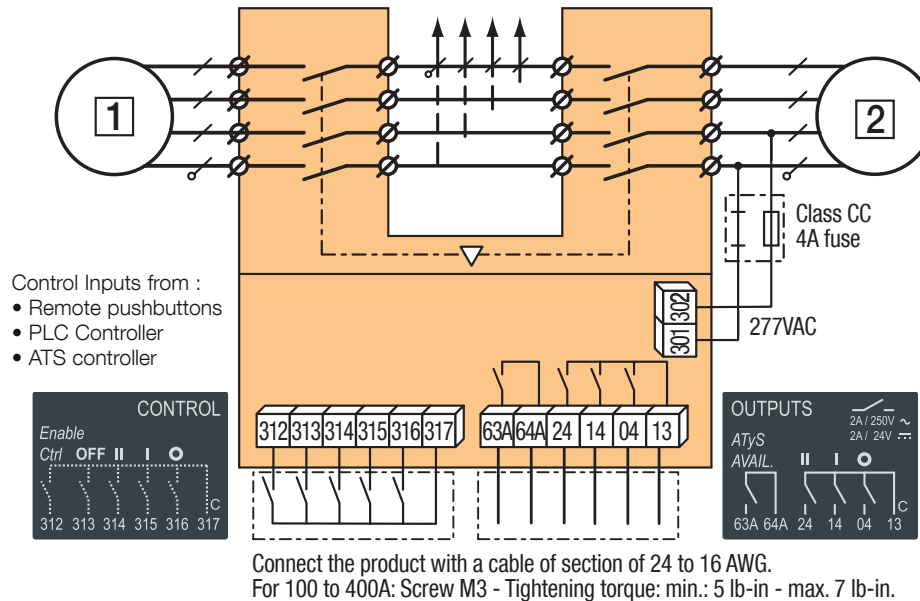


5.5.2. Typical ATYS wiring (208/120 VAC)

Example: Control wiring for a 208VAC, Ph/Ph application.

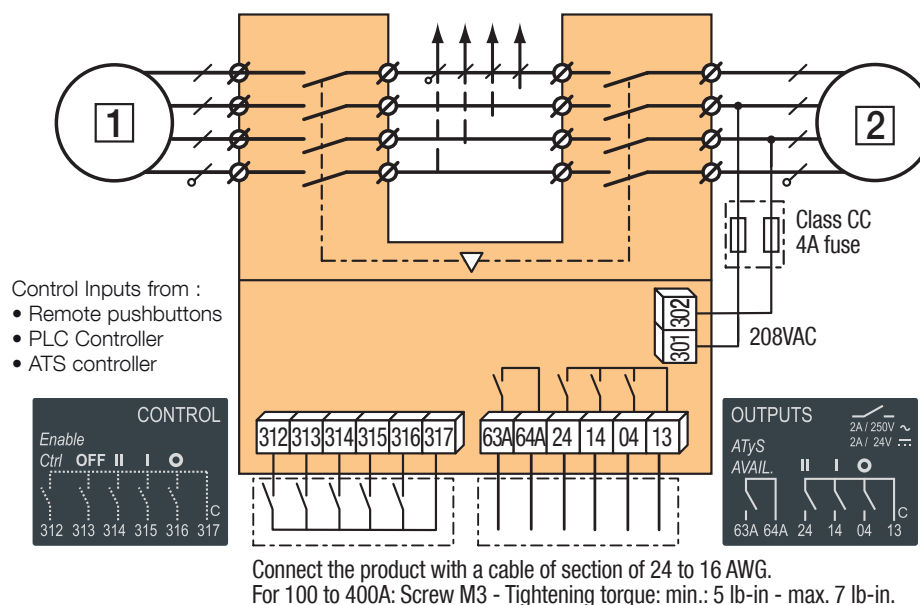

5.5.3. ATYS input and output contacts

5.5.3.1. Terminal denomination, description and characteristics.

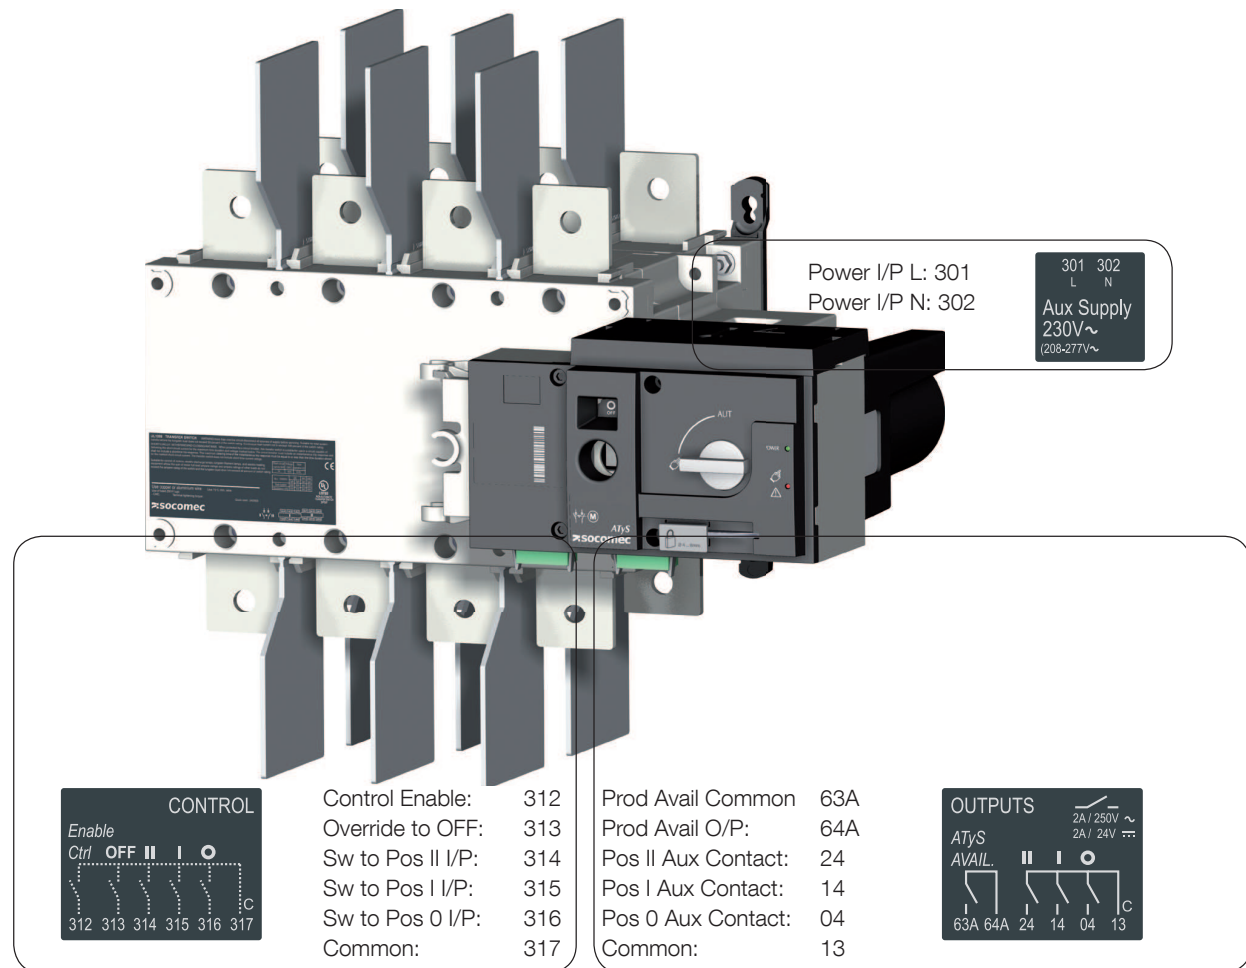

Denomination	Terminal	Description	Characteristics	Recommended Cable Section
Signalisation Outputs	13	Common I - 0 - II for Aux Contacts	Dry Contacts 2A AC1 / 250V	1,5mm ² (≈ 16AWG)
	04	Aux Contact Position 0 - Normally Open Contact		
	14	Aux Contact position I : Normally Open Contact		
	24	Aux Contact position II : Normally Open Contact		
	63A	Product Available : Normally Open Contact. Closed when the ATYS is in Auto mode and motorisation is operational. (No Fault powered and ready to changeover)		
	64A			
Power supply Input	301	Power supply	208 - 277VAC: 50/60Hz	1,5mm ² (≈ 16AWG)
	302			
Control Inputs	312	Remote Control Mode Enable when closed with 317	Attn: Do not connect to any Power supply Max cable length 100m	1,5mm ² (≈ 16AWG)
	313	Position 0 order if closed with 317. (Priority order input forcing the product to remote control mode and 0 position)		
	314	Position II order if closed with 317		
	315	Position I order if closed with 317		
	316	Position 0 order if closed with 317		
	317	Common control terminal for 312 - 316 ATYS (Specific Voltage Supply)		



CAUTION



Do not connect terminals 312 to 317 to any power supply. These order inputs are powered through terminal 317 and external dry contacts ONLY.

6. ATYS OPERATING MODES

The ATYS includes 3 safe and distinct operating modes through a selector switch located on the front of the product. As standard the ATYS is delivered with a selector switch however a key lock type selector switch is available on option. (To be specified at order by the addition of “-K” at the end of the standard reference).

The modes of operation are as follows:

- Auto Mode: “Remotely operated transfer switching”
- Manual Mode: “Local emergency manual operation”
- Locked Mode: “Secure locked padlocking facility” (available in manual mode)

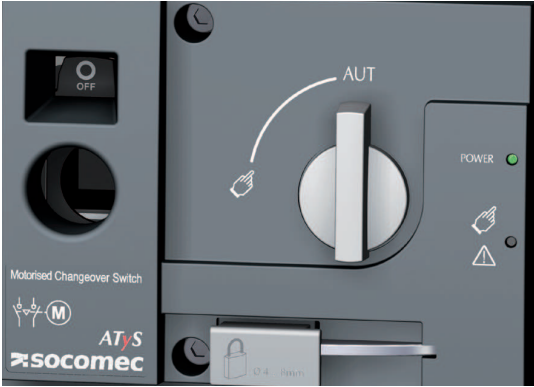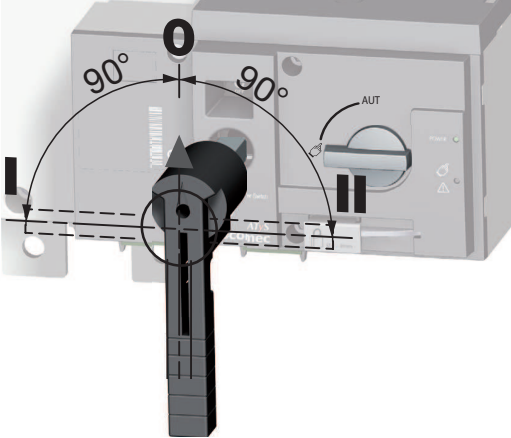AUT MODE		AUT AUTO MODE: • Activates the remote control inputs. • Inhibits the padlocking facility • Inhibits the insertion of the manual operation handle when in AUT Mode AUTO Mode position is inhibited when padlocked or when the handle for manual operation is inserted into the ATYS.
MODE		AUT MANUAL MODE: (Not Padlocked) • Inhibits the control inputs. • Allows to insert the handle for manual operation. • Allows padlocking in O Position. (With the handle for manual operation removed) Turning the selector switch to  from AUT and back to AUT resets a fault state.
MODE		AUT MANUAL MODE: (Padlocked) • Inhibits the control inputs. • Inhibits insertion of the manual handle. • Allows padlocking when in O Position.   POS 0



WARNING


Depending on the state of the ATYS the external orders contacts the ATYS may change the switch position as soon as the mode selector is switched to AUT. This is a normal operation.

6.1. Manual operation

The ATYS can be manually operated as a “Manual Transfer Switch” whilst retaining the electrical characteristics and performance of the power switching function. This function is usually used in case of emergencies or during maintenance.

To operate the ATYS manually ensure that no live parts are accessible, turn the front selector switch to the manual position (see page 14) and insert the handle (see page 14) into the emergency handle shaft location hole provided (see page 15).

Turn the handle 90° clockwise or anti-clockwise (depending on the position to be reached) for each consecutive change in position. I -> O -> II -> O -> I.

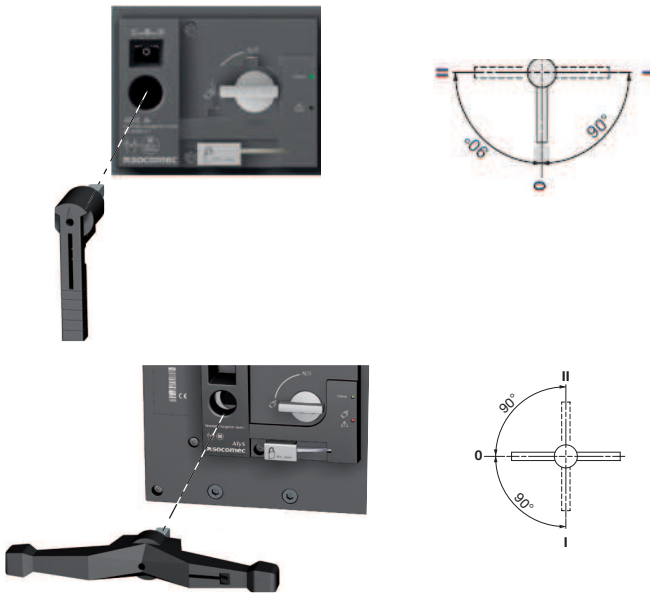

CAUTION

Ensure to verify the product position and direction of rotation before effecting manual operation.

With the handle inserted into the manual operation shaft location the Auto/Manual selector is blocked on manual.

Ensure to remove the handle from the product before turning the selector switch back towards the AUT position.


6.2. Padlocking

The ATYS can be padlocked in the 0 position. This is usually used during maintenance interventions.

To padlock the ATYS first ensure that the ATYS mode selector switch is on Manual then ensure that the emergency manual operation handle is not inserted into the location hole. (Remove if inserted).

Pull the padlocking mechanism outwards to reveal the slot for inserting up to 3x dia. 4 - 8mm (0.16-0.31in) padlocks.

Padlock the device with approved quality padlocks of minimum diameter 4mm (0.16in) and maximum diameter of 8mm (0.31in). A maximum of 3x 8mm (0.31in) padlocks may be padlocked onto the ATYS padlocking mechanism.

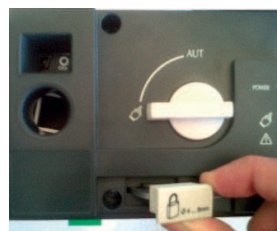

CAUTION

Padlocking is only made possible in the “O position”, when in manual mode and with the emergency handle not inserted.

6.3. Electrical operation

6.3.1. Power supply

The ATYS is to be powered between terminals 301 and 302 with a supply within the limits of :

- 208 – 277Vac $\pm 20\%$
- 50/60Hz $\pm 10\%$



Current Input:

- 10mA (Standby mode)
- 15A peak (Switching mode)

Surge Protection :

- V_{in_sg} : 4 / 8KV – 1.2/50 μ s

Terminal connector 100-400A :

- Minimum 1.5mm² / $\approx$ 16AWG
- Maximum 2.5mm² / $\approx$ 14AWG

Terminal connector 600-1200A :


- Minimum 0.5mm² / $\approx$ 20AWG
- Maximum 2.5mm² / $\approx$ 14AWG

6.3.2. Fixed inputs

6.3.2.1. Description

The ATYS includes for 5 off fixed inputs through a 6 pin connector installed on the motorisation module. No additional power supply should be used on these contacts as the inputs MUST be used with the common supply taken from terminal 317.

The ATYS Power Supply (301 - 302) must be available to activate inputs 312 to 317. Contact 312 must be closed with 317 to enable these inputs.

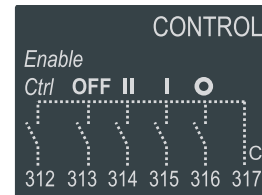

Pulse duration for activation of contact inputs: ≥ 60 ms.

- **Pin 312:** Remote Control Mode Enable when closed with 317.

This contact must be closed with 317 so as to activate all analogue inputs except for 313 that takes priority and is active immaterial of the state of input 312.

- **Pin 313:** Position 0 order if closed with 317 when in AUTO. **(Force the switch to the OFF Position)**

This is a "Priority Order Input" meaning that when closed with 317 it takes priority over all other electrical commands. The ATYS will remain in 0 position as long as the contact 313 – 317 remains closed. Once the contact is open the ATYS is ready to receive new orders. This contact order is independent of other inputs and is also enabled without 312 connected to 317. Impulse duration to activate and start switching to position O is a minimum of 60ms. The product state will be unavailable (output 63A – 64A open).

- **Pin 314:** Position II order if closed with 317.

This contact is active with the ATYS in AUT mode with contact 312 – 317 closed and 313 – 317 open. Impulse duration to activate and switch to position II is a minimum of 60ms.

- **Pin 315:** Position I order if closed with 317

This contact is active with the ATYS in AUT mode with contact 312 – 317 closed and 313 – 317 open. Impulse duration to activate and switch to position I is a minimum of 60ms.

- **Pin 316:** Position O order if closed with 317

This contact is active with the ATYS in AUT mode with contact 312 – 317 closed and 313 – 317 open. Impulse duration to activate and switch to position O is a minimum of 60ms. For contactor logic maintain contacts between terminal 316 and 317 closed.

- **Pin 317:** Common

Common supply for inputs 312 to 316

6.3.2.2. Technical data (fixed inputs)

	Motorisation Module
Input Qty:	5
Direct Current lin:	0.35 to 0.5mA
Line resistance:	1kΩ
Line length :	100m (Min. wire 1.5mm ² #16AWG)
Minimum pulse duration:	60ms
Power per Input:	0.06VA
Surge protection Vin_sg:	4.8kV (1.2/50μs surge)
ESD withstand voltage (Contact/air)	2/4kV
Insulation (Common mode)	4.8kVAC (Between I/P and all common parts)
Terminal connector (100-400A):	1.5mm ² (≈ 16AWG) minimum / 2.5mm ² (≈ 14AWG) max
Terminal connector (600-1200A):	0.5mm ² (≈ 20AWG) minimum / 2.5mm ² (≈ 14AWG) max
Tighten torque:	Min. 5lb-in, max. 7lb-in

6.3.2.3. Control logic


Switching operation can be driven in AUT mode by external volt free contacts as described above using input contacts 312 to 317.

Depending on the wiring configuration there are two types of logic that may be applied to the ATYS.

- Impulse logic or
- Contactor logic.

In AUT Mode, the ATYS inputs give priority to orders I and II over 0 therefore contactor logic can be implemented by simply bridging terminals 316 and 317.

(NOTE: 312 – 317 closed / Force ATYS to OFF Position, takes priority over all other orders no matter of the control logic used.)

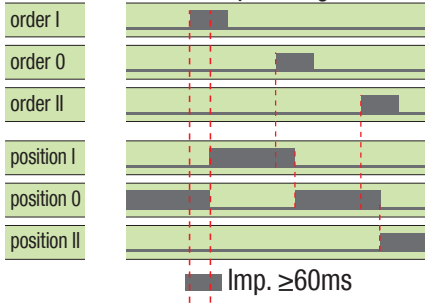
Impulse logic: The ATYS is driven to a stable position (I – O – II) after receiving an impulse order. • A switching command of at least 60 ms is necessary to initiate the switching operation. • Orders I and II have priority over order 0.	Impulse logic  (Note : Excludes position switching delays)
Contactor Logic : The ATYS is driven to a specific position (I or II) for as long as the order is maintained. • Order O is maintained. (Bridge 316 – 317) • Orders I and II have priority over order 0. • Orders I and II have equal priority. (1st order received is held until no longer maintained). • If order I or II disappears, the device returns to zero position. (With the power supply available).	Contactor logic  (Note : Excludes position switching delays)

6.3.3. Fixed outputs - Dry contacts

6.3.3.1. Description

As standard, the ATYS is equipped with four fixed outputs located on the motorisation module.

(Dry contacts to be powered by the user).

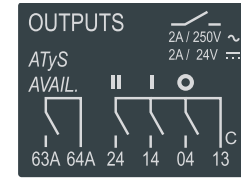

6.3.3.2. Position auxiliary contact

The ATYS is equipped with integrated position (I – O – II) auxiliary contact outputs through 3 off micro switches.

Pins 13, 04, 14, 24

(Normally Open contacts with pin 13 as common)

6.3.3.3. ATYS Product available output (motorisation)

Pin 63A – 64A

(Normally Open contact that is held closed when the motorisation is available).

This contact gives constant feedback about the product's availability and it's capacity to transfer from the main supply to the alternative.

The ATYS performs a self diagnostics test on the motorisation module at startup, when put from Manual -> Auto and then every 5 minutes. This test ensures that the ATYS is operational in terms of control inputs. Should one of the tests fail, a second test is performed to reconfirm the error state. Should the ATYS motorisation module become unavailable, contact 63A – 64A are opened and the fault LED is activated. The fault LED will remain active for as long as sufficient power is available and the fault condition is not reset.

The fault is reset when the product is switched from AUT -> Manual -> Auto mode.

ATYS (Motorisation) Product Available / Unavailable relay will open for any of the following reasons below: For added security, "Product Availability" is informative and does not necessarily inhibit motor operation.

Conditions that render the ATyS motorisation unavailable	Comments	Relay 63A-64A Open	Fault/ Manu LED ON
Fault - The motorisation is not detected	Auto detection is performed by the software every 5 minutes. (Checks that the motorisation is healthy)	X	X
Fault - Motor Auto-Test	Presence of an unusual current in the motor	X	X
Fault – Motorisation aux supply voltage is outside the acceptable ranges	An aux power supply voltage of less than 166Vac or above 332Vac will generate a non-available state.	X	X
Fault – Duty Cycle	The product has undergone >10 operations in <1minute. In this case the product will be unavailable for 1 minute after which it will automatically reset	X	X
Fault – INPUT 312 to 317 Auto test	The software will automatically & periodically test these inputs (every 5 mins) to ensure that they are functional.	X	X
Mech Fault - Position is not reached	Following an order to transfer, given by the ATyS, the expected position was not reached.	X	X
Fault - Selector AUTO / MANU	Selector AUTO/MANU is in MANU mode however the ATyS detects a motorised position change.	X	X
	Product has "locked mode" activated while the internal contact selector is in AUTO	X	X
INPUT 313-317 activation (FORCE to 0 position)	"Force to 0" validation by closing the 313-317 input. This is a Top Priority order making the product unavailable for as long as this contact remains closed.	X	X
The product is in « MANU » mode	Action done by the user with the mode selector switch.	X	X
Product loss the power	The ATyS is unavailable with loss of aux power and the contact will be open.	X	

6.3.3.4. Technical data (fixed outputs)

Auxiliary Contact Quantity	4
Configuration	Normally open
Mechanical Endurance	100k cycles
Response Time	5 – 10 ms
Startup duration	200ms
Rated Voltage / Switching Voltage	250VAC / 24VDC
Rated Current	2A
Surge protection Vin_sg:	4.8kV (1.2/50µs surge)
ESD withstand voltage (Contact/air):	2/4kV
Dielectric Strength contact/parts:	4.8kVAC (Reinforced Insulation)
Insulation:	4.8KVAC
Output Terminal (100-400A):	1.5mm ² minimum 2.5mm ² maximum ≈ 16-14AWG
Output Terminal (600-1200A):	0.5mm ² minimum 2.5mm ² maximum ≈ 20-14AWG
Tighten torque:	Min. 5lb-in, max. 7lb-in

7. CHARACTERISTICS

Characteristics

Characteristics according to UL 1008 (Optional standby)

General use rating (A)	100 A	200 A	260 A	400 A	600 A	800 A	1200 A
Frame size	B4		B5		B6	B7	
Operation voltage 2 P - 3/4 P	240/600	240/600	240/600	240/600	-/600	-/600	-/600
Short circuit rating at 600 VAC with fuses (kA)							
Short circuit rating at 600 VAC (kA)	100	100	100	100	100	100	100
Type of fuse	J	J	J	J	L	L	L
Short circuit rating at 600 VAC with "Specific Circuit Breaker" (kA)							
Square D JJ breaker 250 A - 2 P 240 VAC - 3/4 P 480 VAC	65	65	-	-	-	-	-
Schneider Electric NSX-F 160 A - 3/4 P 480 VAC	35	-	-	-	-	-	-
Short circuit rating at 600 VAC with "Any Breaker" (kA)							
Short circuit rating (kA)	10	10	14	14	35	35	35
Short circuit capacity (ms)	25	25	50	50	50	50	50
Rated operational current							
240 VAC "Total System" (A)	100	200	260	400	400	700	700
240 VAC resistive load (A)	100	200	260	400	600	800	1200
480 VAC "Total System" (A)	100	100	260	400	350	600	600
480 VAC resistive load (A)	100	200	260	400	600	800	1200
600 VAC "Total System" (A)	100	100	200	200	-	-	-
600 VAC resistive load (A)	100	200	260	400	600	800	1200
Mechanical endurance							
Endurance (number of operating cycles)	6050	6050	6050	4050	3050	3050	3050
Connection terminals							
Min. connection section / AWG	#6	#6	#4 / 2 X 1 / 0	#4 / 2 X 1 / 0	2 x #2	2 x #2	4 x #2
Max. connection section / AWG	300MCM	300MCM	600MCM / 2 X 250MCM	600MCM / 2 X 250MCM	2x 600MCM	2x 600MCM	4 x 600MCM
Power supply							
Supply voltage VAC 50/60 Hz	208-277 VAC						
Switching time							
I to II or II to I (s)	1.3				3.2		
I to 0 or 0 to II (s)	0.85				1.8		
Duration of electrical blackout (s)	0.6				1.6		

8. PREVENTIVE MAINTENANCE

It is recommended to verify the tightening torque of all connections and to operate the product in a full operating cycle (I – 0 – II – 0 – I: Auto Remote and Manual) at least once a year.

Note: Maintenance should be planned carefully and carried out by qualified and authorised personnel. Consideration of the critical level and application where the product is installed should form an essential and integral part of the maintenance plan. Good engineering practice is imperative whilst all necessary precautions must be taken to ensure that the intervention (whether directly or indirectly) remains safe in all aspects.

9. TROUBLE SHOOTING GUIDE

The ATYS does not operate electrically	• Verify the power supply on terminals 301-302: 208 - 277 VAC • Verify that the front selector switch is in position (AUT) • Verify that contacts 313 and 317 are open. • Verify that contacts 317 and 312 are closed. • Verify that the power LED (Green) is On whilst the fault LED (RED) is off. • Verify that the product is available with contacts 63A and 64A closed.
It is not possible to manually operate the switch	• Verify that the front selector switch position is on the Manual position. • Make sure that the product is not padlocked • Verify the rotation direction of the handle • With the emergency handle in the shaft location provided, apply a sufficient progressive action in the direction as indicated on the handle.
Electrical operation does not correspond to external order I,Q,II	• Verify the selected control logic wiring (impulse or contactor) • Verify the connector connections.
The fault/manual LED is ON	• The FAULT / MANUAL LED is on when in manual mode (this is normal) and in AUT Mode when there is an internal fault in the ATYS. To reset a fault condition switch the ATYS from AUT to Manu and back to AUT. Should the fault LED remain on you will need to localize and clear the fault prior to reset. • The FAULT / Manual LED will also be on when contact 313 is closed with 317. (Force the ATYS to off position). This is a normal condition. • Should the Fault LED remain on abnormally, contact SOCOMEC.
Impossible to padlock	• Verify that the front selector switch is in manual position • Verify that the emergency handle for manual operation is not inserted into the ATYS manual shaft location. • Verify that the ATYS is in 0 position.

10. THE ATYS FAMILY

The ATYS has been engineered by the SOCOMEC centre of excellence in France that boasts its very own in-house 100MVA instantaneous power test lab accredited by COFRAC and working in partnership with: KEMA, CEPEC, UL, CSA, ASTA, Lloyd's Register of Shipping, Bureau Veritas, BBJ-SEP, EZU, GOST-R... and others.

SOCOMEC has been manufacturing power control and safety products since 1922. The first generation SOCOMEC "transfer switches" were introduced in 1990 and today the ATYS brand has become trusted by major players in the power industry worldwide.


The ATYS Family includes a complete range of open transition remotely operated transfer switch equipment as well as automatic fully integrated products and solutions. Selecting the right ATYS will depend on the application as well as the nature of installation in which the ATYS will be installed.

This instruction manual includes details and instructions specific to the "ATYS" UL 1008 transfer switch only. For all other ATYS family of products (IEC range) please refer to the specific instruction manual related to that product. (Available for download on www.socomec.com)

An overview of the complete ATYS range is presented below:

(The encircled device is the product detailed in this instruction manual).

Just the right ATYS for your application...

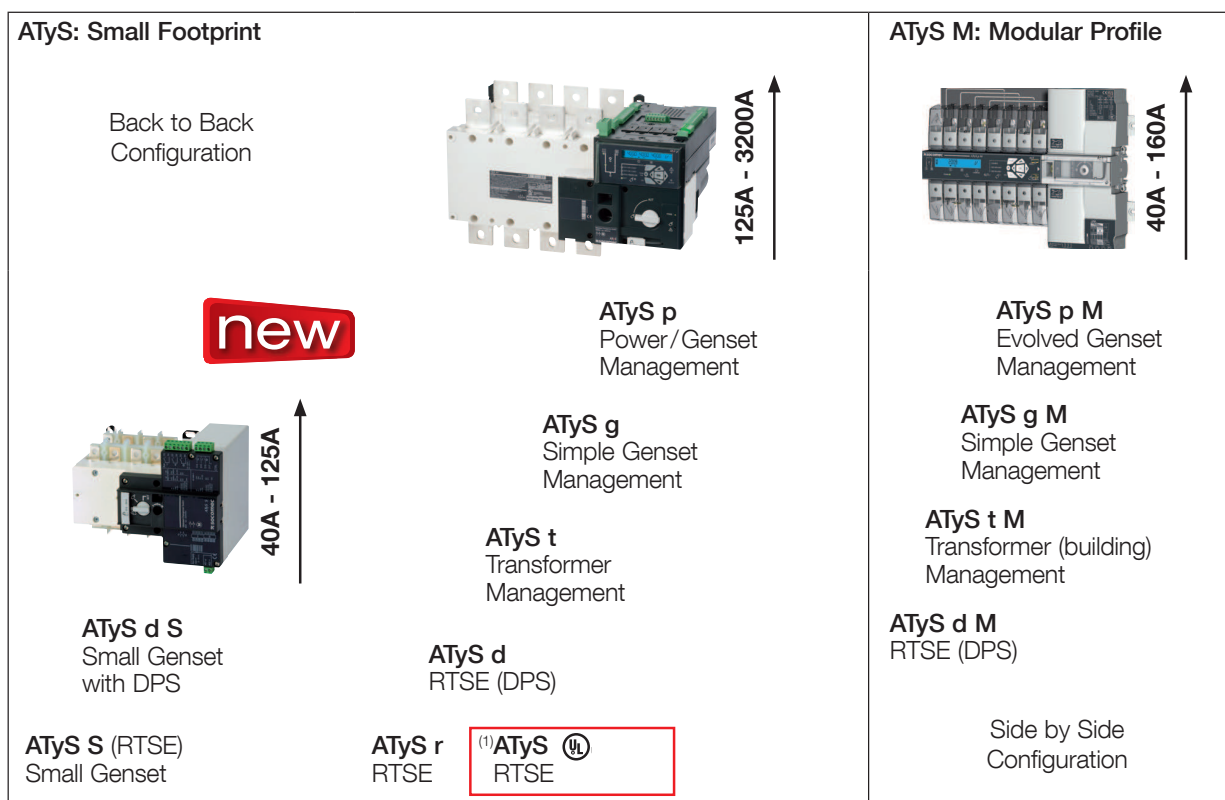

⁽¹⁾ The UL version of ATyS r is available from 100 - 1200A

10.1. The ATYS Range Key Features

Selecting the right ATYS will depend on the application, the functionality required as well as the nature of the installation in which the ATYS will be installed. Below is an outline product selection chart listing the key features of each product to help to select the right ATYS for your needs.

IEC 60947-6-1	ATyS <i>S</i>	ATyS <i>Sd</i>	ATyS <i>r</i>	ATyS <i>d</i>	ATyS <i>t</i>	ATyS <i>g</i>	ATyS <i>p</i>
UL 1008			ATyS 				
Motorised Changeover with control driven by dry contacts	•	•	•	•	•	•	•
Manual Emergency Operation with external handle	•	•	•	•	•	•	•
Wide band AC control voltage supply	•	•	•	•	•	•	•
Wide band DC control voltage supply	•						
Watchdog relay to ensure product availability			•	•	•	•	•
Ratings from 40 – 125A as indicated or 125A - 3200A for •	40 – 125A	40 – 125A	UL 100-1200A	•	•	•	•
Override controls and force switch to zero (off) position			•	•	•	•	•
Integrated position auxiliary contacts (I - O - II)	•	•	•	•	•	•	•
Source availability LED display				•	•	•	•
Remote Display module RJ45 connection for ATYS D10				•	•	•	
Integrated Dual power supply		•		•	•	•	•
Network - Network Applications	•	•	•	•	•		•
Network - Genset Applications	•	•	•	•		•	•
Genset - Genset Applications	•	•	•	•			
Pre-defined fixed I/O			• 5/1	• 5/1	• 9/2	• 11/3	• 5/2
Programmable I/O							• 6/1
Additional programmable I/O modules (Optional up to 4 modules)							• 8/8
Remotely operated Transfer Switching Equipment IEC (RTSE Class PC)	•	•	•	•			
Automatic Transfer Switching Equipment (ATSE Class PC) IEC					•	•	•
Remote + Manual Control	•	•	•	•			
Auto + Remote + Manual Control					•	•	
Auto + Remote + Local + Manual Control							•
Auto-configuration of voltage and frequency levels					•	•	•
Switch Position LED display					•	•	•
Security Sealing Cover					•	•	
Configuration through potentiometers and dip switches					•	•	
Test on load functionality						•	•
Test off load functionality						•	•
Programmable configuration with keypad and LCD display							•
Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh							•
Communication RS485 + Ethernet + Ethernet gateway (Optional)							•
Webserver Access through optional Ethernet module (Optional)							•
Easy Configuration software (Through Ethernet/Modbus)							•
Remote Terminal Unit RJ45 connection for ATYS D20							•
Data Logger for Event Recording with RTC (Through Ethernet/Modbus)							•
Programmable Engine Exerciser functionality (Through Ethernet/Modbus)							•
Multi level password access							•
Load Shedding function							•
Capacity Management functionality							•
Peak shaving functionality							•
4 - 20mA communication module (Optional)							•
KWh Pulsed output module (Optional)							•
Counters KWh, permutation...							•
LCD display for programming, metering, timers and counters							•
Possibility to add optional functionality							•

11. ATYS Family: ORDERING INFORMATION

The following is an ordering guide for ATYS Motorised Transfer Switches delivered inclusive of the emergency handle and storage clip. This guide is intended so as to explain the logic behind SOCOMEC ATYS reference numbers.

When ordering please consult the latest SOCOMEC catalogue.

Typical UL 1008 (Optional Standby Power) ATYS reference



97 2 3 4 0 1 0

Product	Type	Ctrl Voltage	N° of poles	Rating
97 - UL : I - O - II	2 - ATYS	3 - 230VAC (208-277VAC Nominal)	2-2 Pole 3-3 Pole 4-4 Pole	010 - 100A 020 - 200A 026 - 260A 040 - 400A 060 - 600A 080 - 800A 120 - 1200A

Note: only valid for UL 1008 products

Typical IEC 60947-6-1 ATYS reference



95 2 3 4 063

Product	Type	Ctrl Voltage	N° of poles	Rating
95 - IEC: I - O - II	2 - ATyS r 3 - ATyS d 4 - ATyS t 5 - ATyS g 7 - ATyS p	3 - 230VAC (166-332VAC)	3-3 Pole 4-4 Pole	012 - 125A 016 - 160A 020 - 200A 025 - 250A 031 - 315A 040 - 400A 050 - 500A 053 - 630A 080 - 800A 100 - 1000A 120 - 1250A 180 - 1600A 200 - 2000A 250 - 2500A 320 - 3200A Ratings lth @ 40 °C

Note: only valid for IEC 60947-6-1 products

CORPORATE HQ CONTACT:
SOCOMEC SAS
1-4 RUE DE WESTHOUSE
67235 BENFELD, FRANCE

www.socomec.com

