



TF sensors

Flexible TF current sensors

used with DIRIS Digiware, DIRIS A-40 and DIRIS B



TF Flexible current sensors

diris-t_077.eps

Function

TF flexible current sensors measure the load currents of an electrical circuit and send the data to the meters and Power Monitoring Devices or current modules via an RJ12 plug-and-play connection. With a wide measurement range, TF current sensors cover a broad current range from 150 to 6000 A, with only 5 references. TF flexible current sensors can be used with DIRIS Digiware I modules, DIRIS A-40 and DIRIS B.

Advantages

Plug & Play

- A rapid RJ12 connection makes wiring easy and reliable and prevents wiring errors. This also allows automatic detection of the sensor type and rating.
- The sensors can be installed in both directions.

Accuracy according to IEC 61557-12

- Class 0.5 for the global measuring chain (PMD + TF current sensors) from 2 to 120% of the nominal current I_n .
- Accuracy is guaranteed regardless of the position of the conductor in the loop.

Safe locking mechanism

- The locking system prevents the loop from opening, guaranteeing continuous functioning and accuracy even under harsh conditions.

Ideal solution for retrofit applications

- The TF flexible sensor range is specially designed for existing installations with strict integration constraints or with high-intensity currents.

Simplified installation

- The Rogowski integrator is built into the RJ12 cable enabling a quick and compact integration (no DIN rail assembly required) inside electrical panels.
- The integrator is self supplied by the PMD through the RJ12 cable and does not need any external power supply.

The solution for

- Industry
- Building
- Infrastructure
- Data centers



Strong points

- Plug & Play
- Accuracy according to IEC 61557-12
- Ideal solution for retrofit applications
- Simplified installation

Integrated technologies



For more information see our website
www.socomec.us

Compliance with standards

- UL 61010-1, CSA-C22.2 No 61010-1, Guide PICQ, IEC 61557-12
- IEC 61557-12
- ISO 14025



Create your project

- Find the best DIRIS Digiware configuration: www.meter-selector.com



Installation


Cable mounting



Bar mounting



Dimensions (in / mm)

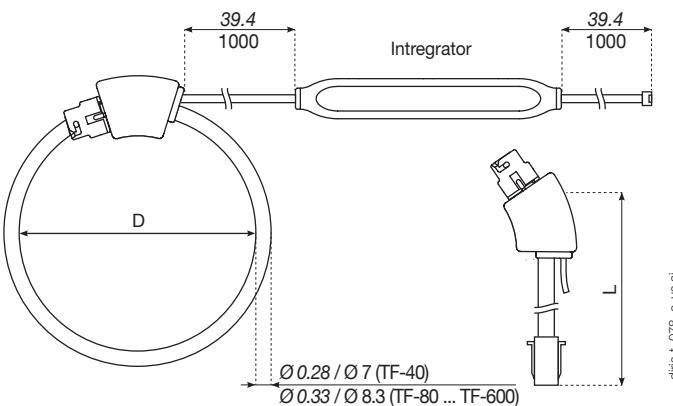

diris-t_078_c_us.ai

Model	Nominal current range (A)	Real range covered (A)	D = Ø loop (in/mm)	L = Loop length (in/mm)
TF-55	150 ... 600	3 ... 720	2.16 / 55	6.81 / 173
TF-80	150 ... 600	3 ... 720	3.15 / 80	2.88 / 251
TF-120	400 ... 2000	8 ... 2400	4.72 / 120	14.84 / 377
TF-200	600 ... 4000	12 ... 4800	7.87 / 200	24.72 / 628
TF-300	1600 ... 6000	32 ... 7200	11.81 / 300	37.09 / 942
TF-600	1600 ... 6000	32 ... 7200	23.62 / 600	74.21 / 1885

Integrator dimensions (in / mm): 5.04 x 0.75 x 0.59 / 128 x 19 x 15

Technical characteristics

Model	TF-55	TF-80	TF-120	TF-200	TF-300	TF-600
Nominal current range I_n (A)	150 ... 600	150 ... 600	400 ... 2000	600 ... 4000	1600 ... 6000	1600 ... 6000
Actual range covered (A)	3 ... 720	3 ... 720	8 ... 2400	12 ... 4800	32 ... 7200	32 ... 7200
Weight (oz/g)	4/114	4.85/130	5/142	5.78/164	6.81/193	9.67/274
Max. voltage (phase/neutral)				600 V		
Rated withstand voltage				3.6 kV		
Accuracy class				Class 0.5 in association with DIRIS Digiware I, DIRIS A-40, DIRIS B		
Frequency				50 / 60 Hz		
Intermittent overload				10 x I_n for 1 s		
Measurement category				CAT III		
Protection degree				IP30 / IK07		
Operating temperature				+ 14°F ... + 158°F / -10°C to +70°C		
Storage temperature				- 13°F ... +185°F / -25°C to +85°C		
Relative humidity				95% RH non-condensing		
Altitude				< 2000 m		
Connection				SOCOMECH RJ12 cable, straight, twisted pair, unshielded, 600 V, + 14°F ... + 158°F / - 10°C ... + 70°C		

References

Model	Nominal current range (A)	Real range covered (A)	D = Ø loop (mm)	L = Loop length (mm)	Reference
TF-55	150 ... 600	3 ... 720	55	173	4829 0570
TF-80	150 ... 600	3 ... 720	80	251	4829 0574
TF-120	400 ... 2000	8 ... 2400	120	377	4829 0575
TF-200	600 ... 4000	12 ... 4800	200	628	4829 0576
TF-300	1600 ... 6000	32 ... 7200	300	942	4829 0577
TF-600	1600 ... 6000	32 ... 7200	600	1885	4829 0578

Accessories

Female/female connector for extension of the RJ12 connection between PMD and TF sensor.

Reference

4829 0670

RJ12 connection cables	Cable length (ft/m)									
	0.32/0.1	0.64/0.2	0.96/0.3	1.64/0.5	3.3/1	6.5/2	9.84/3	16.4/5	32.8/10	164 / 50 reel + 100 connectors
Number of cables	Reference	Reference	Reference	Reference	Reference	Reference	Reference	Reference	Reference	Reference
1	-	-	-	-	-	-	-	4829 0602	4829 0603	4829 0601
3	4829 0580	4829 0581	4829 0582	4829 0595	4829 0583	4829 0584	4829 0606	-	-	-
4	-	-	-	4829 0596	4829 0588	4829 0589	-	-	-	-
6	4829 0590	4829 0591	4829 0592	4829 0597	4829 0593	4829 0594	-	-	-	-